



# Gigabyte P34G Battery Replacement

This guide will teach you how to open up the P34G and replace the battery.

Written By: yeunghayden



## INTRODUCTION


The battery supplies power to the laptop, so it is essential for the battery to be in good condition for optimal performance.

Make sure you are grounded before starting. To ground yourself, simply touch a metal object that is in contact with the floor for a few seconds.

## TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — Battery

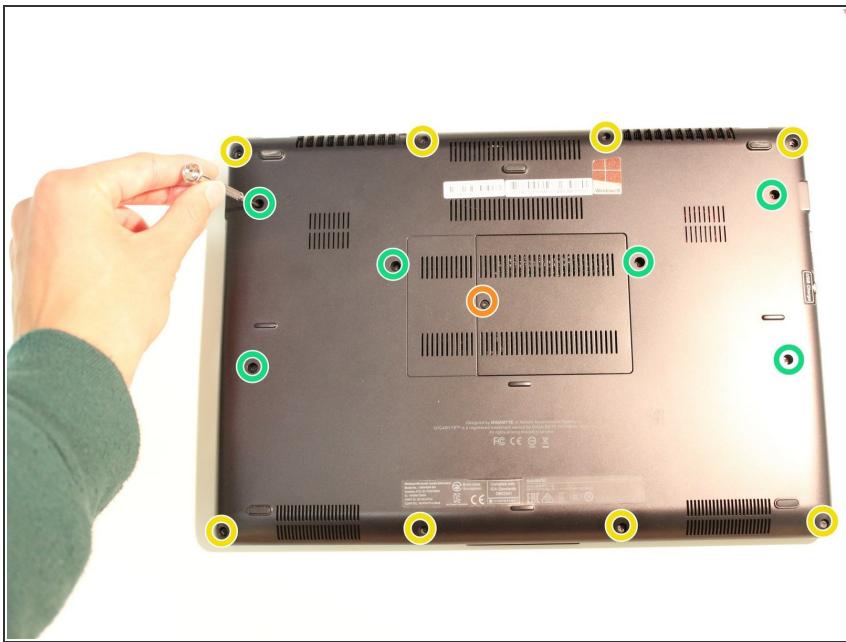

- Remove all 15 marked screws on the underside of the laptop using a #0 screwdriver.

**i** There are three different sized screws.

- x1 9.8mm Screw
- x8 5.6mm Screws
- x6 5.0mm Screws

**►** Divide the screws by size and save them in a safe space for reassembly later.

## Step 2



- Unscrew the 4 marked 4.5mm screws using a #0 screwdriver.

**►** Save the screws in a safe place for reassembly later.

## Step 3



- Pull the wires down towards yourself to disconnect the attached connector.

## Step 4



- Carefully lift the battery for removal.

To reassemble your device, follow these instructions in reverse order.