




GoPro Hero+ LCD Back Panel Disassembly

This guide will show you how to remove the rear touchscreen in order to access the internal components for repairs.

Written By: Matthew Tinkey

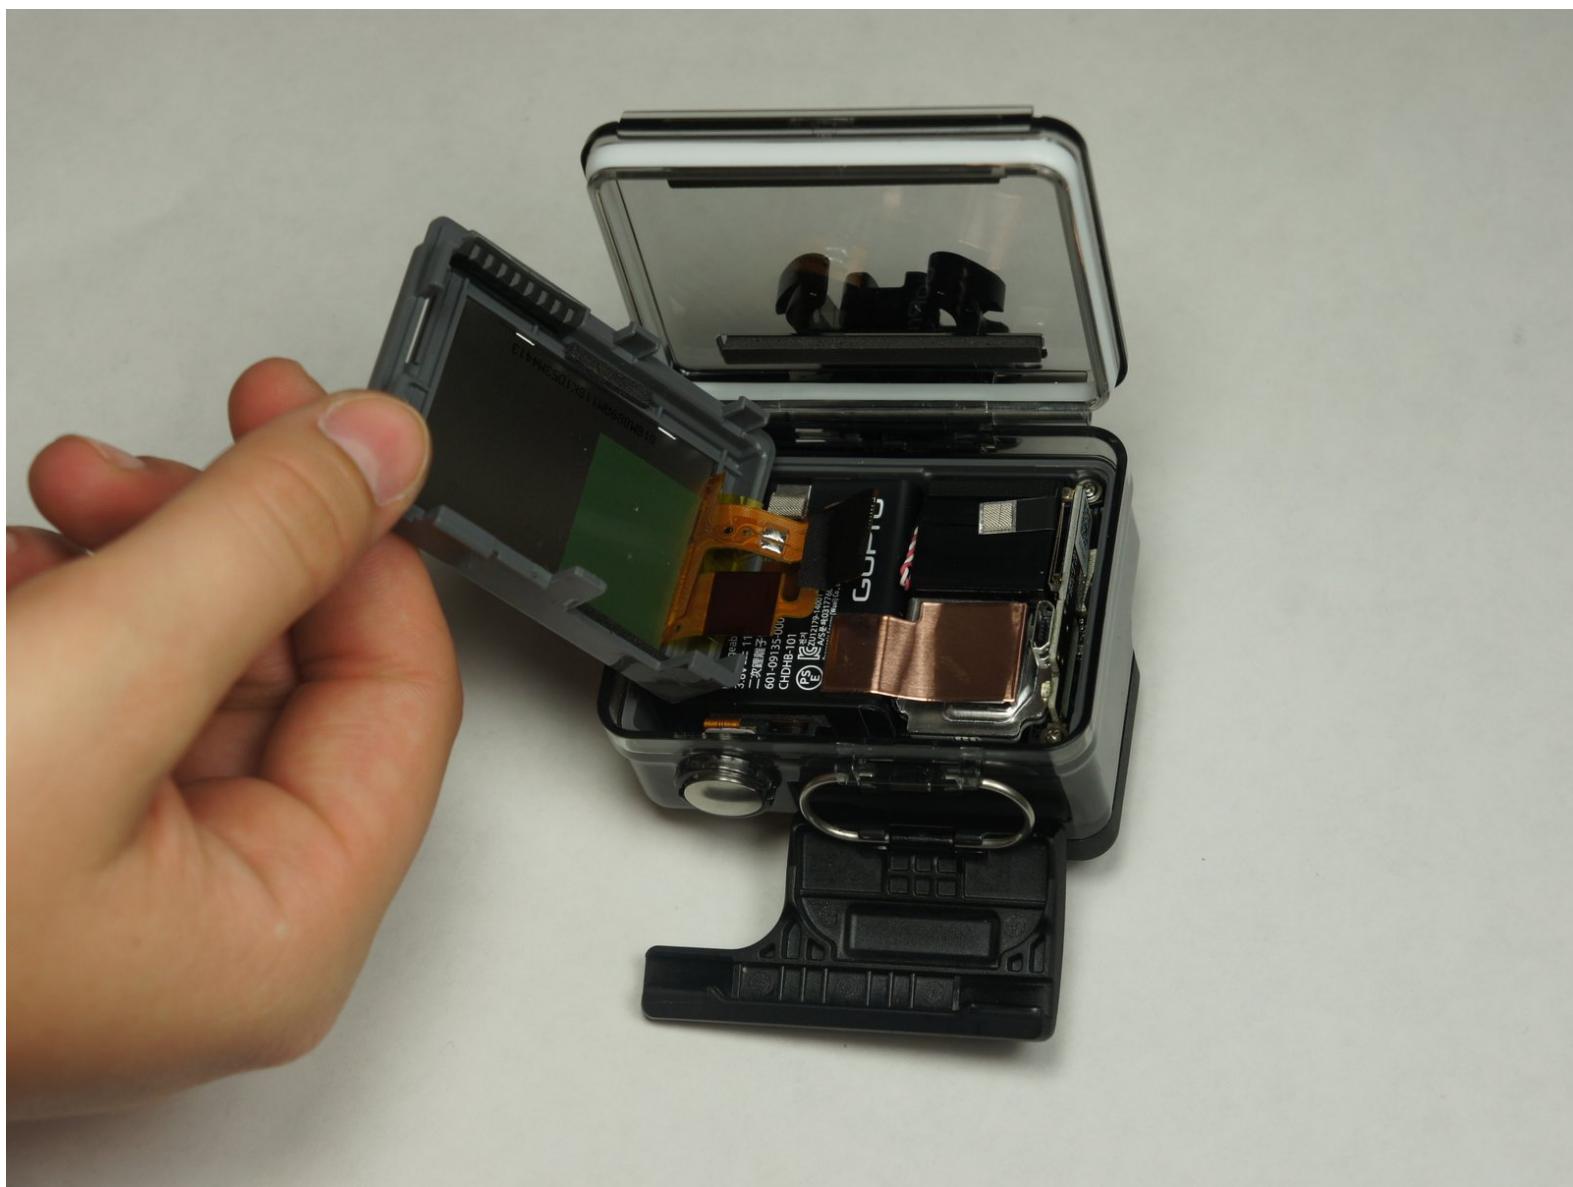

INTRODUCTION

If you have tried troubleshooting your camera and concluded the reason is because of a dysfunctional component inside the camera, then use this guide to take your first step towards repairing your device!

TOOLS:

- Metal Spudger Set (1)



Step 1 — Back Panel



⚠ Be sure to power off the GoPro before you start disassembly.


- Pop up and pull back on the clip to remove the screen cover and expose the back panel with the touchscreen.

Step 2

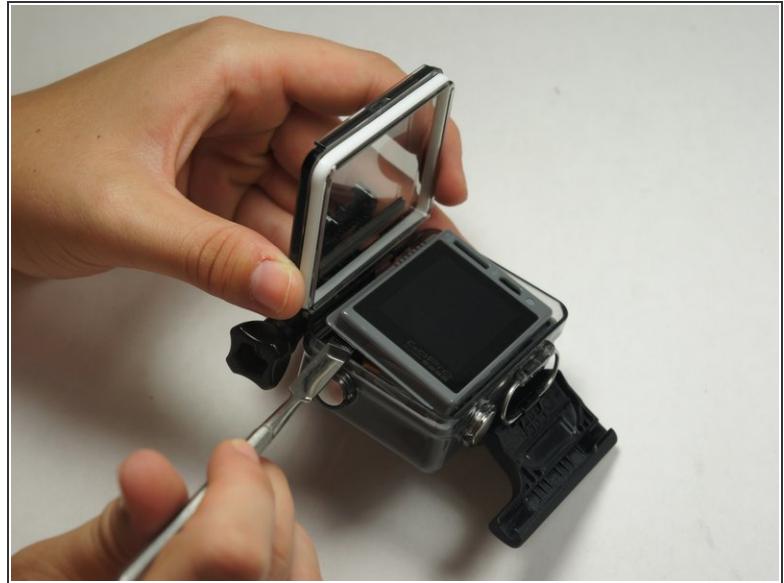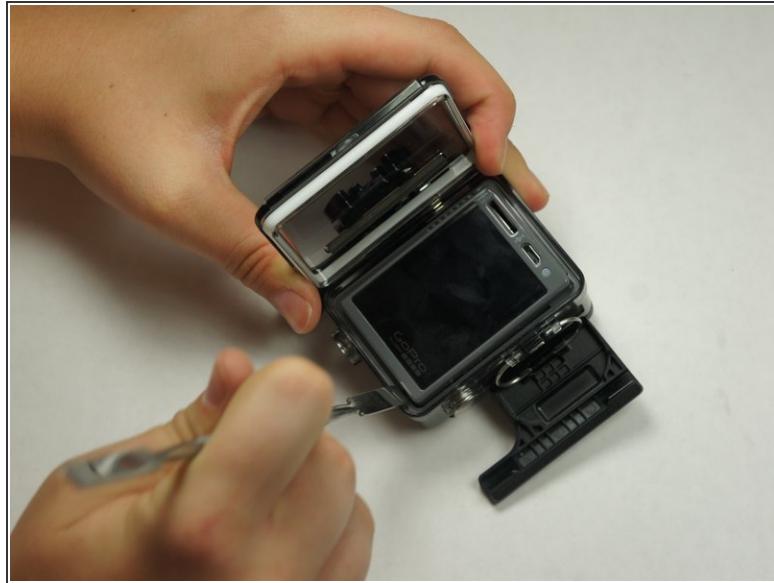

- Use the metal spudger to pry around the perimeter of the panel.
- Pry the panel upwards by inserting the metal spudger into the corner crease between the panel and camera shell.

Step 3

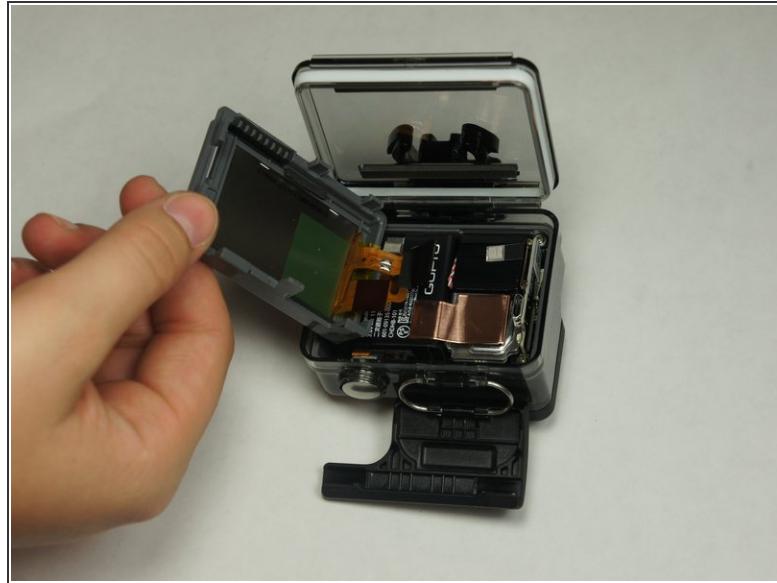

- Pry around the panel to ensure it is not attached to the device.
- Move the panel to the side so you can access the internal components.

⚠ The panel is still attached to the rest of the device with a ribbon cable, so be sure to not tear or damage the cable.

To reassemble your device, follow these instructions in reverse order.