


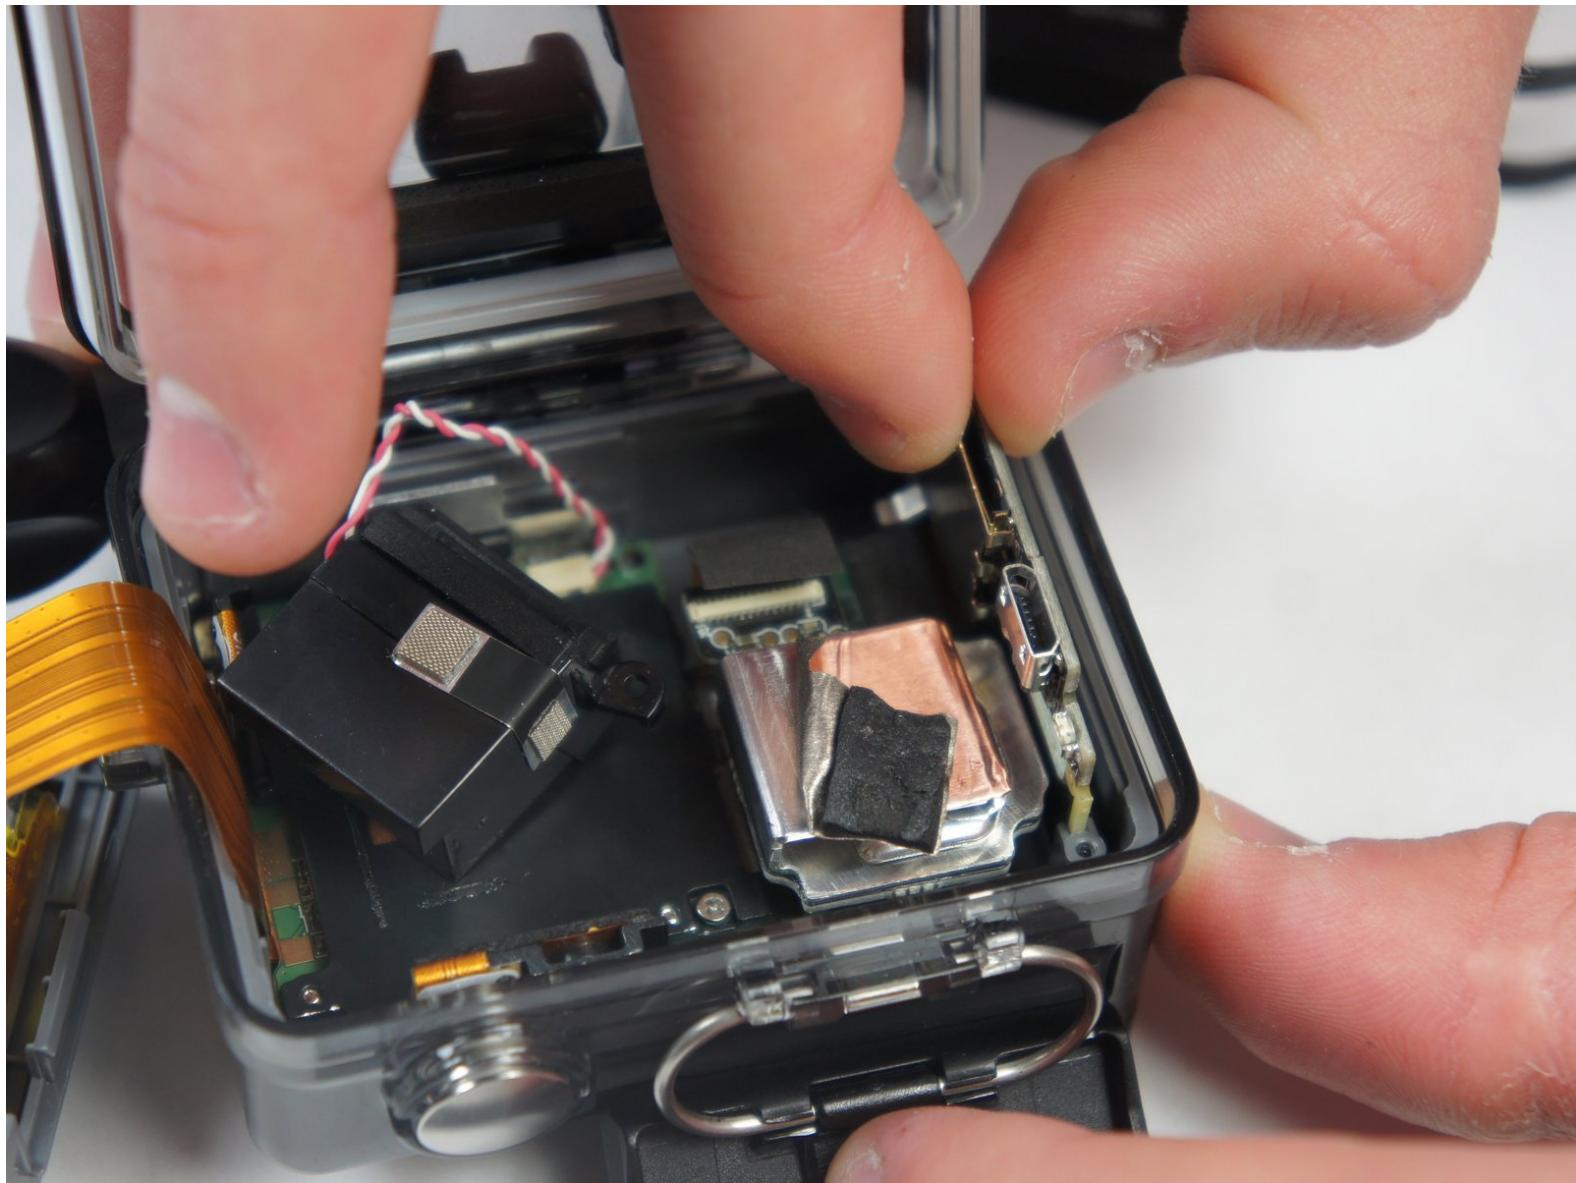

# GoPro Hero+ LCD MicroSD/Micro USB Port Assembly Replacement

This guide will show you how to remove the USB/SD Port on the GoPro Hero+ LCD.

Written By: Shariyf Mitchell



## INTRODUCTION

Use this guide to replace the microSD/Micro USB port assembly in your GoPro Hero+ LCD.

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Metal Spudger Set](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

### PARTS:

- [GoPro Hero+ LCD Charging Assembly](#) (1)


## Step 1 — Back Panel



⚠ Be sure to power off the GoPro before you start disassembly.


- Pop up and pull back on the clip to remove the screen cover and expose the back panel with the touchscreen.

## Step 2

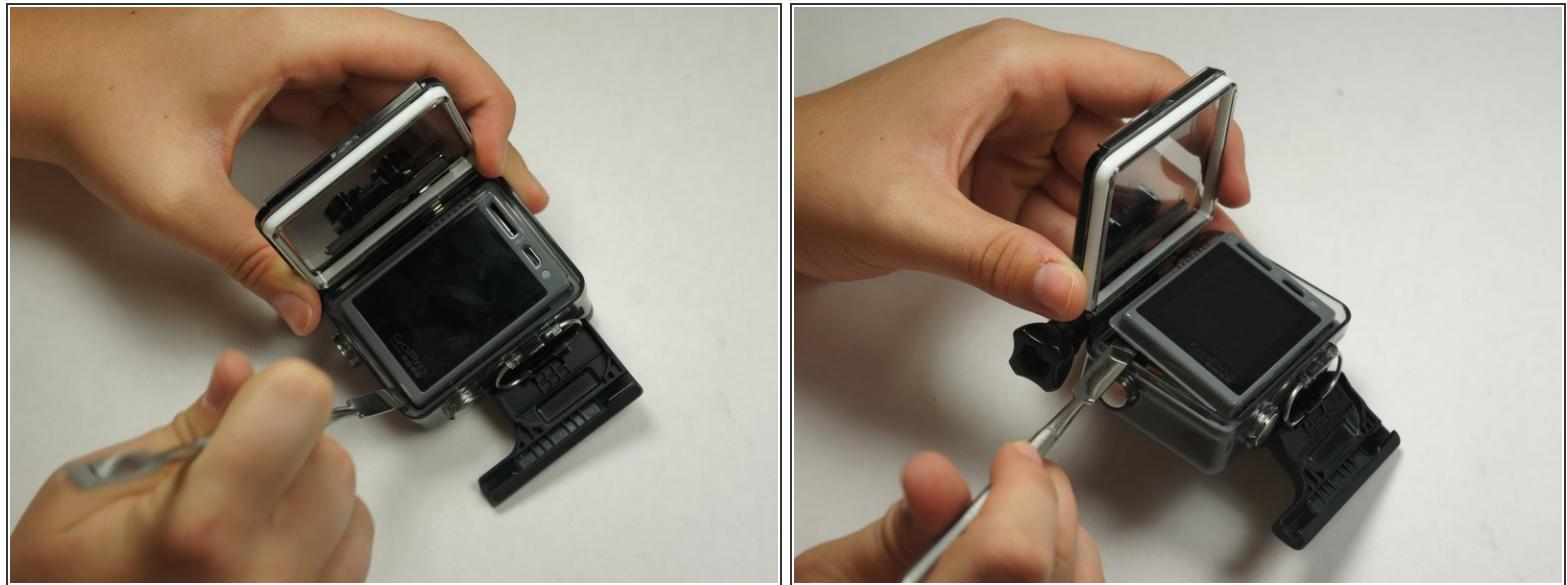

- Use the metal spudger to pry around the perimeter of the panel.
- Pry the panel upwards by inserting the metal spudger into the corner crease between the panel and camera shell.

## Step 3

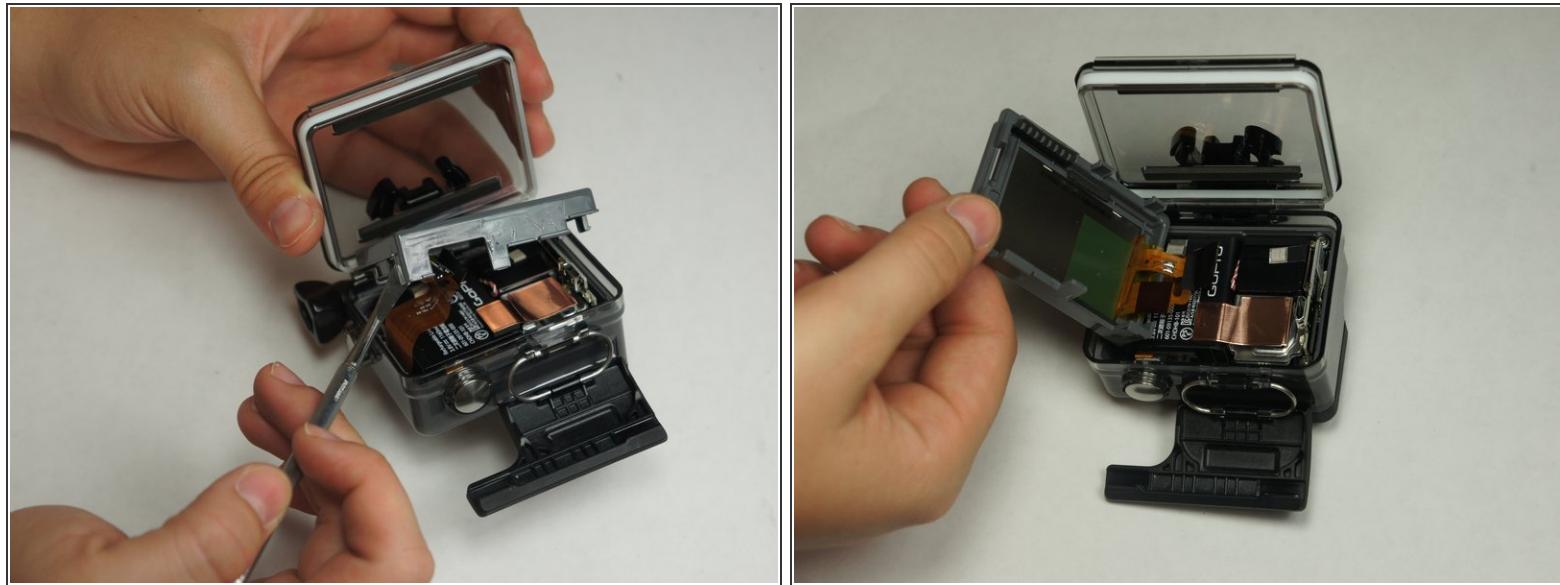

- Pry around the panel to ensure it is not attached to the device.
- Move the panel to the side so you can access the internal components.

**⚠** The panel is still attached to the rest of the device with a ribbon cable, so be sure to not tear or damage the cable.


## Step 4 — Battery



- Peel back the rear panel ribbon cable that is adhered to the battery until it is completely separated from the battery.

**⚠** Be careful of metal contacts on strip; they can be sharp.

## Step 5

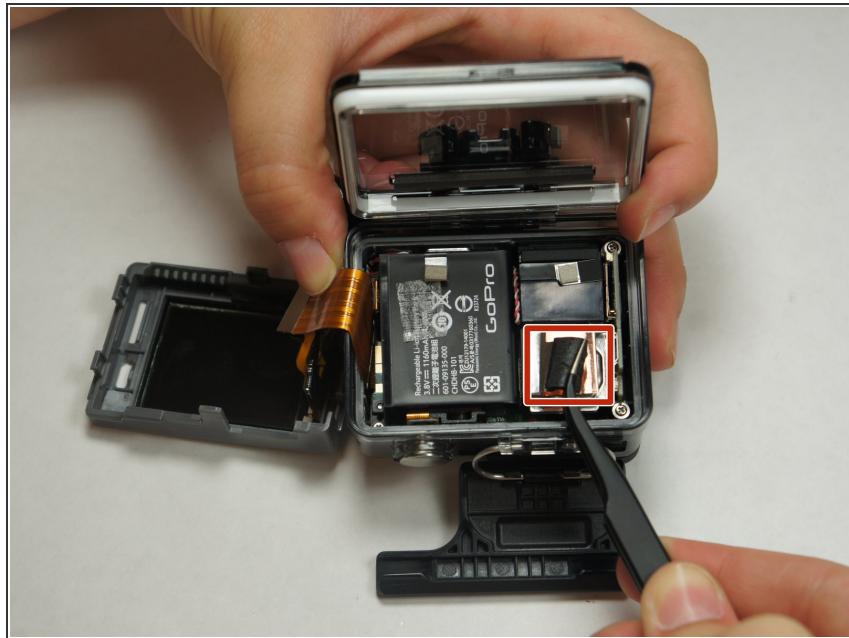


- Using tweezers, peel off the copper tape on the right side of the battery.

## Step 6



- Place the plastic opening tool at one of the edges of the battery then pry until the battery is removed from the GoPro.

## Step 7

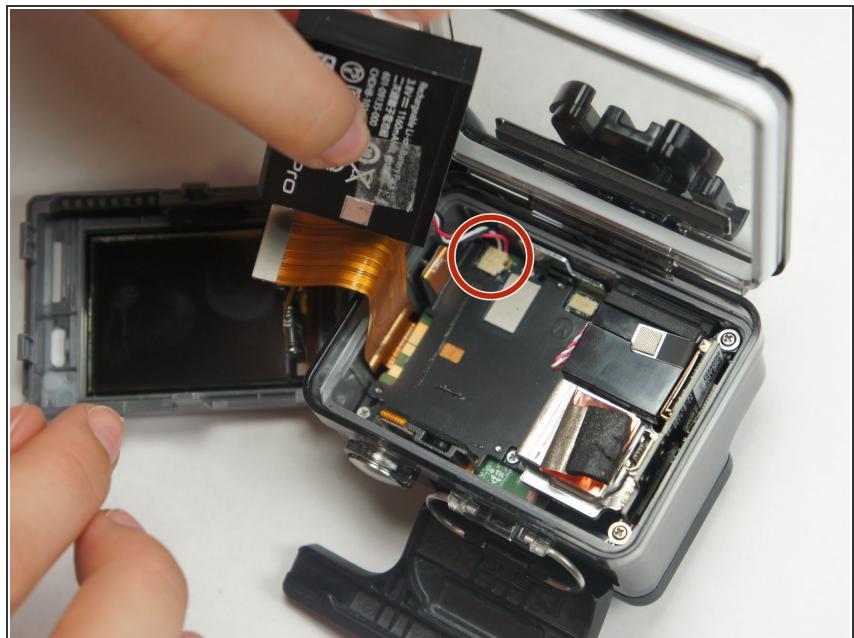


- Use a pair of tweezers to disconnect the battery connector from the motherboard.
- Gently pull the battery off the motherboard. Pulling vertically off the motherboard will give a clean release.

## Step 8 — MicroSD/Micro USB Port Assembly




- Remove the two 6 mm Phillips #00 screws.
- Remove the single 4 mm Phillips #000 screws.

## Step 9

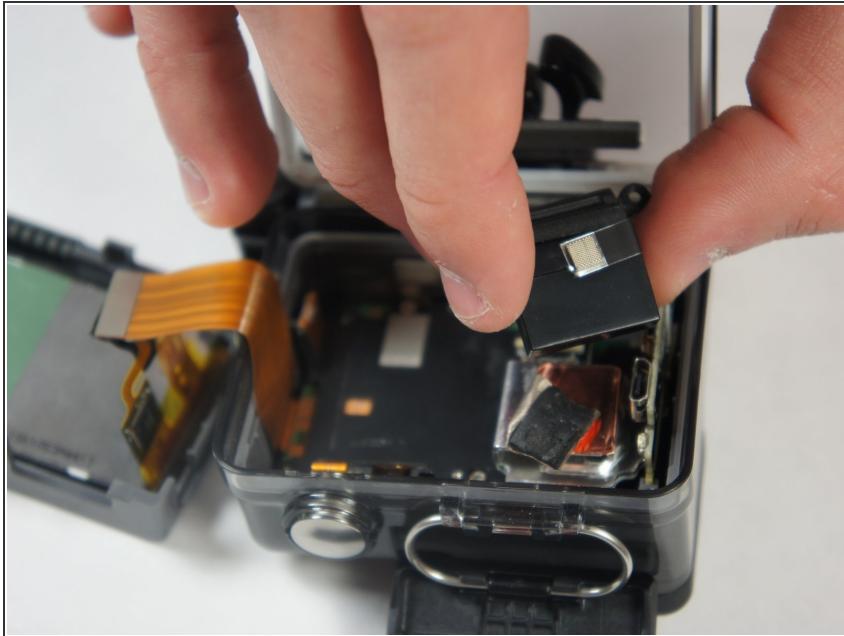


- Remove the image sensor from the camera.
- *(i)* You do not have to unplug the black box to remove the USB/SD chip.

## Step 10

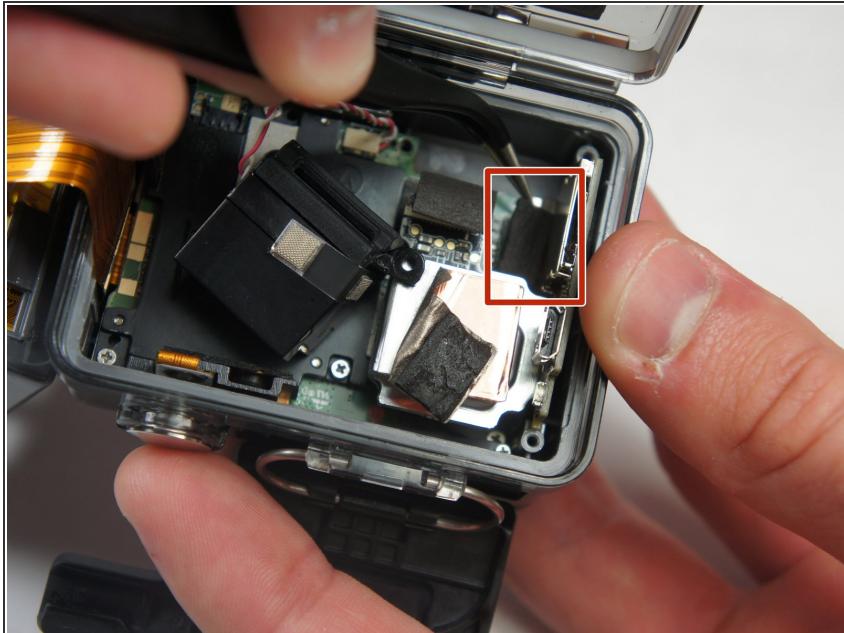

- Grab the edge of the ribbon cable with the tweezers and gently pull until the cable is disconnected from the motherboard.
- **⚠** Be careful when removing the ribbon cable. You must pull gently or you can rip the ribbon off of its contacts.

## Step 11

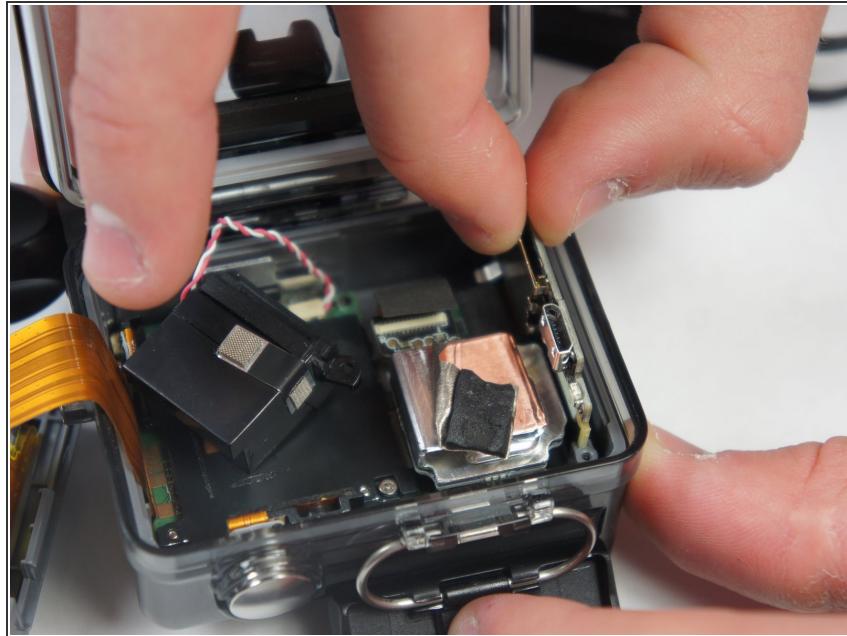

- Gently lift the microSD/Micro USB assembly up and out of the device.

To reassemble your device, follow these instructions in reverse order.