


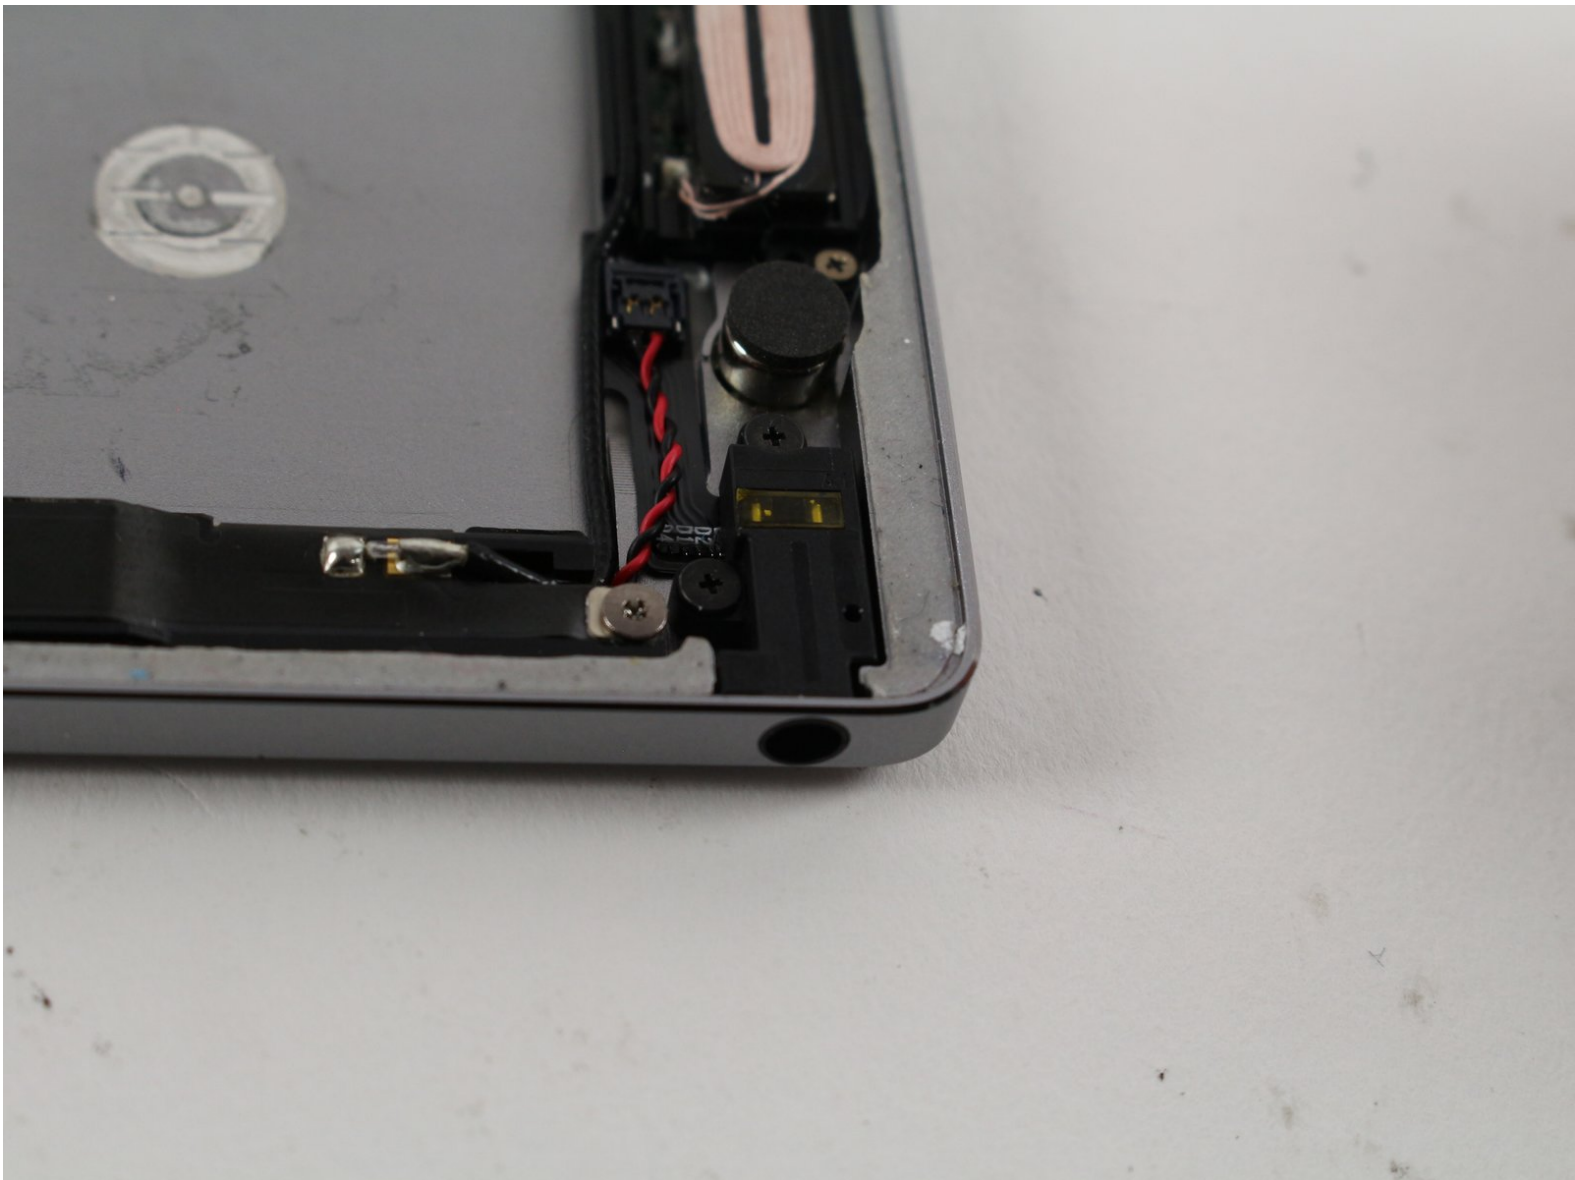

Google Pixel C Headphone Jack Replacement

The guide outlines the steps to remove the headphone jack from a Google Pixel C tablet.

Written By: Deborah Iwakiri



INTRODUCTION

This guide will give step by step instructions to removing the headphone jack from a Google Pixel C tablet.



TOOLS:


- [Heat Gun](#) (1)
 - [Metal Spudger Set](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Heavy-Duty Spudger](#) (1)
 - [Heavy-Duty Suction Cups \(Pair\)](#) (1)
 - [Phillips PH000 Screwdriver](#) (1)
-



Step 1 — Screen




- ⓘ Ensure that the device is completely powered down before beginning to take it apart
- Use a heat gun to melt the adhesive that holds the screen to the device
- Move the heat gun around the edge of the screen for approximately 1 minute, or until the screen can be lifted off in the next step.
- ⚠ Make sure not to heat the screen for too long because too much can damage other components inside the tablet.

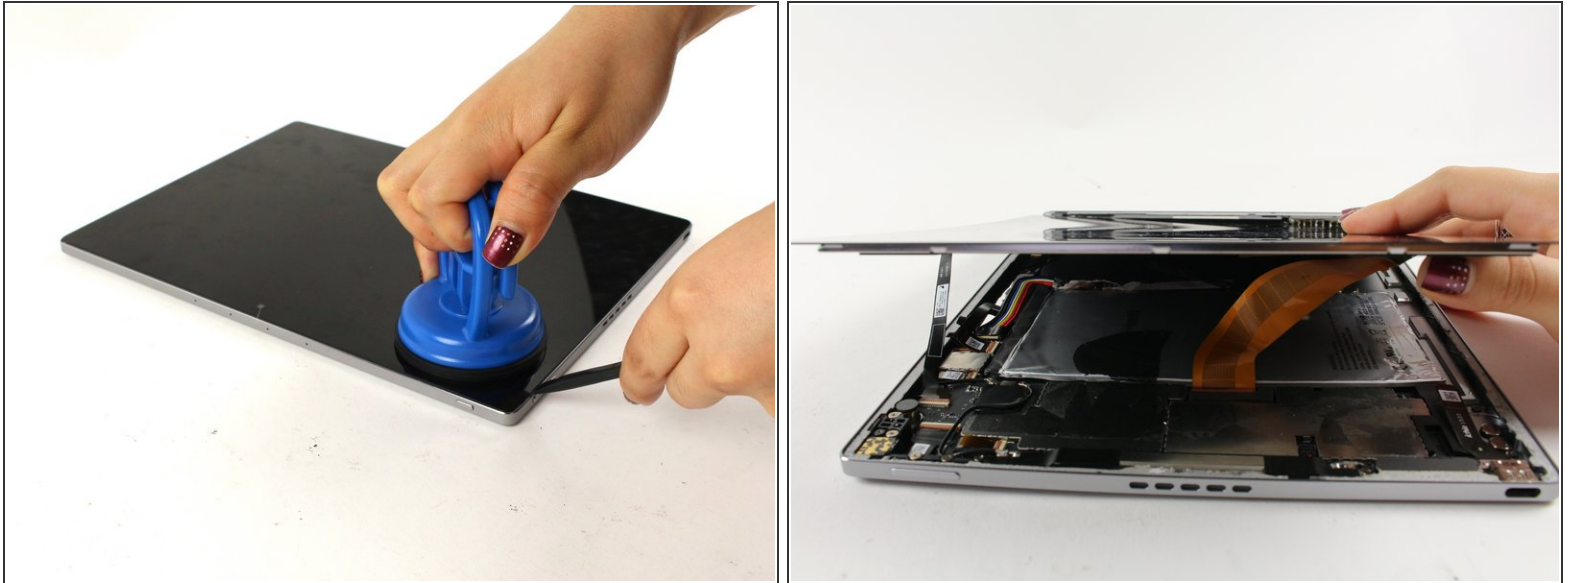Step 2



- Use a suction cup to assist in lifting the screen while prying around its edges with a plastic spudger.
 - If necessary use a metal spudger to pry the screen up, taking care not to scratch the device.
-  Be careful not to pull the screen too far off. It will still be attached to the device by a cable for the front facing camera and the wide display data cable.
-  Reattaching the screen will require adhesive to ensure that it stays in place.

Step 3

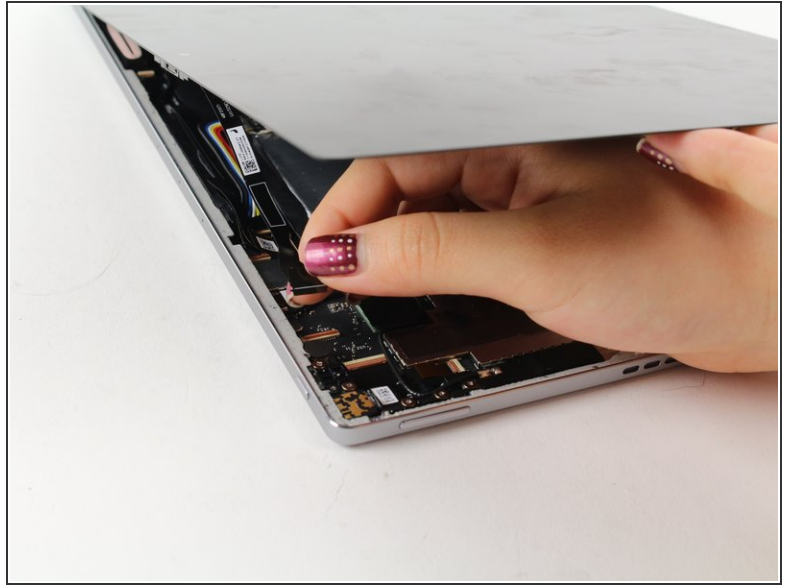

- Detach the cables for the camera by lifting the small flap using the tip of your fingernail or a spudger. Gently pull the ribbon cable out.

Step 4





- Follow the same removal procedure to detach the wide gold cable.
- ✦ When reattaching cables, it is helpful to use tweezers to slide the cable in before securing it down with the flap.
- ⓘ This device is missing a battery, so the device that you are working on may appear slightly different inside.

Step 5 — Headphone Jack




- Orient the device so that the headphone jack is in the bottom right corner.

Step 6

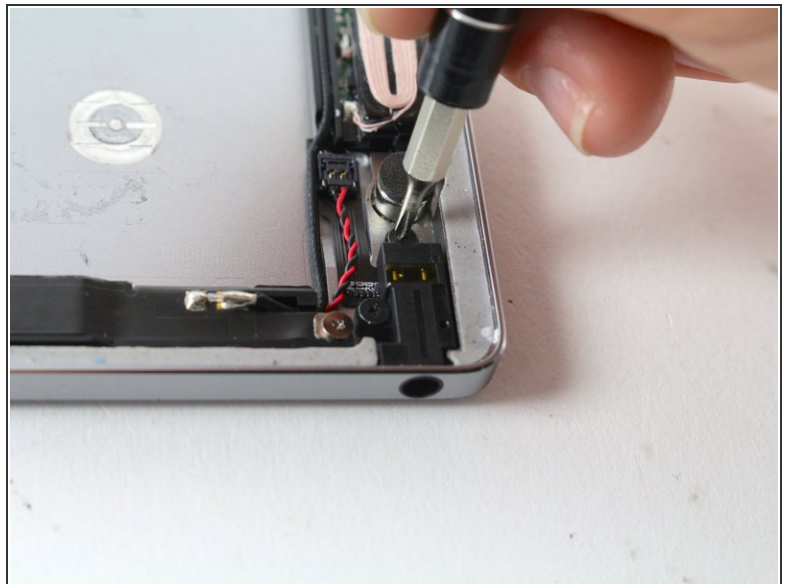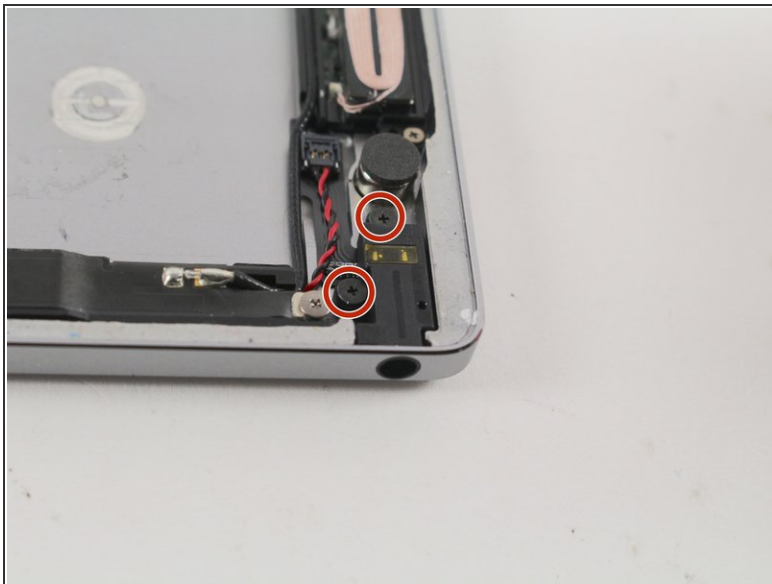



- Remove the two 3.5mm Phillips #000 screws.

Step 7

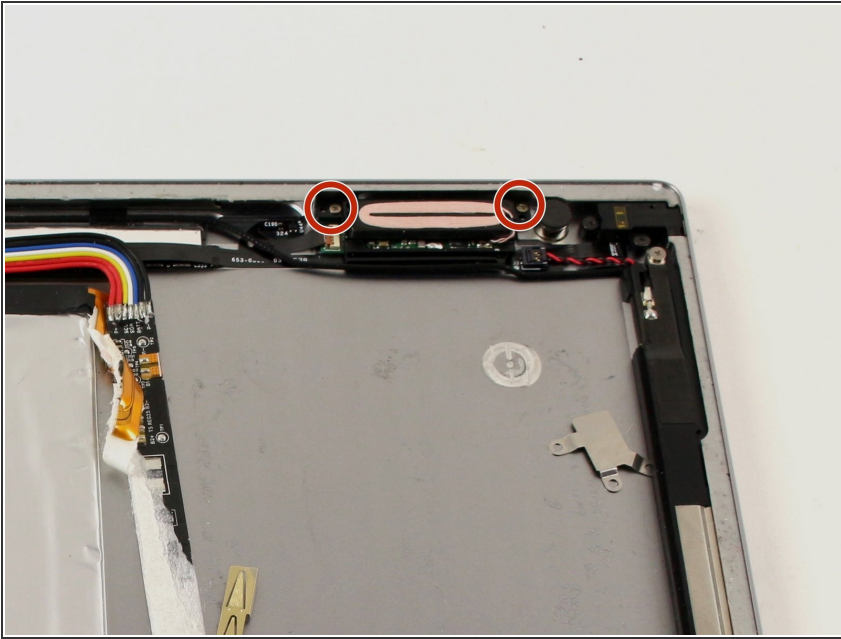


- Locate and remove the two 2.5mm Phillips #000 screws on either side of the wire coil.

Step 8

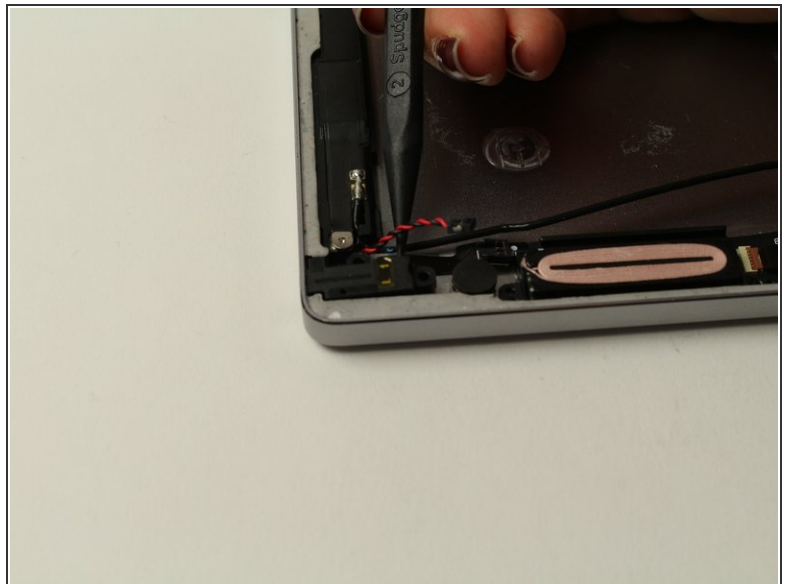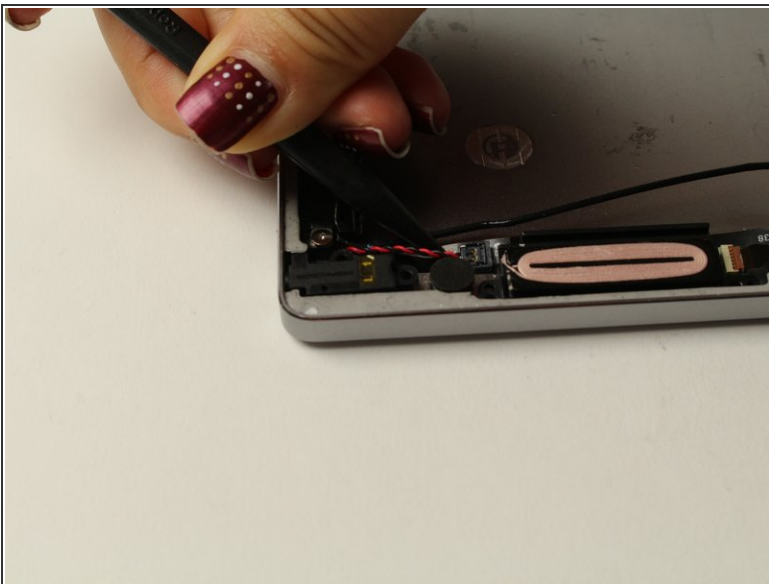



- Detach the red and black cable using a narrow spudger.

Step 9

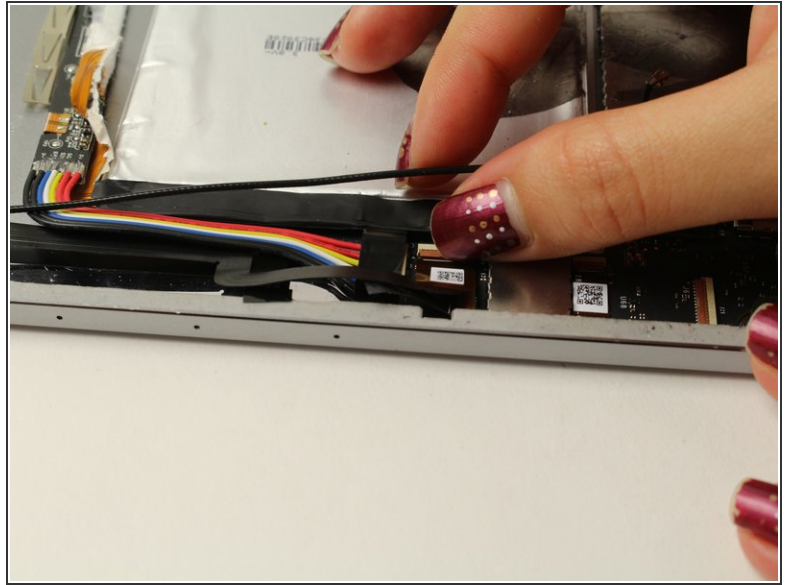

- Detach the cable connecting to the headphone jack.

Step 10

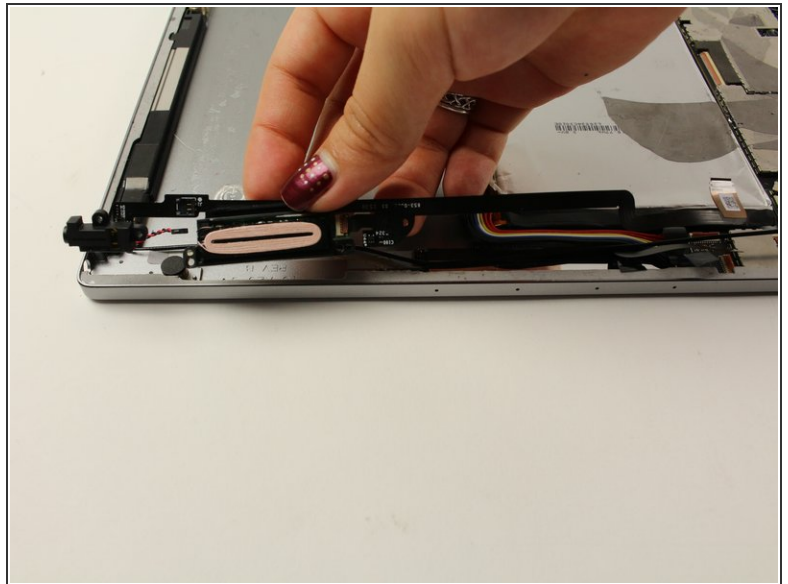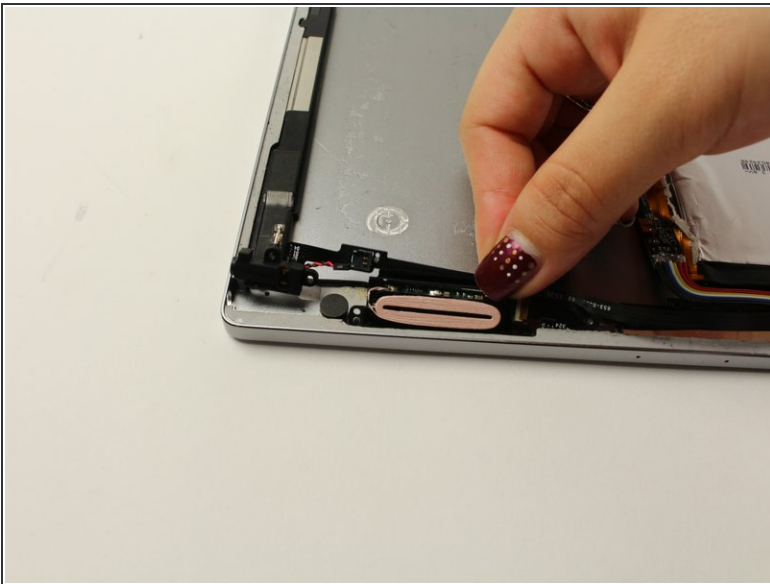

- Lift the headphone jack, coiled wire, and cable, peeling the adhesive back.
- ☑ Reassembly will require adhesive to ensure that the components are secured to the device.

To reassemble your device, follow these instructions in reverse order.