



Greist Buttonholer Button Template Replacement

This guide will teach you how to replace the button template inside The Buttonholer for various sizes of button holes.

Written By: Michael Sykes




This document was generated on 2019-09-22 06:47:21 AM (MST).

INTRODUCTION


Depending on the size of the buttons that you will be using, you may need to replace the template already in The Buttonholer.

Step 1 — Preparing the Buttonholer

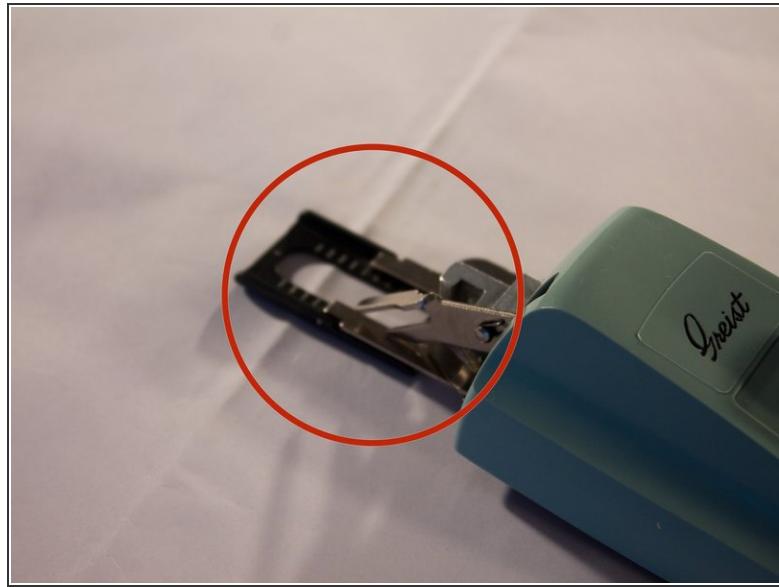



- Turn the adjusting knob to the right until the cloth clamp is extended as far as it can go.

Step 2 — Open the Retainer Plate

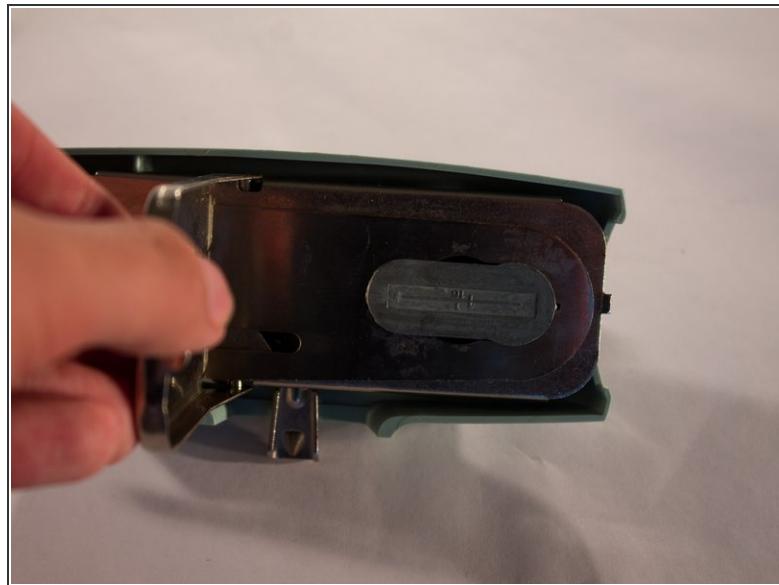

- Located on the bottom, pull the lip of the retainer plate away from The Buttonholer, and then open the plate.

Step 3 — Remove the Template

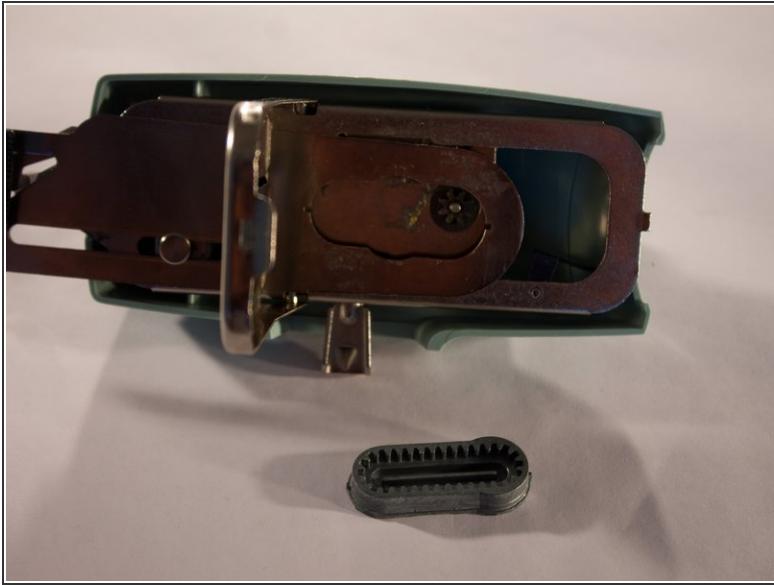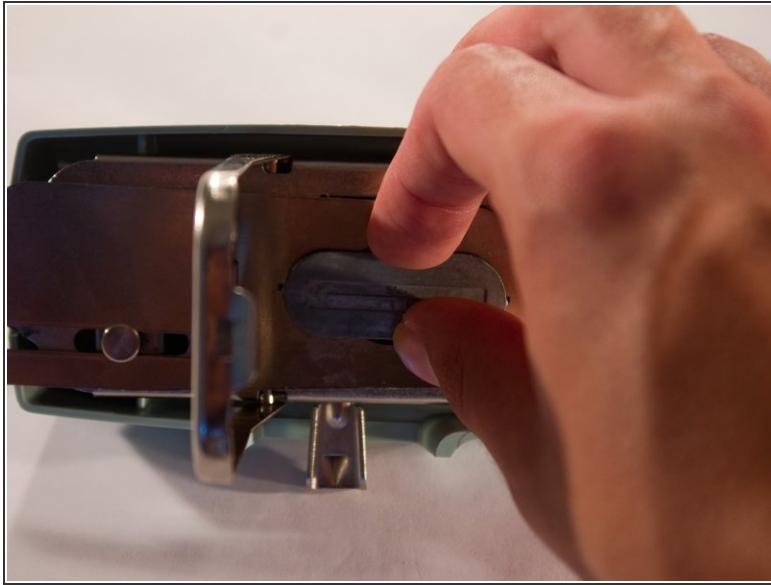



- Since the clamp is extended as far as it can go, the template should come out easily.

Step 4 — Choose a New Template



- 4 additional templates are included with The Buttonholer. Each template creates a different size button hole.
- If you are unsure which template is right for your project, check the back of each template for the diameter of the holes that they make.

Step 5 — Insert the New Template

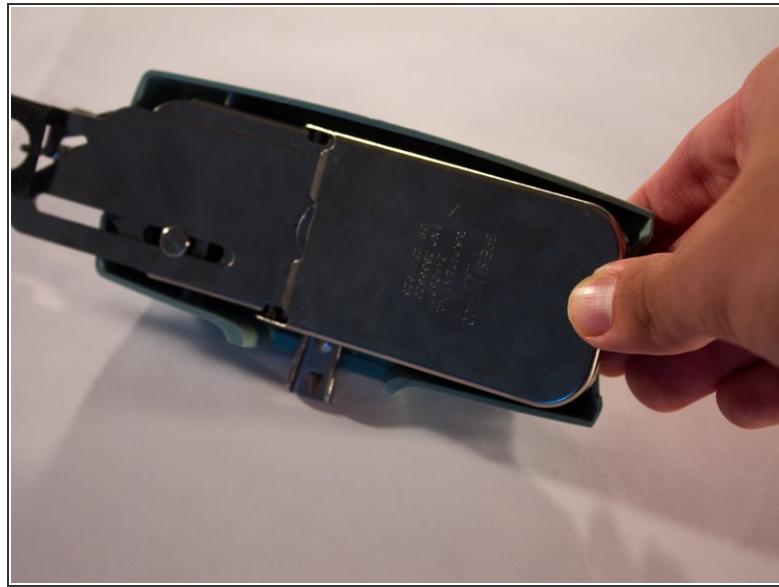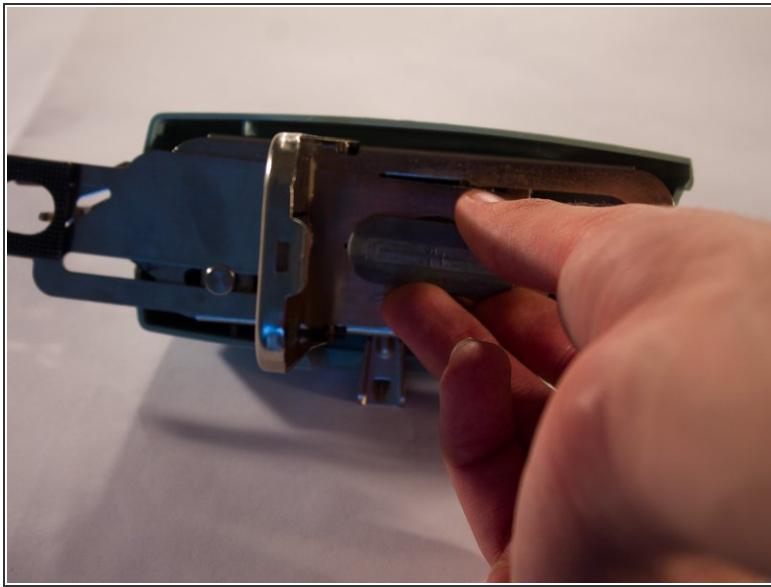

- Place the template into The Buttonholer, and then close the retainer plate.

To reassemble your device, follow these instructions in reverse order.