


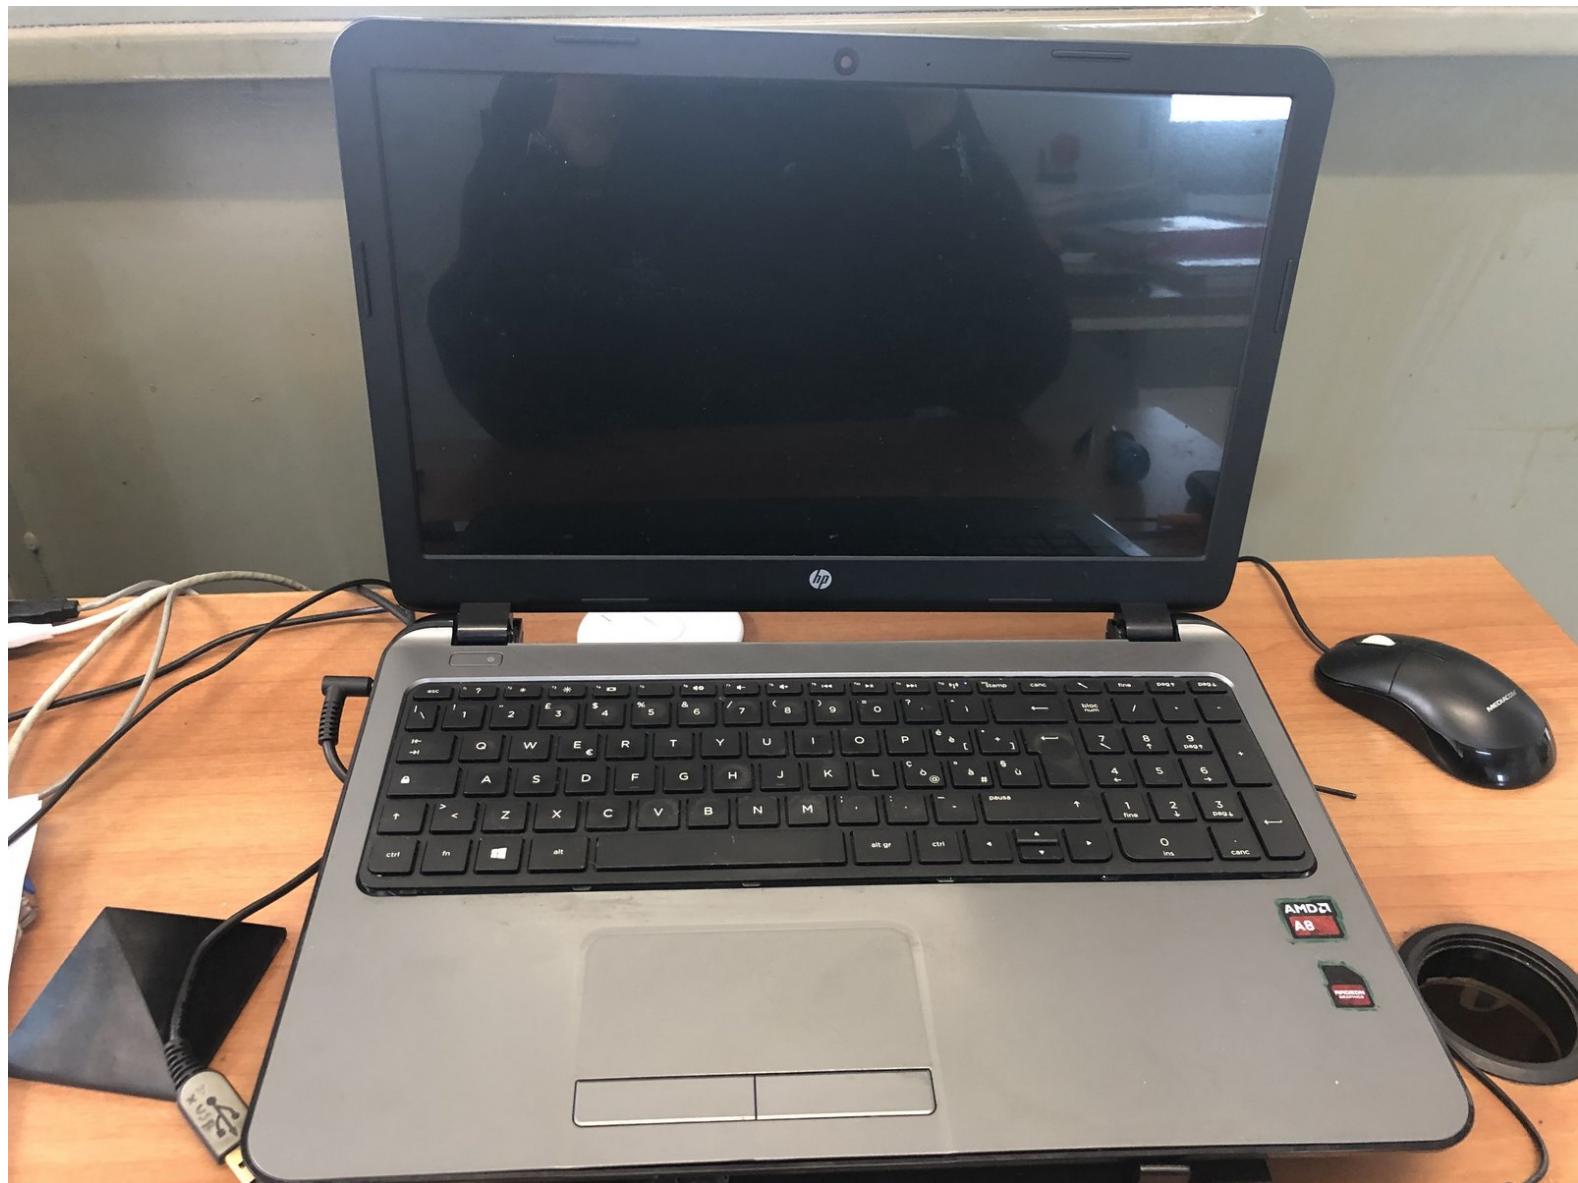

# HDD Replacement HP Laptop 15-g053nl

Follow this guide to replace the HDD

Written By: Smilzo



## Step 1 — HDD




- Remove the battery pack
- Remove the two rubber pads on the display side
- Remove 11 Philips screws framed in red
- Remove DVD Drive
- Remove the screw (maybe 2 screws) framed in green

## Step 2



- Insert a thin tool or a flat screwdriver in the little slits on the upper side of the keyboard lift up, to unhook the locking clips.
- Lift up the keyboard, being careful about the flat cable.
- Lift up the connector and disconnect the flat removing the battery.

## Step 3

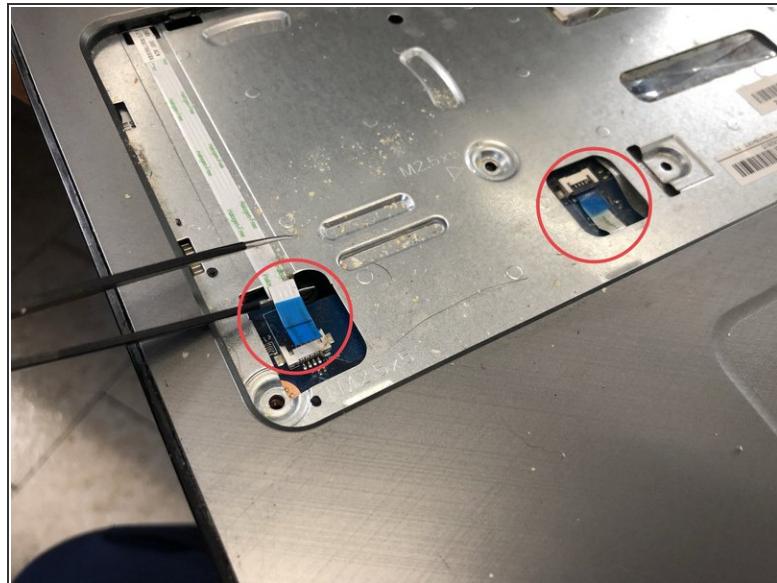

- Remove the 3 screws marked in red
- Unhook the 2 connector and unplug the flat cables

## Step 4



- With a thin instrument, release the clips around the perimeter retaining the top cover, leaving the rear shell containing the motherboard etc. (The iFixit [Jimmy](#) is ideal for this.)
- Remove the top cover, giving access to the hard disk.

To reassemble your device, follow these instructions in reverse order.