



# HKC P774A Battery Replacement

This guide will allow you to replace the battery.

Written By: Sean McCauley



## INTRODUCTION

The guide will show you how to replace the battery on the HKC p774A tablet. This is a difficult process, and the battery will need to be properly disposed of upon completion.



### TOOLS:

- [Precision Tweezers Set](#) (1)
- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)



### PARTS:

- [HKC p774A Battery](#) (1)

## Step 1 — Digitizer



- Insert the flat end of the spudger into the side of the device
- This will create a gap between the device and screen housing.
- Insert the plastic opening tool into this gap and move it along this gap.

⚠ Make sure not to bent the digitizer during this step.

- The screen housing and device will now be separated.


## Step 2



- Once the digitizer has been removed from the body, disconnect the digitizer band from the motherboard.
- Two small black pins (circled in red) will need to be unlocked.
- Unlock the pins by pulling them outward with the tweezers.
- ⚠ Make sure the pins are released entirely before attempting to remove the band.
- Remove the band using the tweezers.




## Step 3

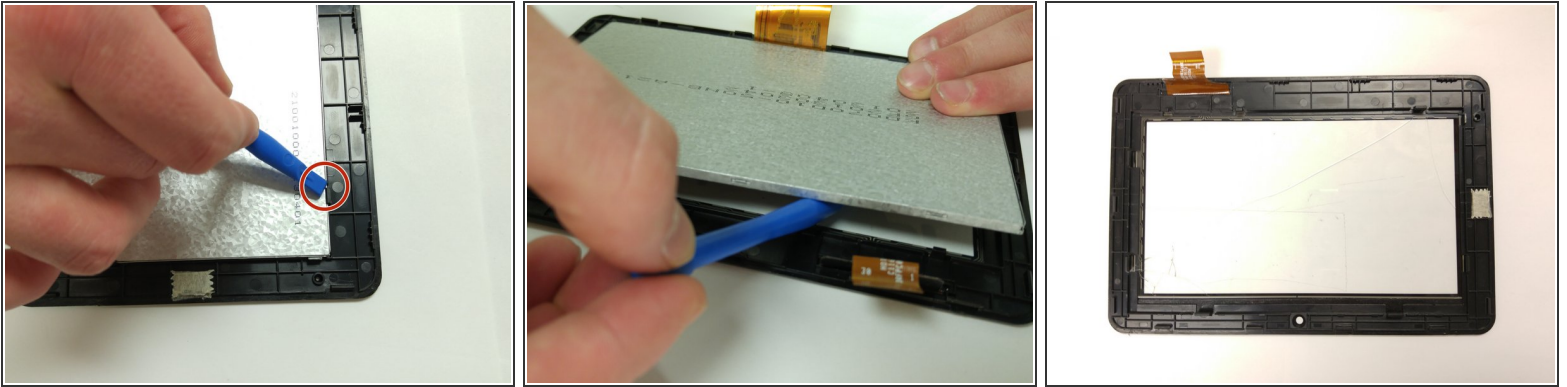


- Once the digitizer has been disconnected from the motherboard, the LCD screen must be removed from the digitizer.
  - Push open the tabs (circled in red) using the flat end of the plastic spudger.
- ⚠ Be sure not to bend the digitizer while prying.
- Continue to release all tabs while continuing to pry the LCD away from the digitizer.

## Step 4 — Camera

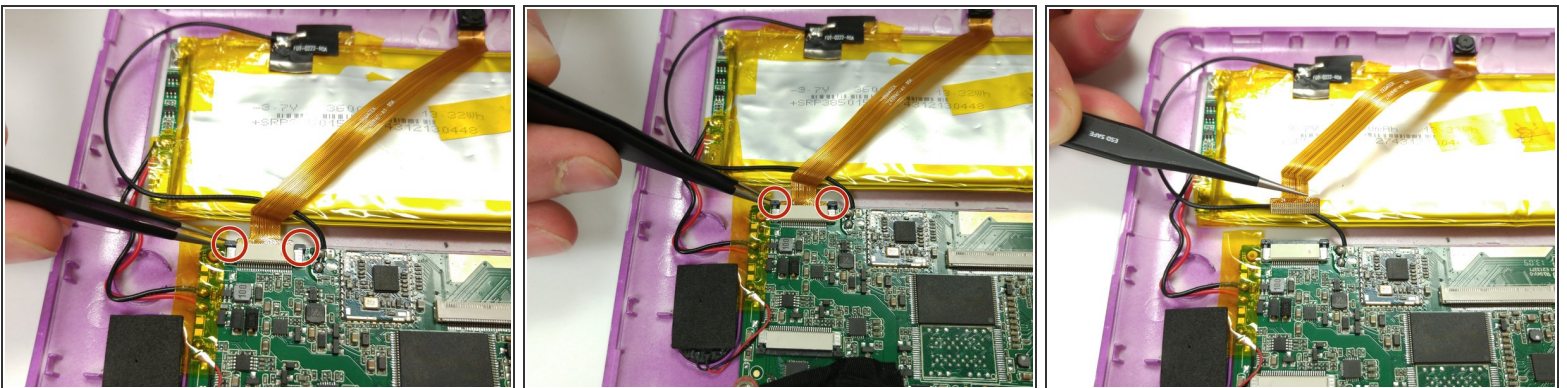

- Use the tweezers to pull out the black pins (circled in red).
  - Use the tweezers to remove the camera band from the motherboard.
- ⚠ Handle the band with care.

## Step 5

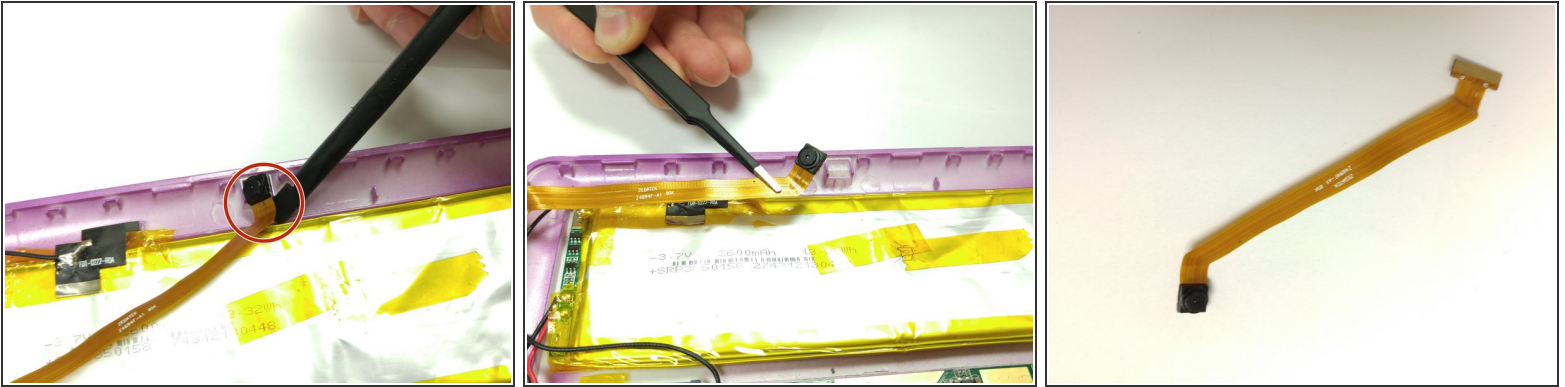


- Use the flat end of the plastic spudger to pry the camera lens from the case.
- Use the tweezers to remove the camera and band.

## Step 6 — Battery



- Use the plastic opening tool to begin prying the battery away from the case.
- ⚠ Be gentle as the battery is fragile.
- ⚠ Do not bend the battery. Work slowly.

## Step 7

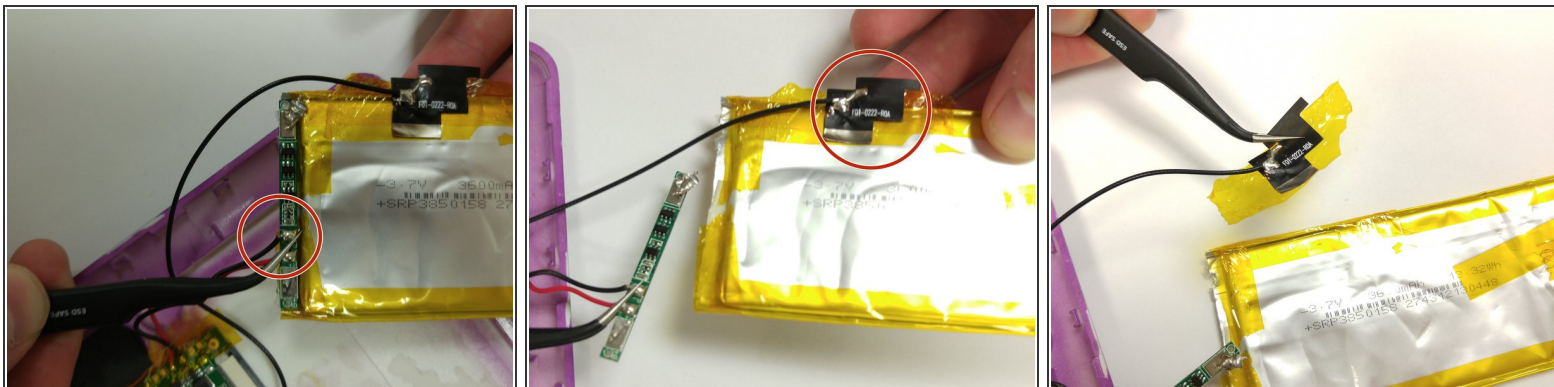

- Use the tweezers to remove the circuit board from the side of the battery.

⚠ Be extremely gentle when removing the circuit from the battery.

- Remove the wire by peeling off the tape.

To reassemble your device, follow these instructions in reverse order.