



# HKC P774A Camera Replacement

This guide will allow you to replace the front facing camera.

Written By: Sean McCauley



## INTRODUCTION

The camera can be replaced, by disconnecting it from the motherboard. This is a fairly simple repair.

### TOOLS:

- [Precision Tweezers Set \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)

### PARTS:

- [Camera HKC \(1\)](#)

## Step 1 — Digitizer



- Insert the flat end of the spudger into the side of the device
- This will create a gap between the device and screen housing.
- Insert the plastic opening tool into this gap and move it along this gap.

**⚠** Make sure not to bend the digitizer during this step.

- The screen housing and device will now be separated.

## Step 2




- Once the digitizer has been removed from the body, disconnect the digitizer band from the motherboard.
- Two small black pins (circled in red) will need to be unlocked.
- Unlock the pins by pulling them outward with the tweezers.

**⚠** Make sure the pins are released entirely before attempting to remove the band.

- Remove the band using the tweezers.

## Step 3

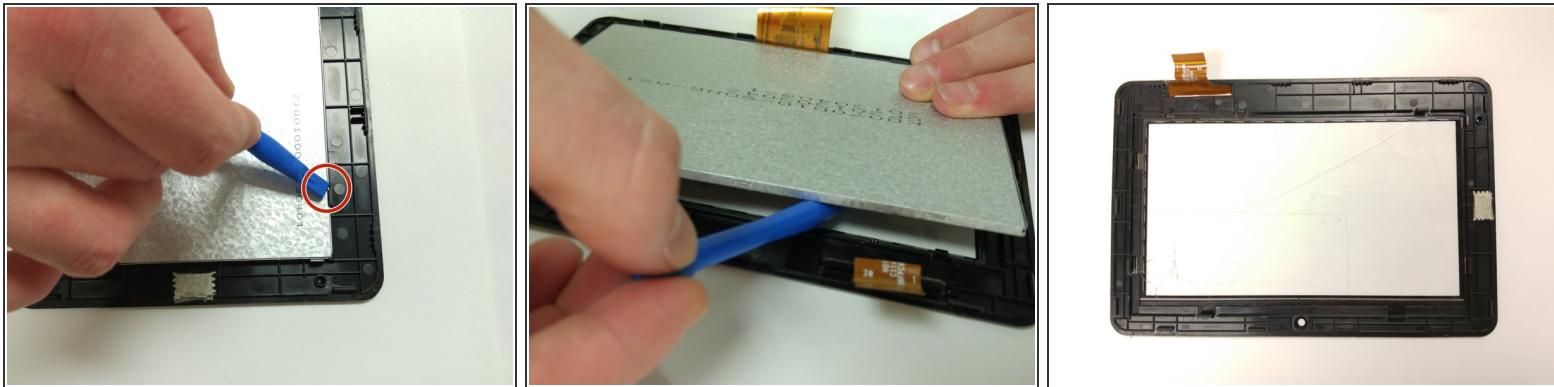


- Once the digitizer has been disconnected from the motherboard, the LCD screen must be removed from the digitizer.
- Push open the tabs (circled in red) using the flat end of the plastic spudger.

**⚠** Be sure not to bend the digitizer while prying.

- Continue to release all tabs while continuing to pry the LCD away from the digitizer.

## Step 4 — Camera

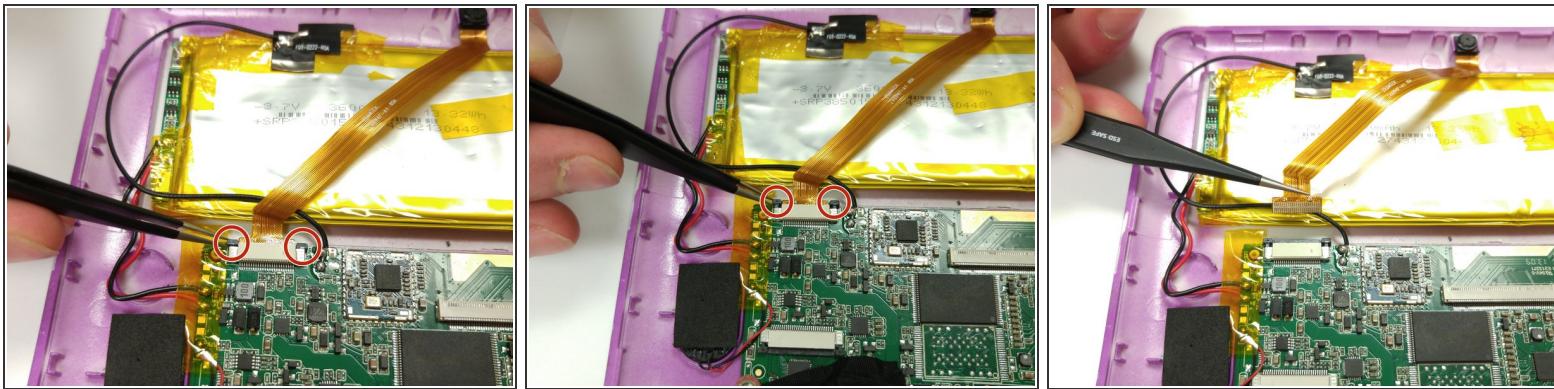

- Use the tweezers to pull out the black pins (circled in red).
- Use the tweezers to remove the camera band from the motherboard.

**⚠** Handle the band with care.

## Step 5



- Use the flat end of the plastic spudger to pry the camera lens from the case.
- Use the tweezers to remove the camera and band.

To reassemble your device, follow these instructions in reverse order.