



HKC P774A Digitizer Replacement

This guide will allow you to replace the digitizer.

Written By: Sean McCauley



INTRODUCTION

The digitizer is the part that fits in front the LCD. This is records touch feedback.

TOOLS:

- [Precision Tweezers Set \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)

PARTS:

- [HKC P774A Digitizer \(1\)](#)

Step 1 — Digitizer



- Insert the flat end of the spudger into the side of the device
- This will create a gap between the device and screen housing.
- Insert the plastic opening tool into this gap and move it along this gap.

⚠ Make sure not to bend the digitizer during this step.

- The screen housing and device will now be separated.

Step 2




- Once the digitizer has been removed from the body, disconnect the digitizer band from the motherboard.
- Two small black pins (circled in red) will need to be unlocked.
- Unlock the pins by pulling them outward with the tweezers.

⚠ Make sure the pins are released entirely before attempting to remove the band.

- Remove the band using the tweezers.

Step 3

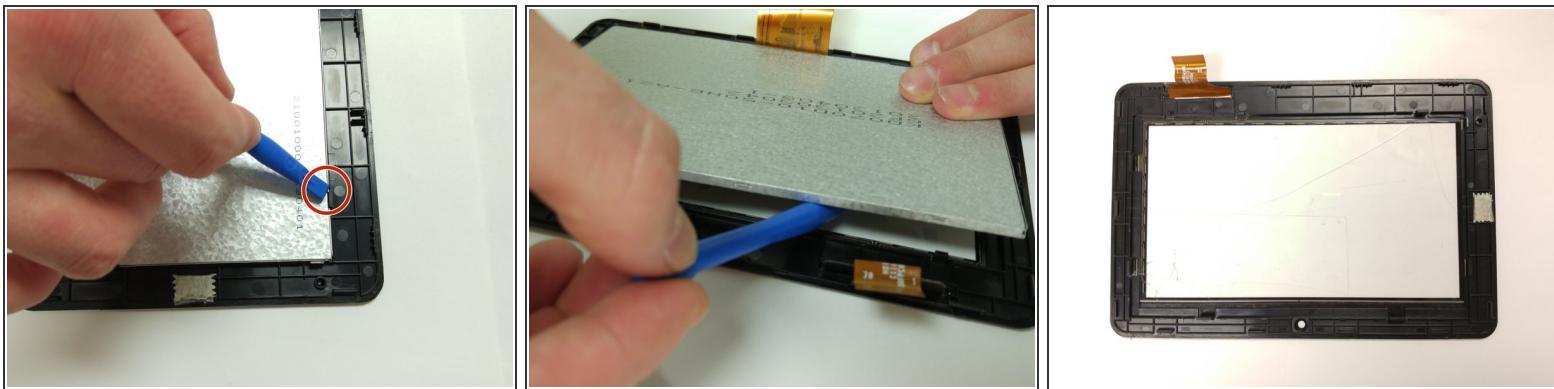

- Once the digitizer has been disconnected from the motherboard, the LCD screen must be removed from the digitizer.
- Push open the tabs (circled in red) using the flat end of the plastic spudger.

⚠ Be sure not to bend the digitizer while prying.

- Continue to release all tabs while continuing to pry the LCD away from the digitizer.

To reassemble your device, follow these instructions in reverse order.