




# HP 14-ac151nr Coin Cell Battery Replacement

How to replace the coin cell / watch battery in an HP 14-ac151nr

Written By: Jack Coakley

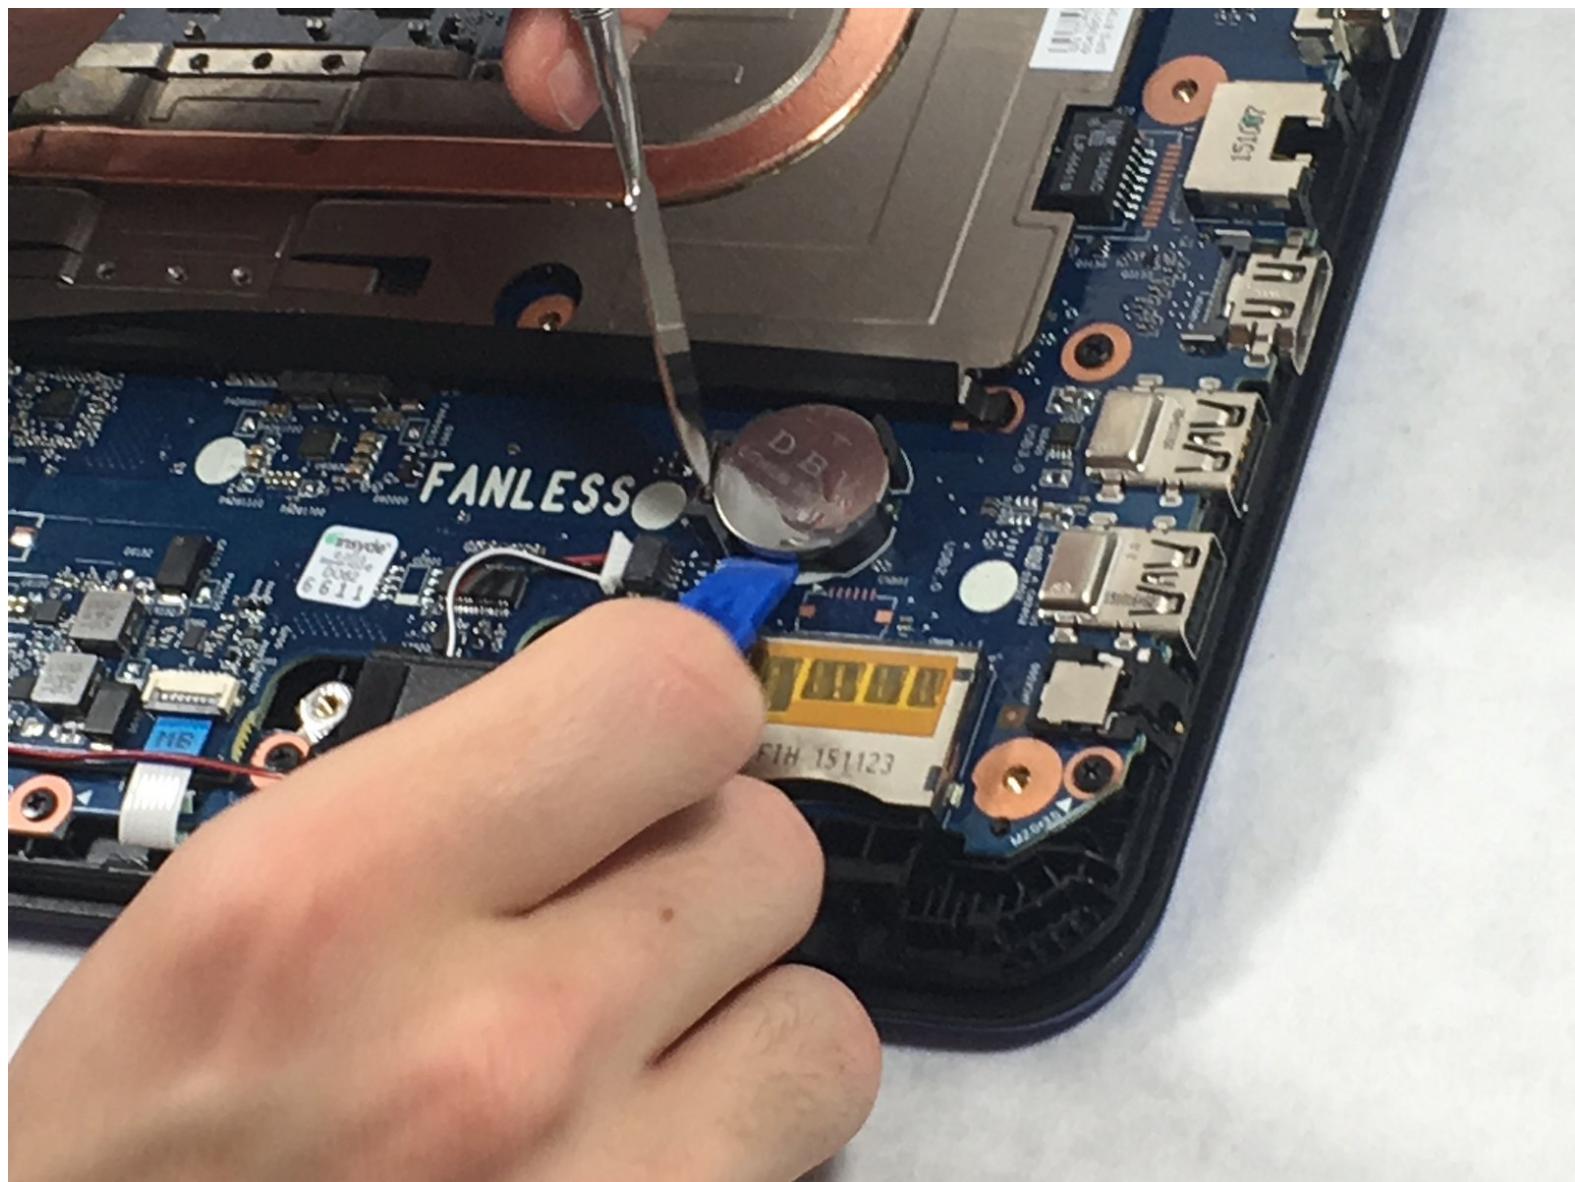

## INTRODUCTION

The coin cell battery is essential to the computer's BIOS as well as its time keeping functions. If yours isn't working properly, you may fix it using these steps.

### TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Metal Spudger \(1\)](#)

## Step 1 — Backplate



- Remove battery by pushing the two buttons inward.

## Step 2

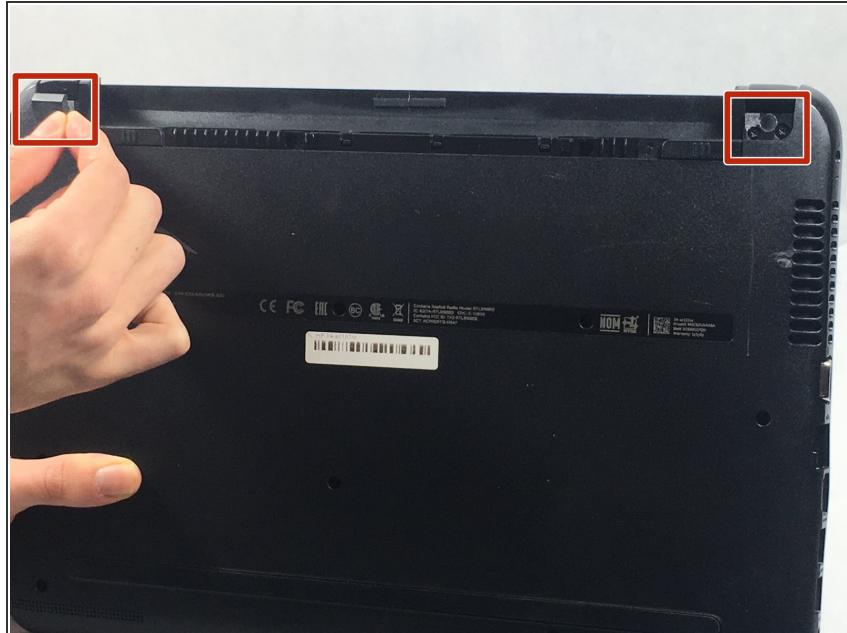


- Remove the two rubber feet next to the battery.

## Step 3




- Remove all 14 Phillips head #0 screws.

## Step 4

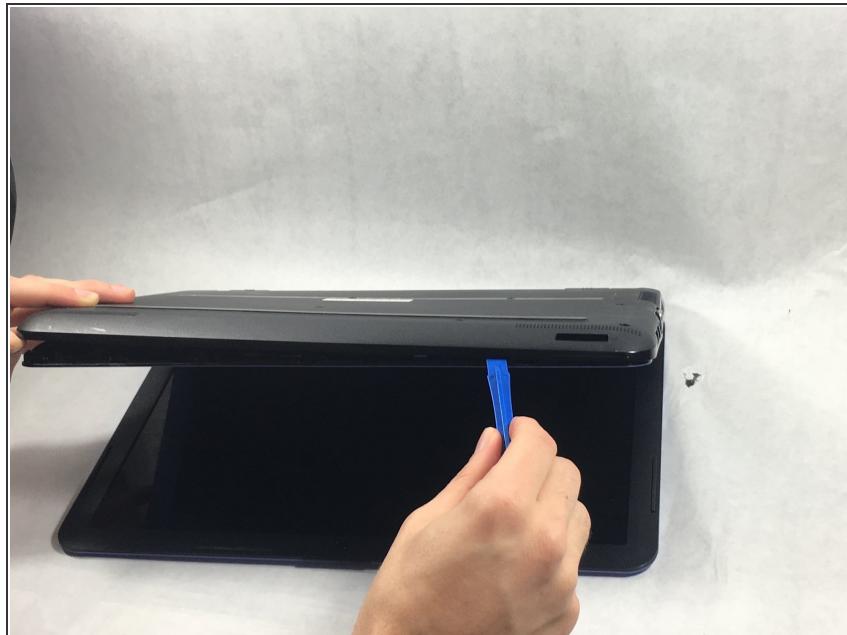



- Use a plastic opener tool to pry off the black backplate.

## Step 5 — Coin Cell Battery

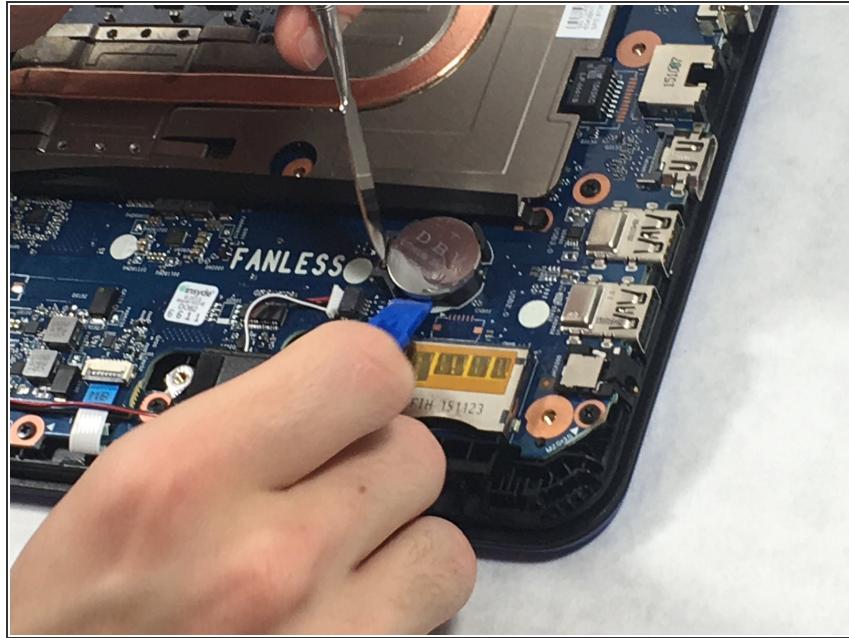

- Use a spudger and a plastic opener to push back the lock holding the battery in place.

## Step 6

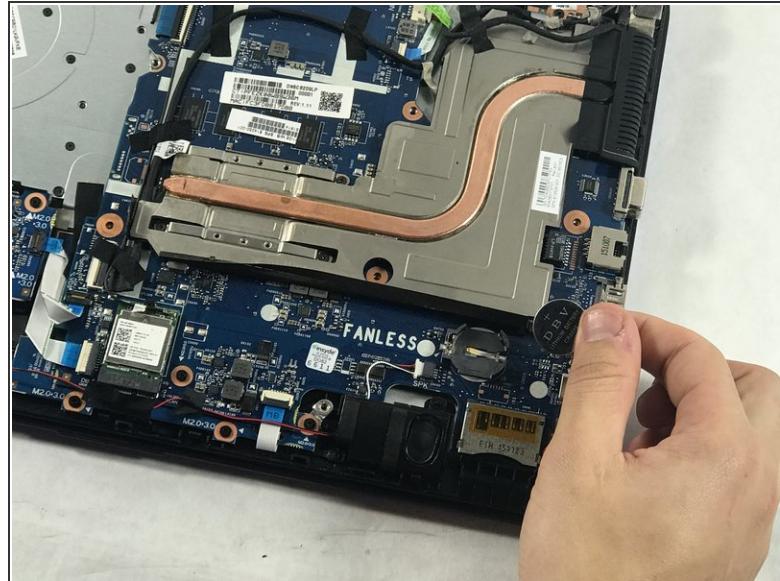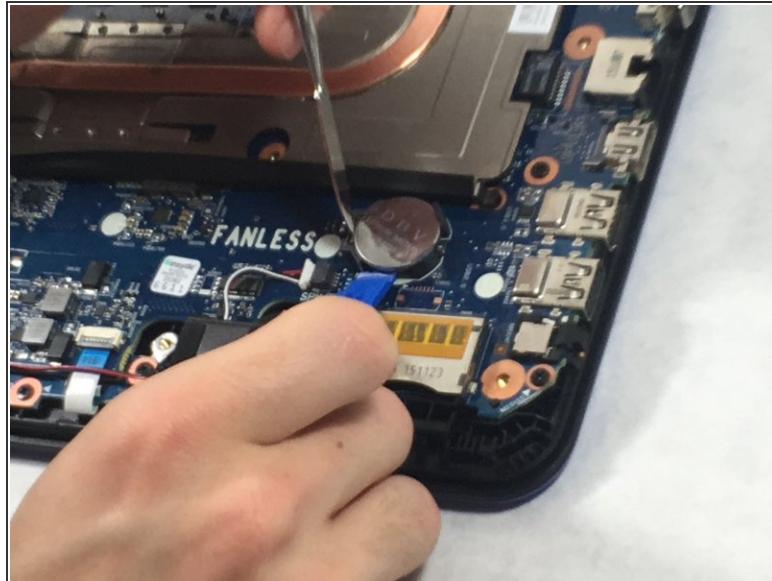

- Remove the battery by pushing back the lock with the wedge while pulling the battery up.

To reassemble your device, follow these instructions in reverse order.