




HP 14-ac151nr Internal Speakers Replacement

Remove and replace the internal speakers for your HP 14-ac151nr

Written By: Antonio Leonti

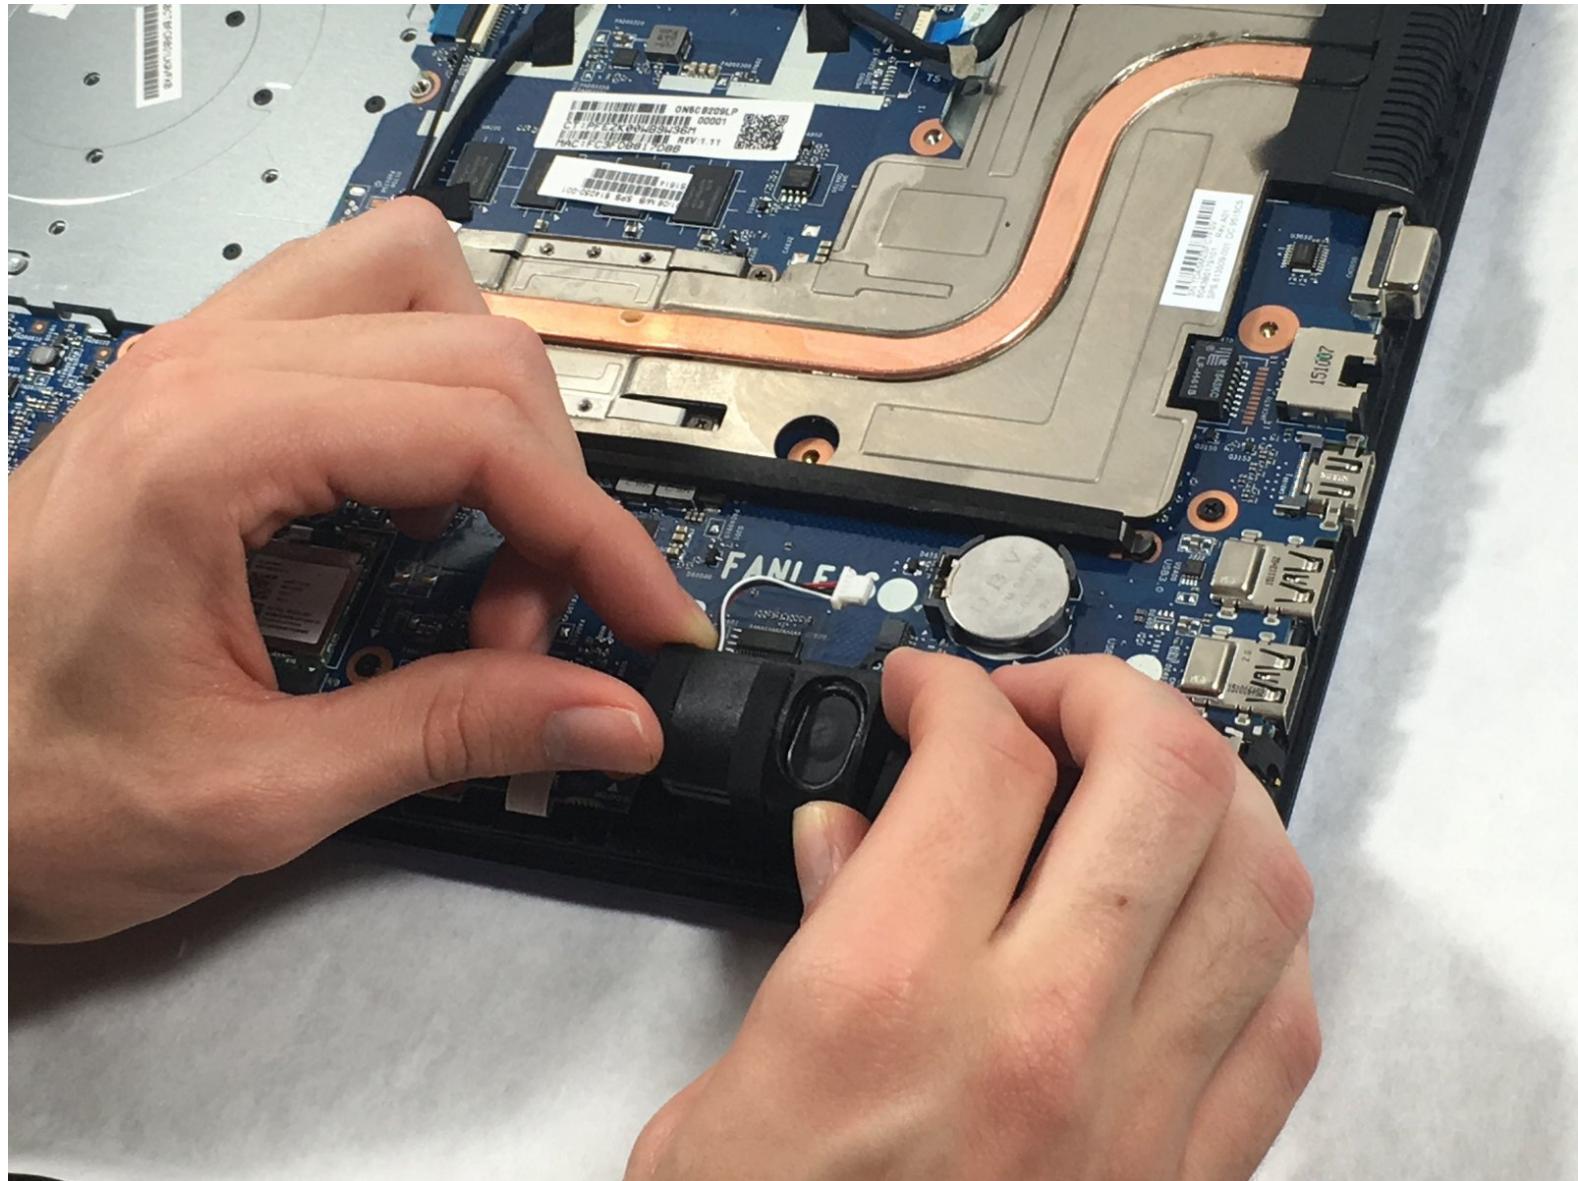


INTRODUCTION

If your computer isn't making any sound, makes distorted sound, or otherwise has sound issues and you have ruled out software issues, you can try replacing your internal speakers using these steps.

TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Backplate

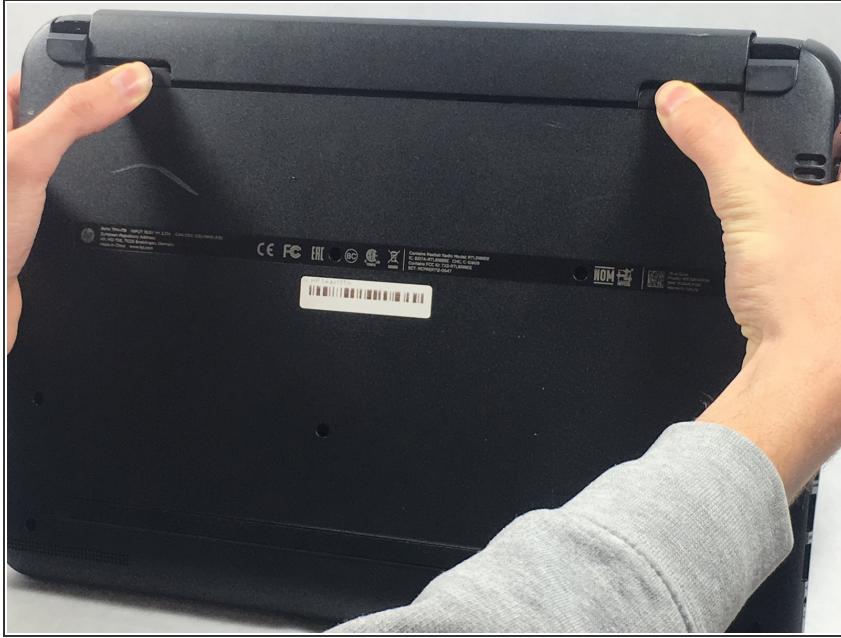

- Remove battery by pushing the two buttons inward.

Step 2

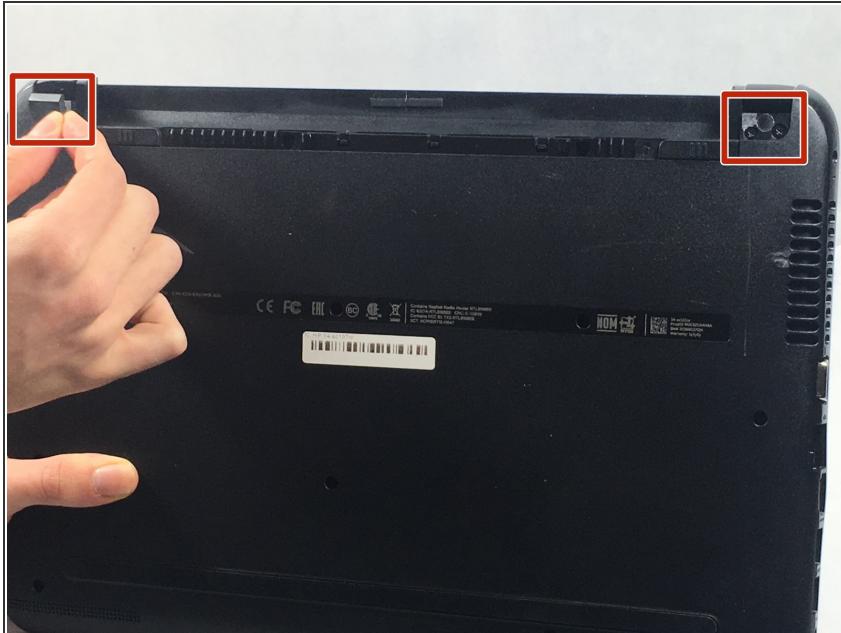


- Remove the two rubber feet next to the battery.

Step 3




- Remove all 14 Phillips head #0 screws.

Step 4

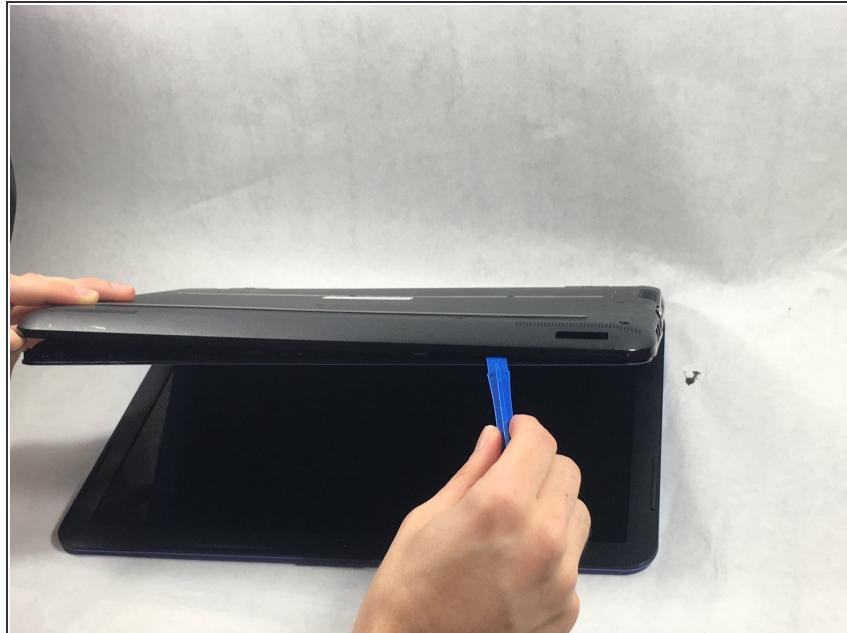

- Use a plastic opener tool to pry off the black backplate.

Step 5 — Internal Speakers

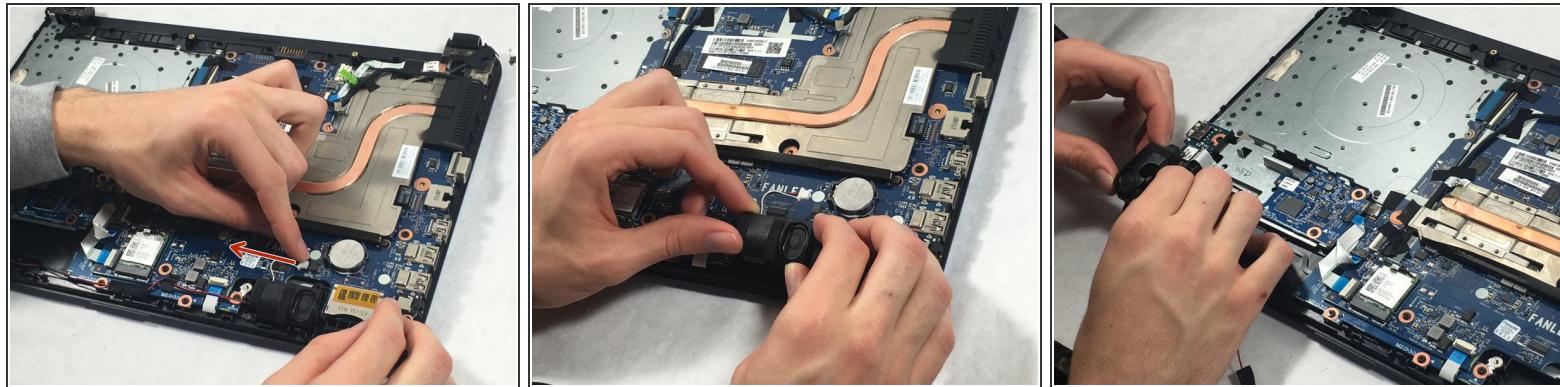

- Disconnect the speakers from motherboard.
- Remove the speakers by lifting them straight upward.

To reassemble your device, follow these instructions in reverse order.