



HP 15-R011DX Battery Replacement

This guide will demonstrate how to remove and replace the battery.

Written By: Eric Ferrer



INTRODUCTION

One of quickest parts to “die” on a laptop is the battery. Not being able to hold a charge, or only being able to operate your laptop while plugged in are signs that you may need to replace your battery. It is also a good idea to disconnect the battery before operating on your laptop.

Step 1 — Battery



- Slide the lock mechanism on the left side of the laptop to the right.

Step 2



- While holding the right slide mechanism, remove the battery from the laptop.

(i) The battery is not pictured here because it is missing from this particular device.

To reassemble your device, follow these instructions in reverse order.