



HP 15-ac121dx CD Compartment Replacement

This guide will help you to easily replace a non-working CD Compartment.

Written By: Ashton Martin




INTRODUCTION

This guide will teach you how to replace the CD Compartment. You will need plastic prying tools and a Phillips J001 screw driver.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)

Step 1 — Battery

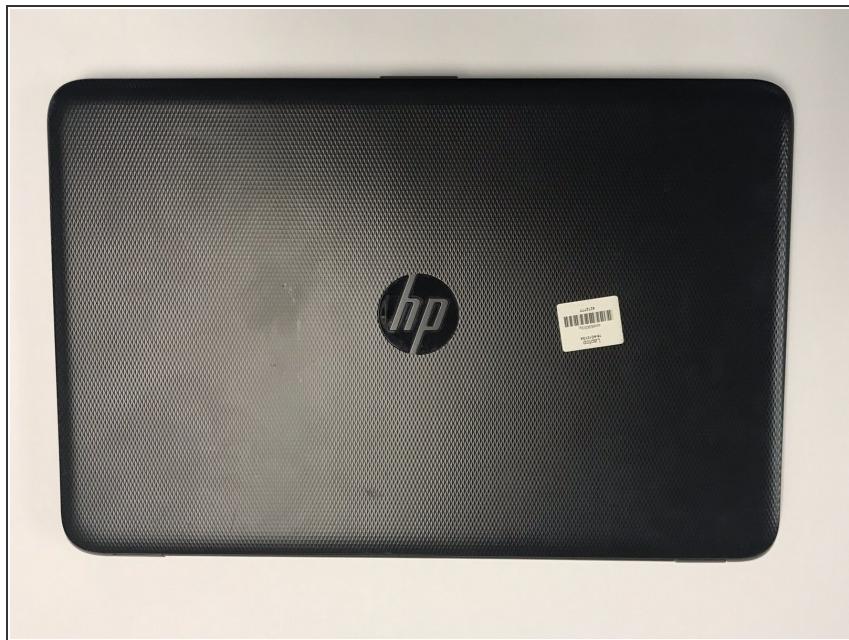

- Remove all external devices from the computer.
- Remove the charging cord from the computer.

Step 2



- Turn off the computer by holding the power button.

Step 3



- To remove the battery, slide the left slider on the back to the unlocked position.

Step 4




- Push the right slider inwards.
- Remove the battery out by pulling straight out and to the right.

Step 5 — Back Panel



- Locate the CD Compartment panel and gently slide it out.

Step 6

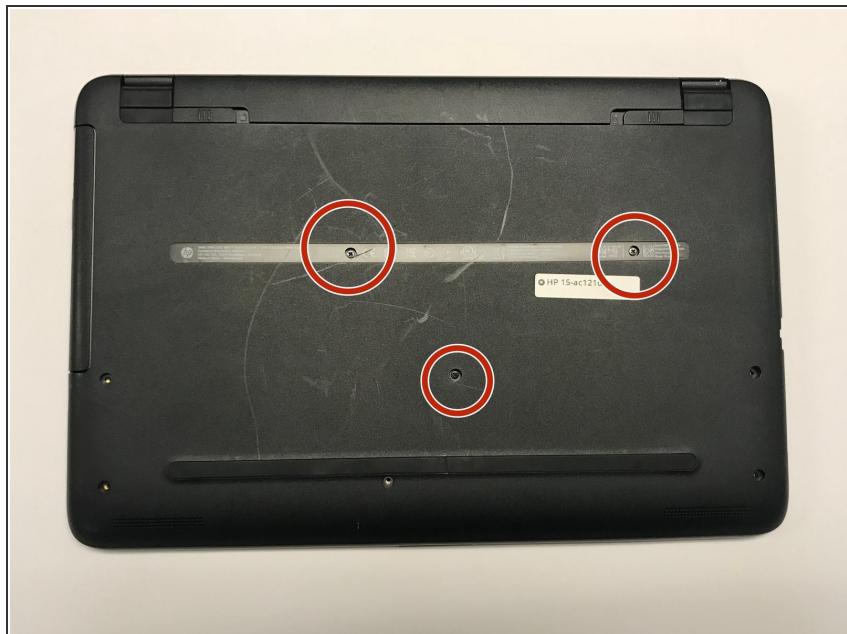

- Remove the back of the laptop by unscrewing the screws shown.
- Also remove the other 5 Phillips screws lining the back cover.

Step 7



- Using the prying tool, wedge it underneath the back of the laptop and do the same all around until the back comes off.
- Dont forget to unscrew 2 screws under 2 plastic tabs (one on each hing). The lid will not come off without them being removed!

Step 8 — CD Compartment



- Locate the CD Compartment as shown and gently slide it out.

Replace CD compartment. To reassemble your device, follow these instructions in reverse order.