




HP 15-ac142dx CD Drive Replacement

Successfully demonstrates, in detail, how to replace the CD ROM.

Written By: Nicole Mathieu

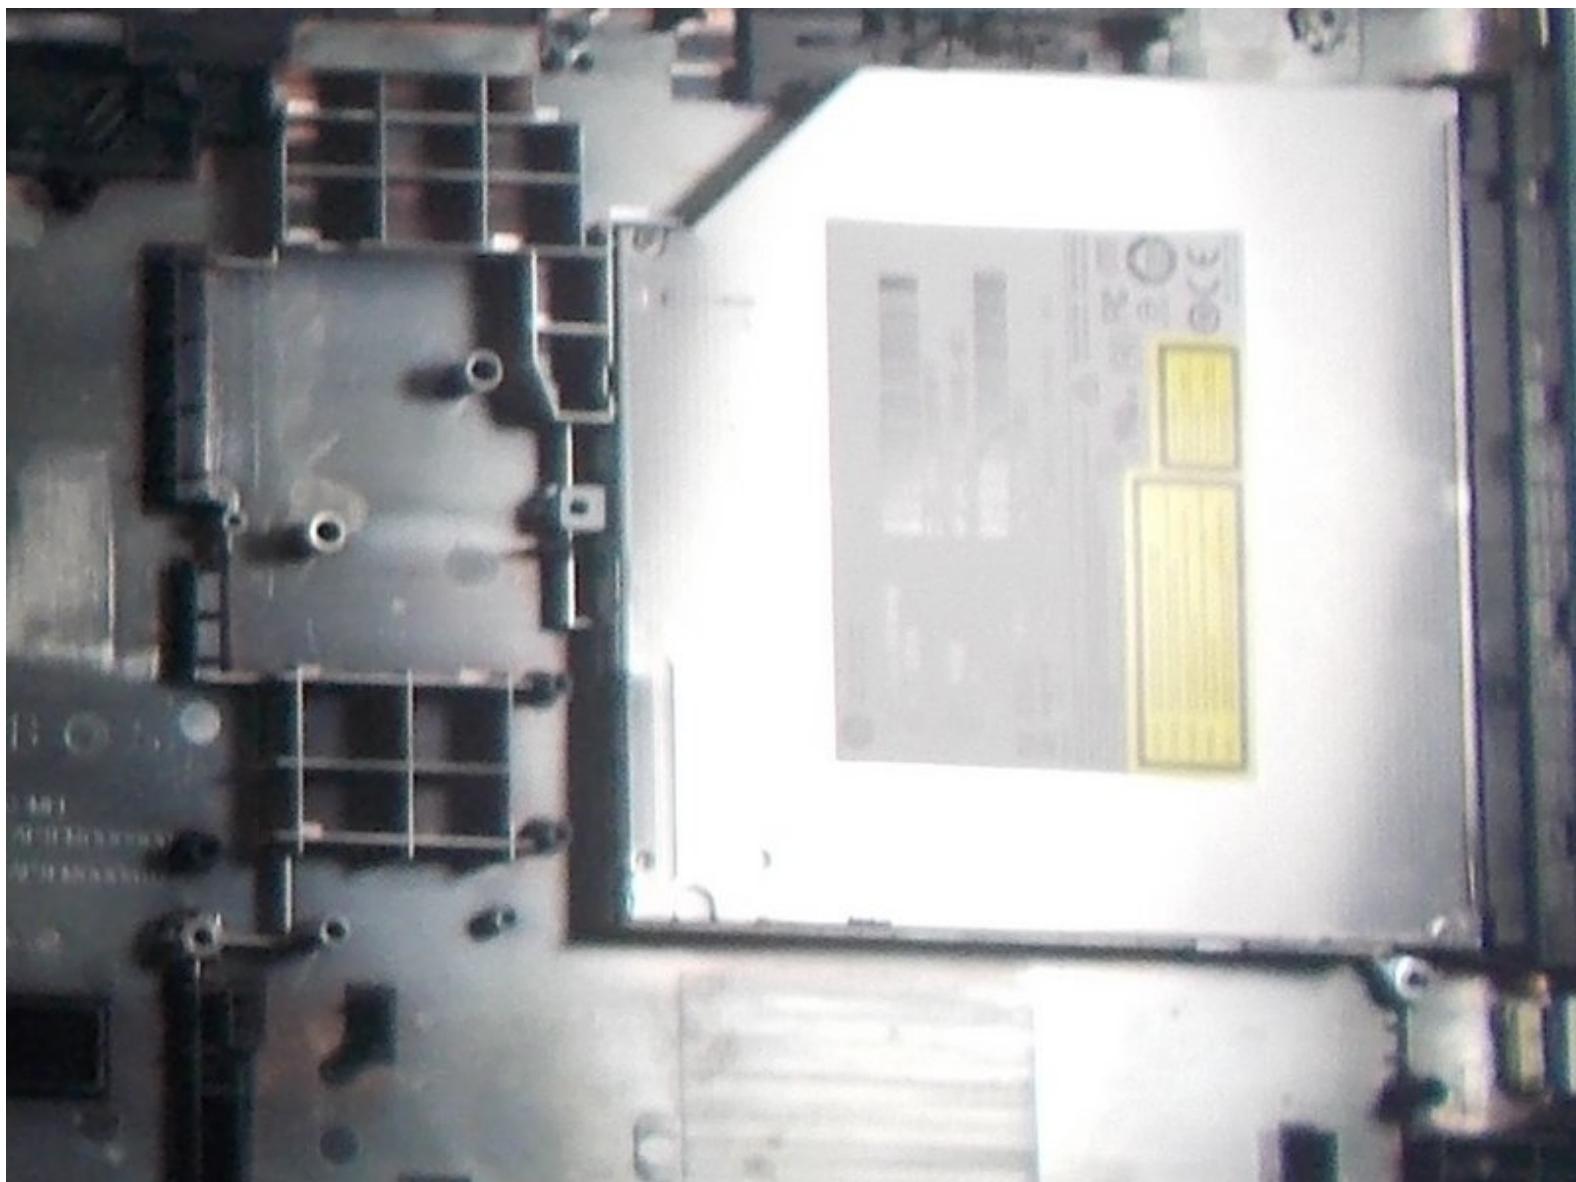

 **TOOLS:**


- Essential Electronics Toolkit (1)

Step 1 — CD Drive



- Turn off the computer and flip it over onto a flat surface.
- Remove battery by sliding the battery lock.
- Remove the 10 screws

Step 2

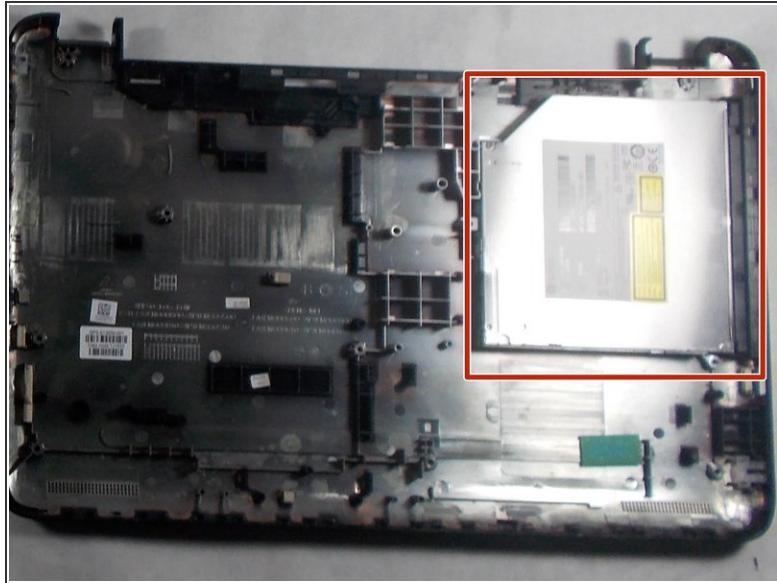

- Flip the computer back over and use the iFixit tool in order to pry the keyboard from the bottom of the computer.
- Once off you will be able to see the CD ROM.
- Slide the CD Drive out of the device.

(i) It will be located on the bottom half of the computer.

To reassemble your device, follow these instructions in reverse order.