



HP 15-ay014dx Wireless Card Replacement

Wireless card removal and replacement for HP 15-ay014dx

Written By: Drake Scoville




INTRODUCTION

This guide will show you how to take the wireless card out of your HP 15-ay014dx laptop.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery

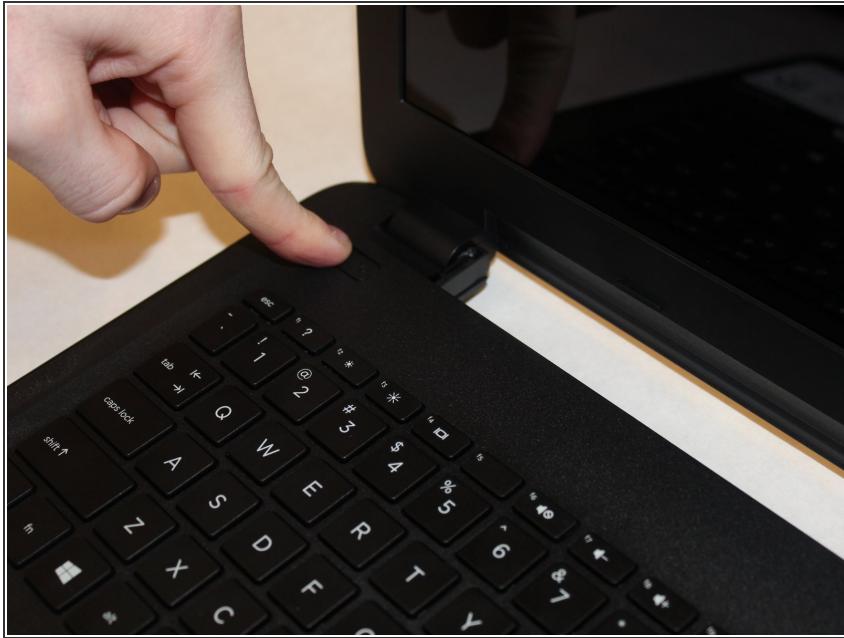

! Disconnect device from power source and power down.

Step 2

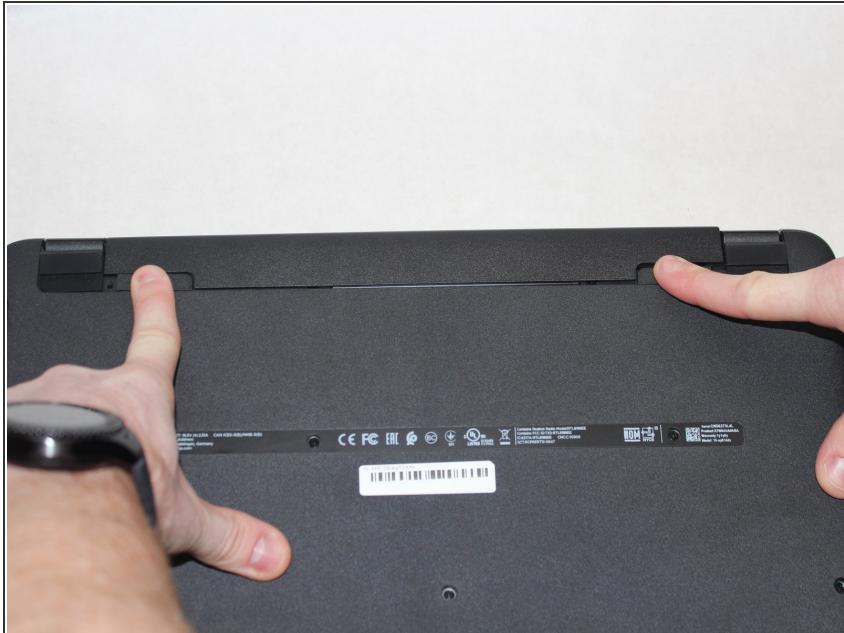

- With the device turned upside down, use your index fingers to push the battery latches in towards each other.

Step 3



- ⓘ The latch on your left will stay at the inward position, while the latch on the right will slide back out.
- Gently grasp the battery and pull it back away from the device and yourself.

Step 4 — Optical Drive



- Close the laptop and lay it down with the bottom facing up.
- Using a size #00 Phillips screw drive remove the screw holding in the optical drive.

Step 5




- Grip the optical drive and gently pull it out.

Step 6 — Wireless Card





- Remove the 11 screws holding the body of the laptop together with a size #00 Phillips screwdriver.

Step 7

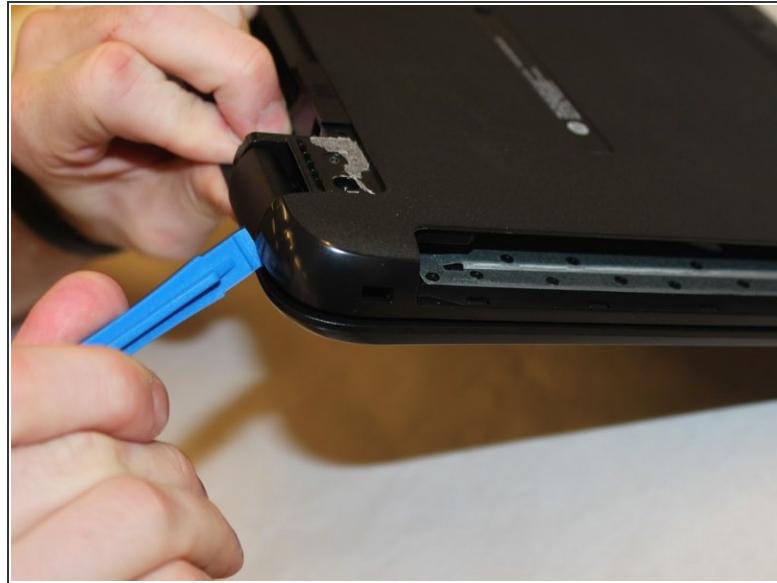

- Using the spudger, push in the tabs in the back that hold the body together. Carefully pry the body apart by working the spudger around the body.

Step 8

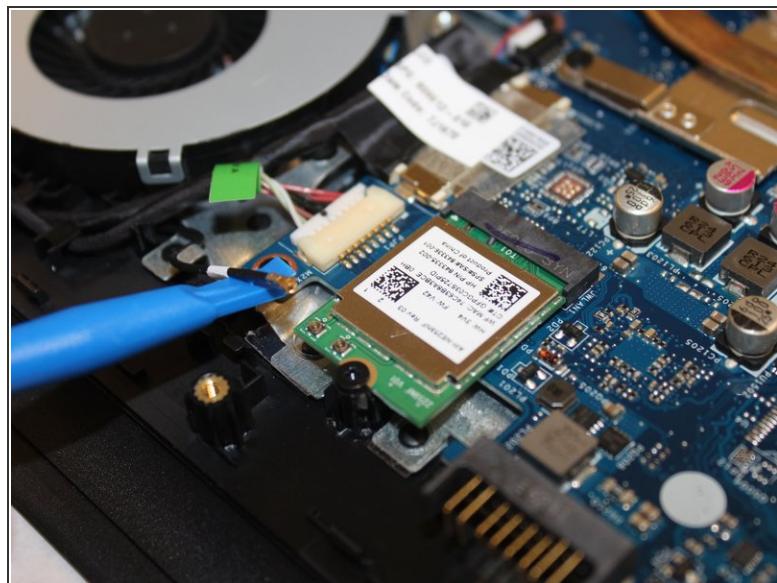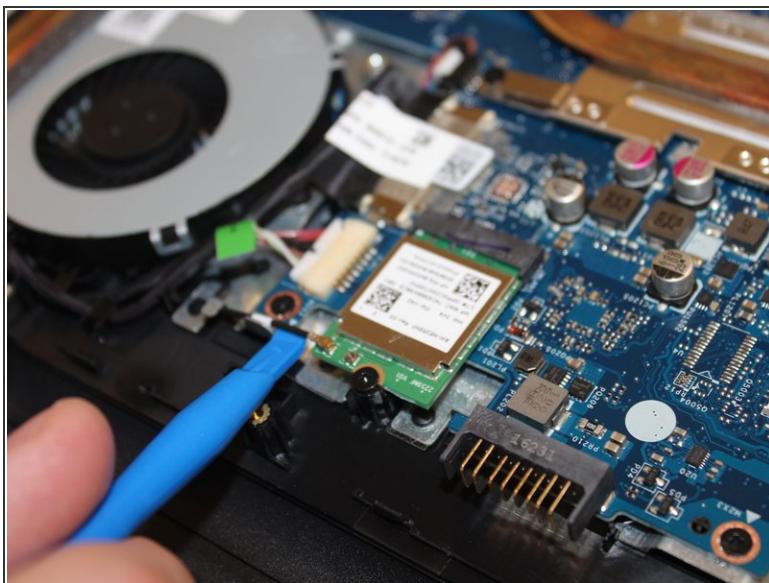


- Using the spudger, carefully pry the wire connecting the wireless card to the motherboard off of it.

Step 9



- Using the size #00 Phillips screwdriver remove the single screw holding it in place.

Step 10

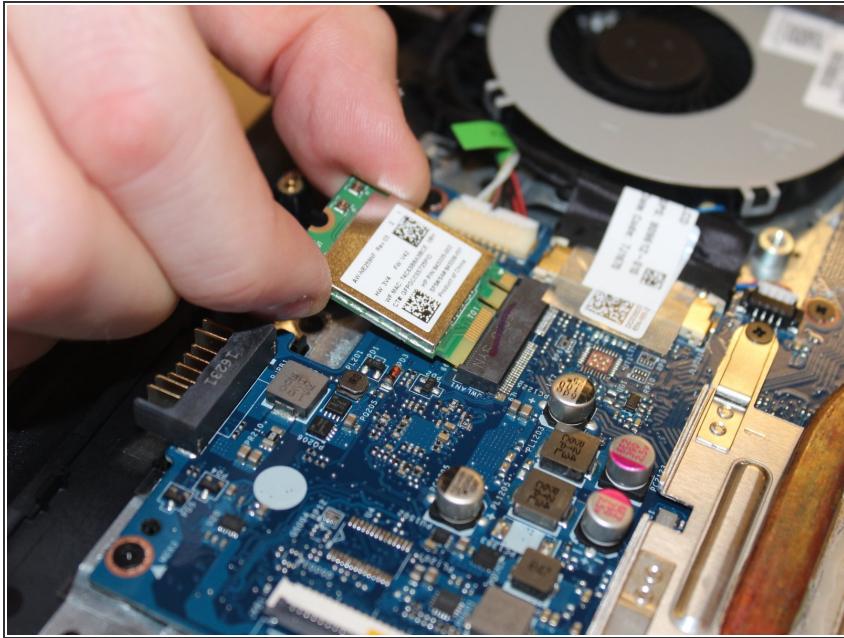

- carefully pull the card of its slot.

To reassemble your device, follow these instructions in reverse order.