



HP 15-ba0709dx Heatsink Replacement

This will outline the complete replacement of a heatsink in the HP 15-ba0709dx laptop including the use of thermal paste on the cpu.

Written By: Zach Litkenhus



This document was generated on 2020-04-04 11:26:17 PM (MST).


INTRODUCTION

If your device is heating up more than normal, consider following this guide to replace the heat sink in your device.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Heatsink

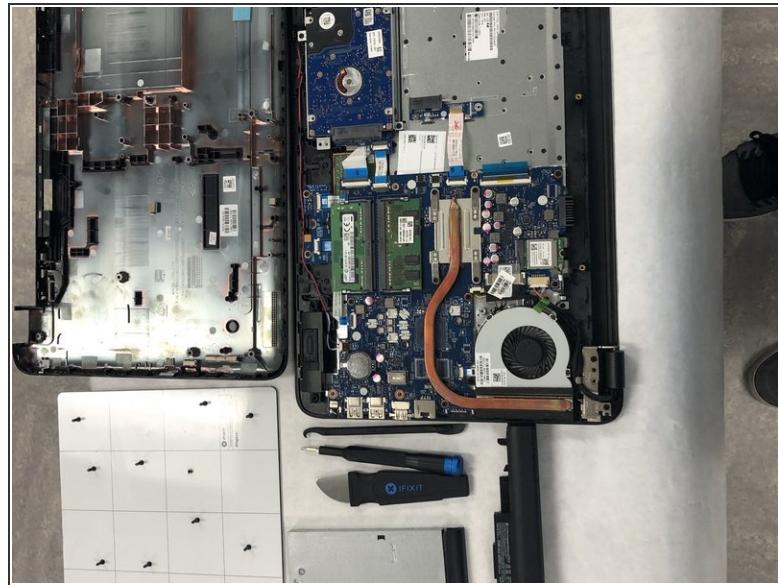


- Remove battery
- Remove the 12 visible screws from the back including 4 underneath rubber feet
- Remove CD drive

Step 2

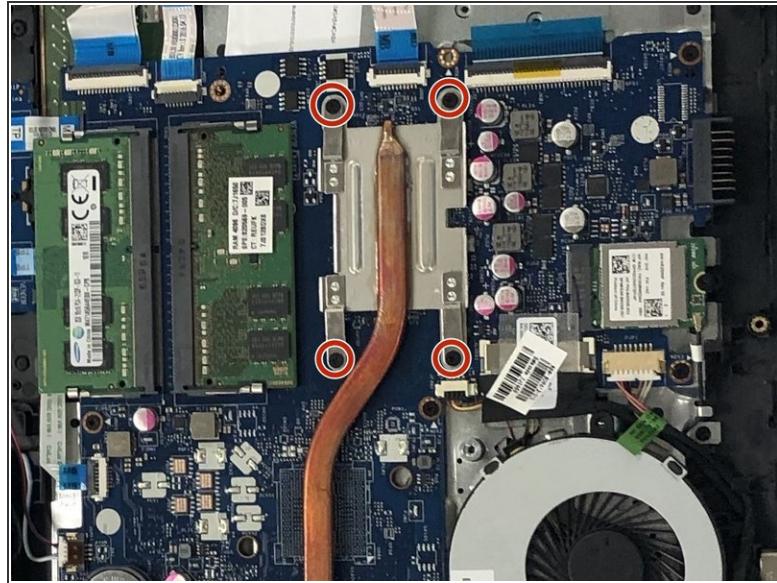

- Remove the backplate
- Remove the 4 screws from the silver plate holding the heat sink onto the CPU
- Remove the Heatsink from the CPU

Step 3

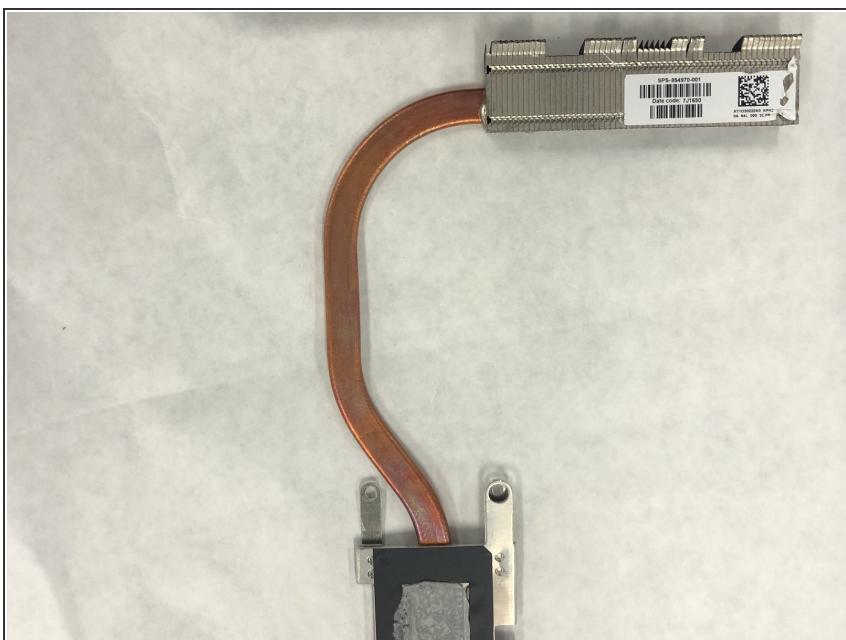

- Place a small bead of thermal paste on the CPU and place the new heatsink in place pressing it down
- Tighten screws on heatsink and reassemble the computer

To reassemble your device, follow these instructions in reverse order.