



HP 15-ba0709dx RAM Replacement

This will be a guide on how to replace the RAM in a HP-15-ba0709dx

Written By: Zach Litkenhus




INTRODUCTION

If you're looking to upgrade or replace the RAM in your laptop, consider using this guide to do so.

TOOLS:


- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — RAM

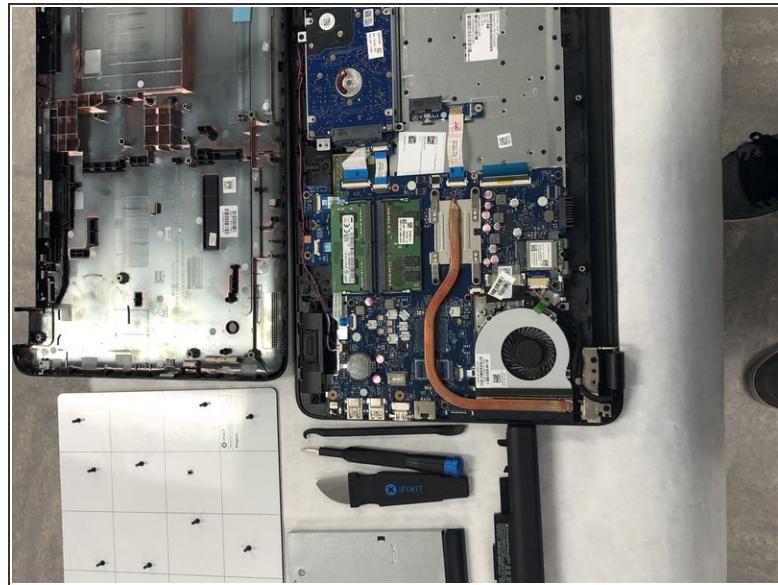

- Remove the battery
- Remove the 12 screws from the back plate including 4 screws that are under rubber feet
- Remove CD drive
- Remove back plate

Step 2

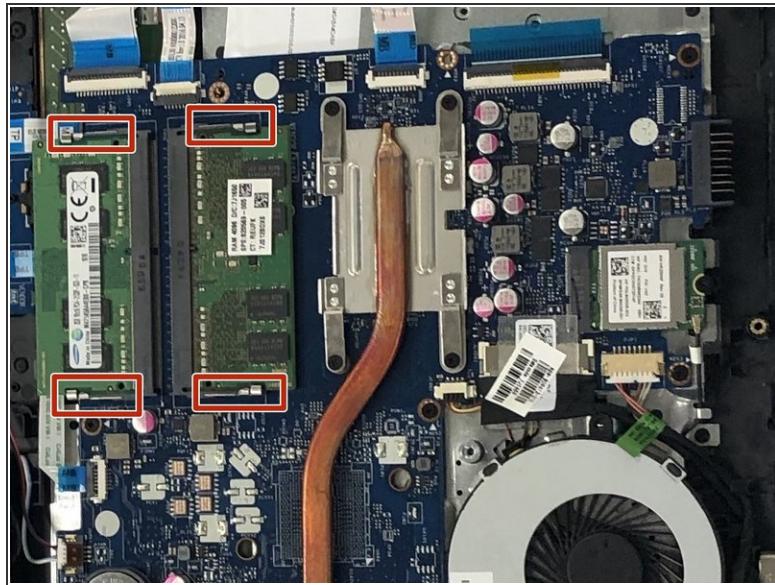

- Pull the silver latches away from the RAM
- Once RAM is free it will spring up at an angle
- Grab the RAM stick by the side and pull out of the socket

Step 3



- When inserting the RAM make sure to line up the notch on the RAM card with the pin on the port
- Insert RAM until the gold contacts are no longer visible
- Press down ram stick till it clicks in

To reassemble your device, follow these instructions in reverse order.