



HP 15-ba0709dx Speakers Replacement

Replace broken or faulty speakers on the HP 15-ba0709dx.

Written By: Reece Marr



INTRODUCTION

If your laptop's speakers no longer work or do not give quality sound, this is the replacement guide for you.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Battery



- Flip the device over and locate the battery compartment.
- Slide the battery release latch on the left and right side until the battery is detached from its slot.
- A noticeable pop will be heard when the battery is fully released.

Step 2

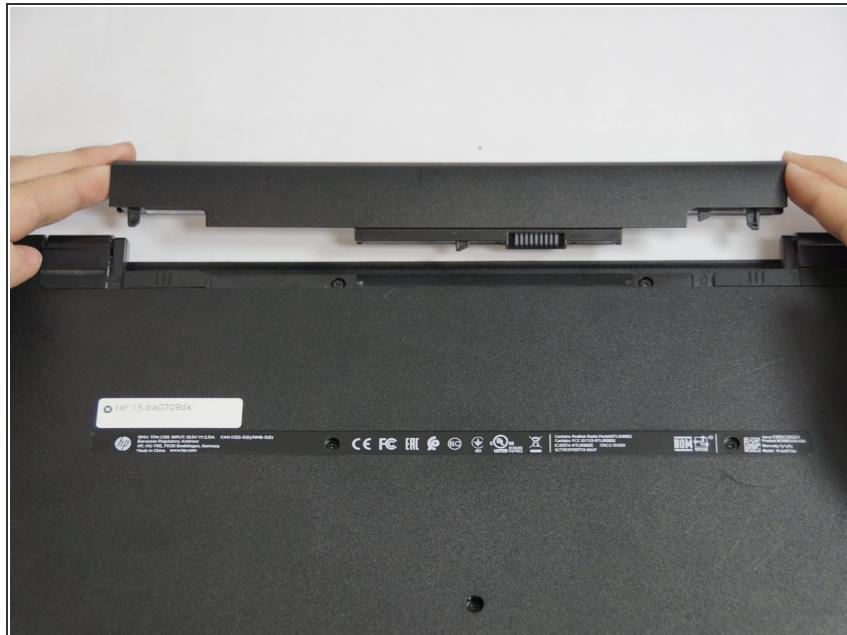

- Pull the battery out of its slot.

⚠ Be careful not to damage any of the connectors in the process.

Step 3 — Back Cover



- Place the laptop on a clean, flat surface with the bottom side facing up.

Step 4



- Using a Phillips Head Screwdriver, remove the screws anchoring the bottom casing.

i **Note:** Make sure to keep track of the screws once they have been removed.

Step 5



- Locate the screws about 1 inch from the battery release tabs and use a Phillips Head Screwdriver to remove these screws.

i **Note:** Place these newly removed screws with the ones removed in Step 2.

Step 6



- Locate the rubber friction pads on the top corners of the laptop. Pry the pads from the laptop and place them off to the side
- Removing the friction pads will reveal two more anchoring screws.
(i) Note: The adhesive keeping the pads on the laptop will weaken once doing this, but it is necessary to removing the bottom cover of the laptop.

Step 7



- Remove disc reader.

i **Note:** If all screws are removed it should slide out easily.


Step 8



- Use a plastic prod to pry the back cover off the laptop.

⚠ Be careful not to damage the laptop while prying.

Step 9 — Speakers

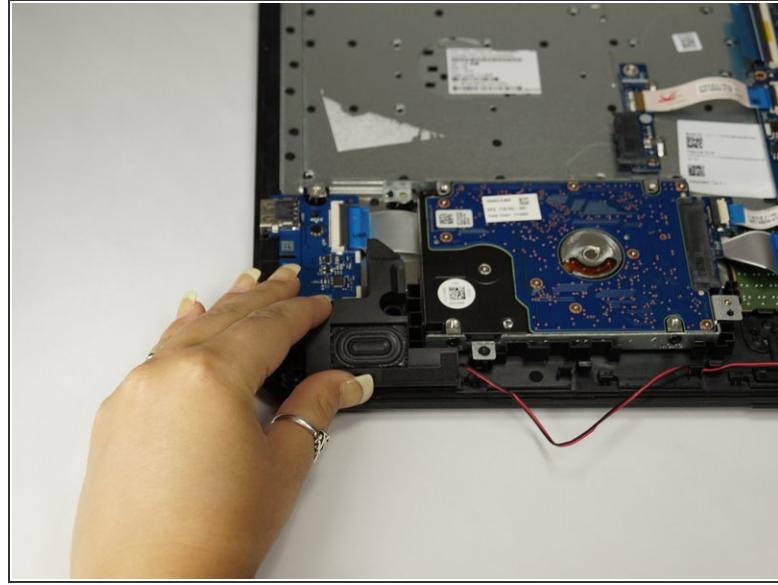



- Locate the speakers on the right and left on the bottom on the back of the device.

Step 10



- Pull up on the left speaker to pop it off.
- Do the same on the right speaker to pop it off.

Step 11

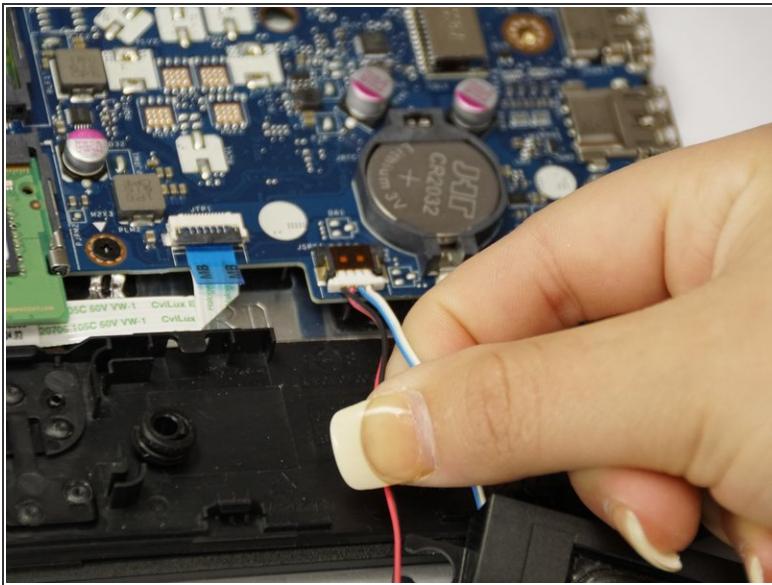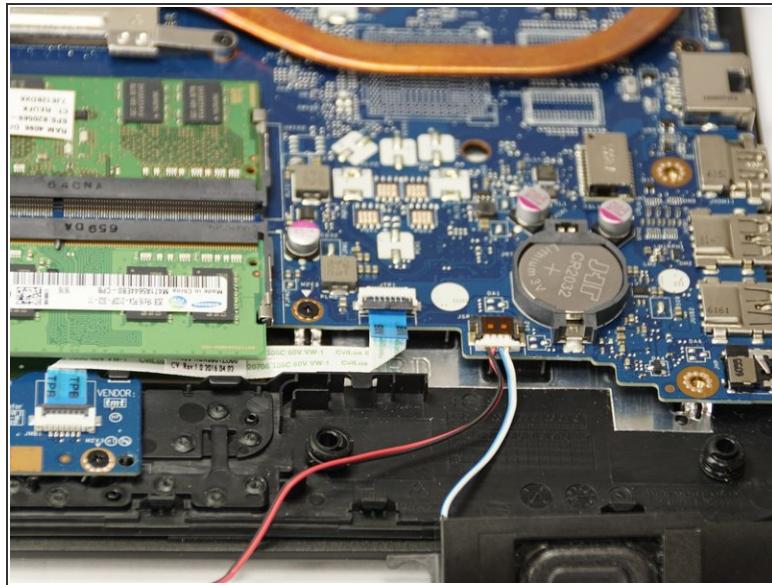

- Pull out the speaker outlet.

⚠ Caution: Be careful not to damage cords while doing so.

To reassemble your device, follow these instructions in reverse order.