



HP 15-bs015dx Teardown

Teardown of the HP laptop model 15-bs015dx with access to hard disk, RAM, CPU and motherboard.

Written By: Marcos Mora



INTRODUCTION

I teach you how to open the laptop to access and change the RAM, hard drive or whatever you need.

Step 1 — Remove the Battery - Part 1




- Put the laptop facing down
- Move the left battery safe lock to the right

Step 2 — Remove the Battery - Part 2




- Slide the right battery safe lock to the left
- This lock is harder than the previous, with this the battery should pop-up.

Step 3 — Remove the 6 visible screws

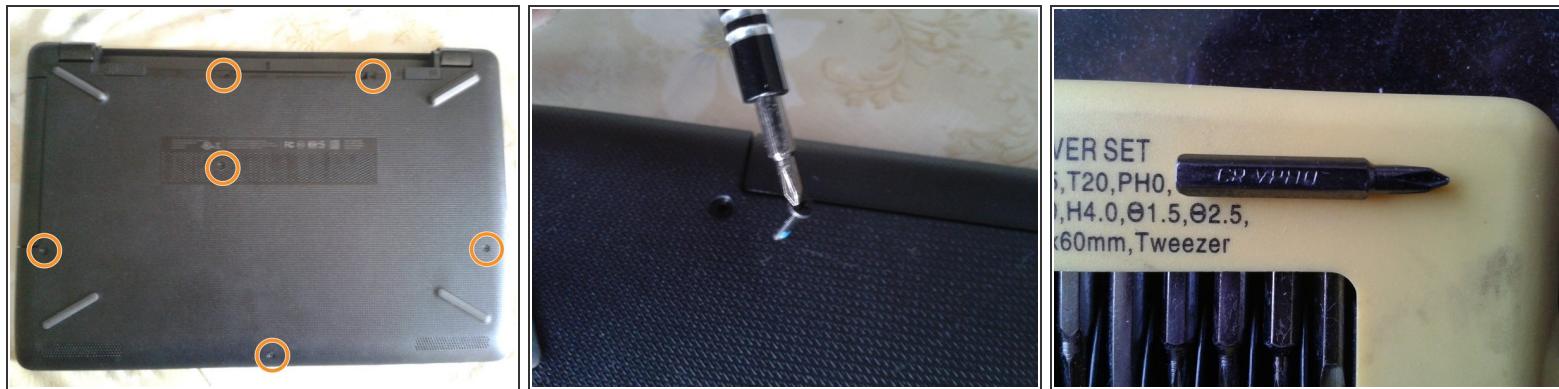



- Use a Philips 0 screwdriver

Step 4 — Remove the 4 hidden screws

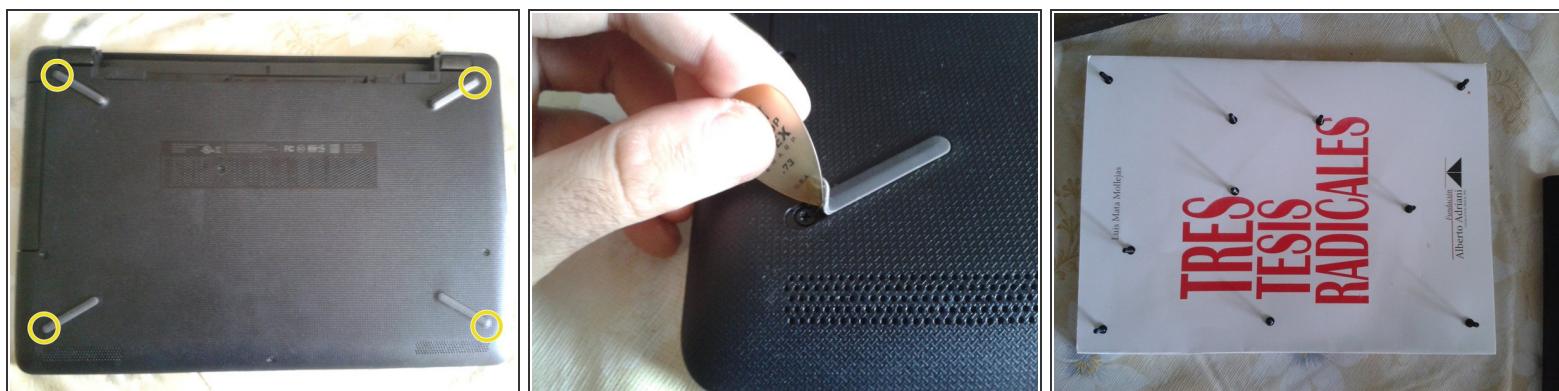


- Use a straw to take off just enough of the rubber feet of the 4 corners
- Use a Phillips screwdriver 0
- Replace each rubber foot in place after removing the screws
- You will have a total of 10 screws

Step 5 — Remove the DVD unit

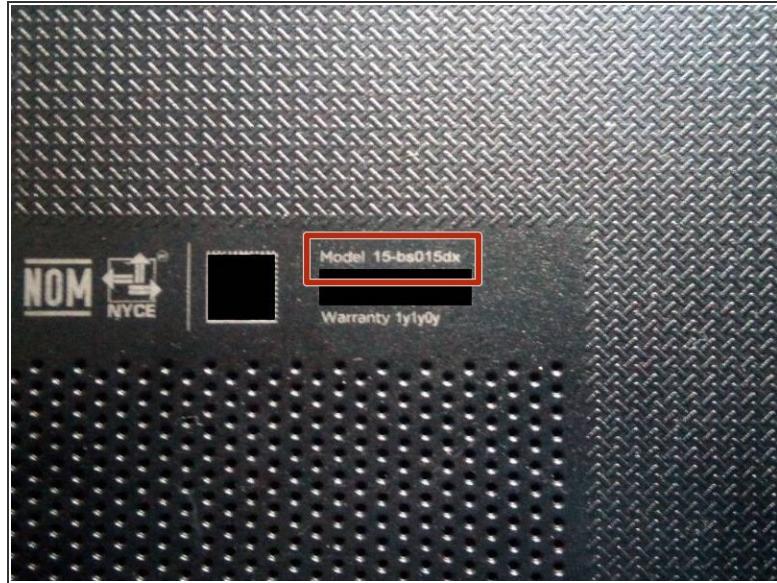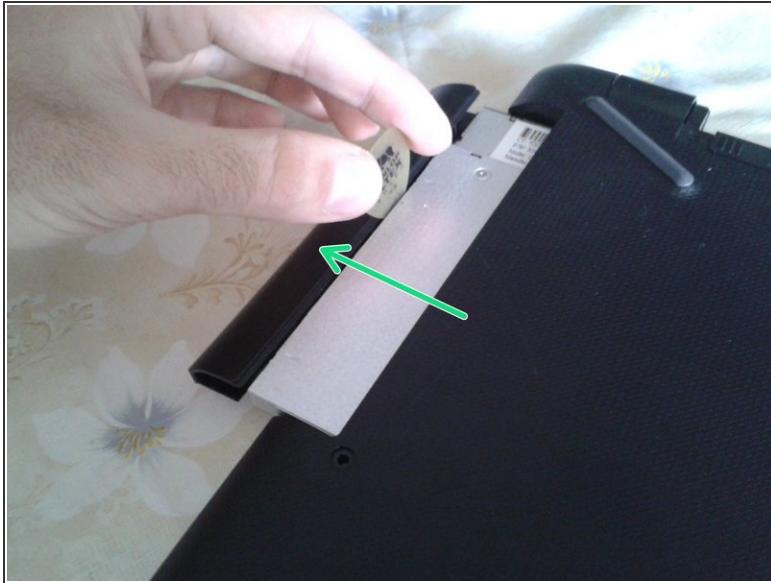

- It will go out easily with or without a straw
- You can check the model number

Step 6 — Separate the pieces of the chassis part 1

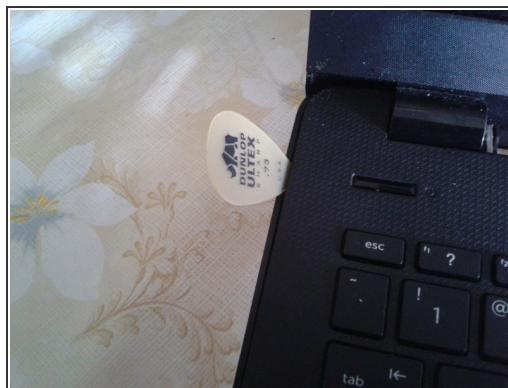

- Flip the laptop and open it
- Use a plastic tool or a straw to separate the pieces of the chassis

Step 7 — Separate the pieces of the chassis part 2



- Flip the laptop and separate the inferior cover of the chassis
- Hard Drive 2.5" SATA
- 2 RAM memory slots type DDR4 SO-DIMM
- CPU Intel 7th generation
- Active heat sink (fan)
- Wireless card
- Watch battery, 3V. CR2030

To reassemble your device, follow these instructions in reverse order.