



# HP 15-d076nr RAM Replacement

Replace insufficient or damaged RAM on the HP 15-d076nr to improve computer speed and performance.

Written By: Amy Weed



## INTRODUCTION

This guide details how to replace the RAM on an HP 15-d076nr. If your laptop is slow, this may be the guide for you.

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

### PARTS:

- [DDR3L SO-DIMM RAM](#) (1)

**Memory**  
*Part # 691740-001, or equivalent.*

## Step 1 — RAM



- Orient the laptop upside down so that the back of the laptop, where the battery is located, faces away from you.



## Step 2



- Locate the small screw on the panel at the center of the laptop.
- Loosen the small screw using a Philips # 1 screwdriver.


***i*** The screw does not come free from the panel. It only needs to be loosened enough so that the panel can be lifted/pried.

## Step 3

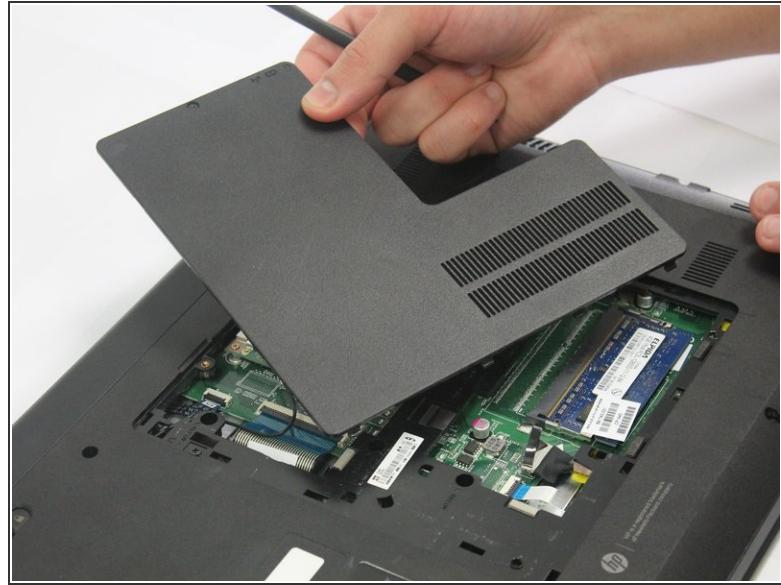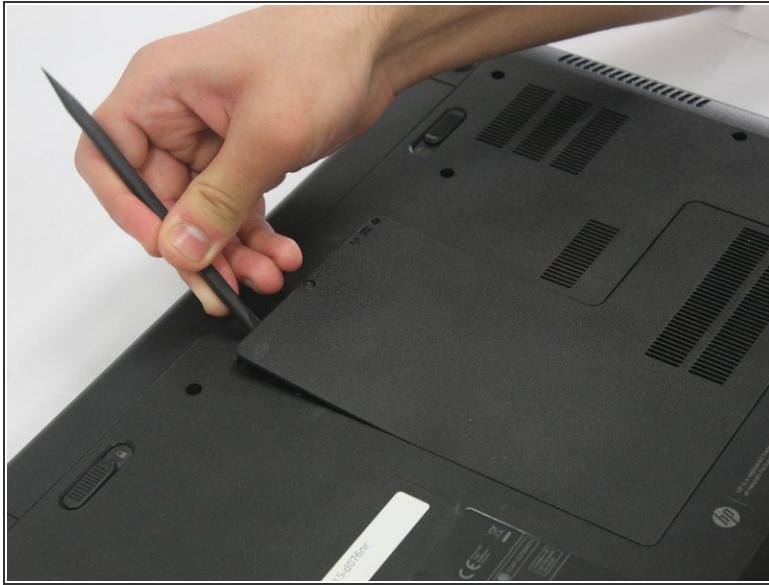

- Carefully pry the middle panel up using a plastic spudger or other prying tool .
- Pull the panel away from the laptop and set it off to the side.

## Step 4

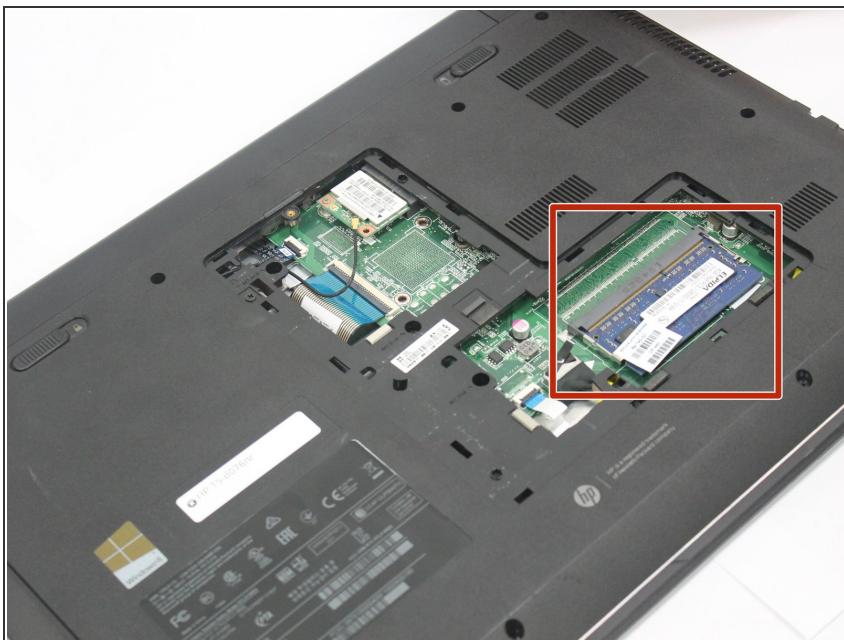

- Locate the RAM in the exposed area.

## Step 5



- Locate the latches on the RAM.
- Slide the latches away from the RAM using a plastic spudger.
- *(i)* The RAM might spring out.

## Step 6



- Remove the RAM.

To reassemble your device, follow these instructions in reverse order.