



HP 15-da0012dx Battery Replacement

How to replace the battery in a HP 15-da0012dx.

Written By: Xavier Hung



INTRODUCTION

If the laptop only powers on when the power adapter is plugged in, use this guide to remove and replace the battery. You will need a plastic opening tool and a Phillips #1 screwdriver head. You will not need to perform any difficult steps, but separate the back cover from the laptop carefully.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)


Step 1 — Battery



 Power down your laptop before proceeding.



- Turn your laptop over so that the Laptop Identification Tag on the underside of the laptop faces the ceiling.

Step 2

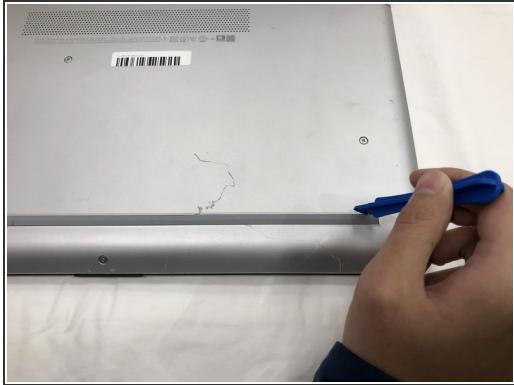


- Using the plastic opening tools, peel back the plastic feet from the underside of the laptop.

Step 3

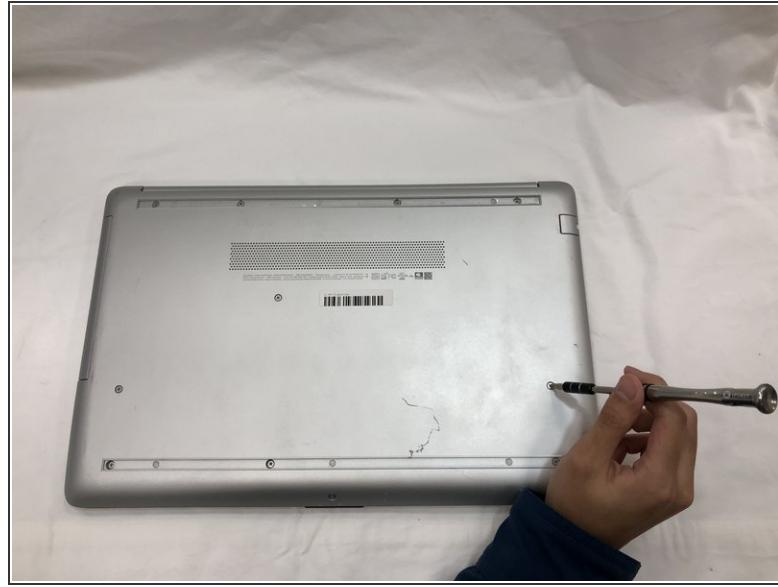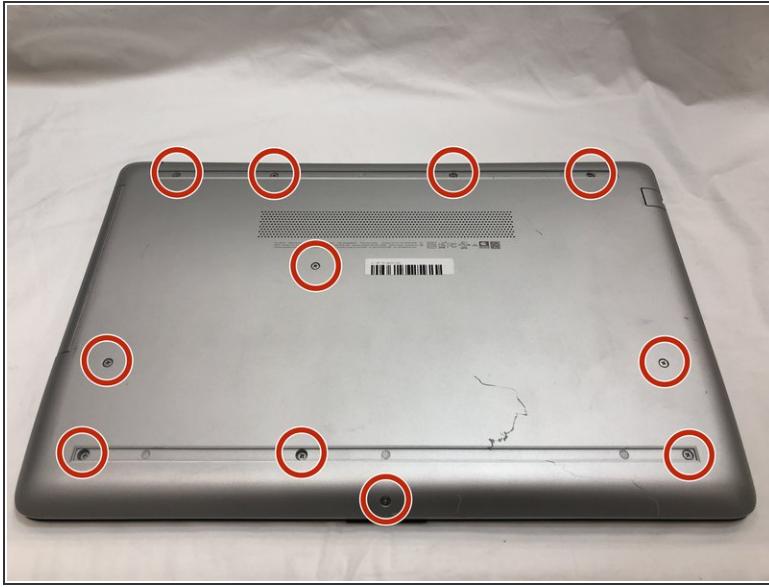

- Using a Phillips #1 screwdriver, remove the eleven 9.0 mm screws holding the back cover in place.

Step 4

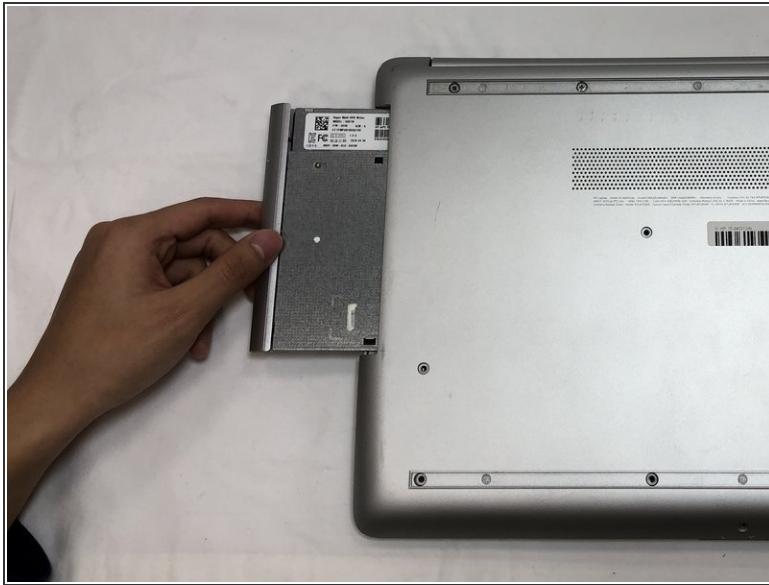

- Slide the optical drive out of the computer.


Step 5



- Flip the computer over and open the screen.
- Start from a corner and run the plastic opening tools along the edge of the back cover.
- After the cover has been completely loosened around the entire perimeter, close the screen and flip the computer over.
- Gently pry back the cover starting from the middle, bottom edge.

 Make sure not to bend or crack the plastic cover.

Step 6

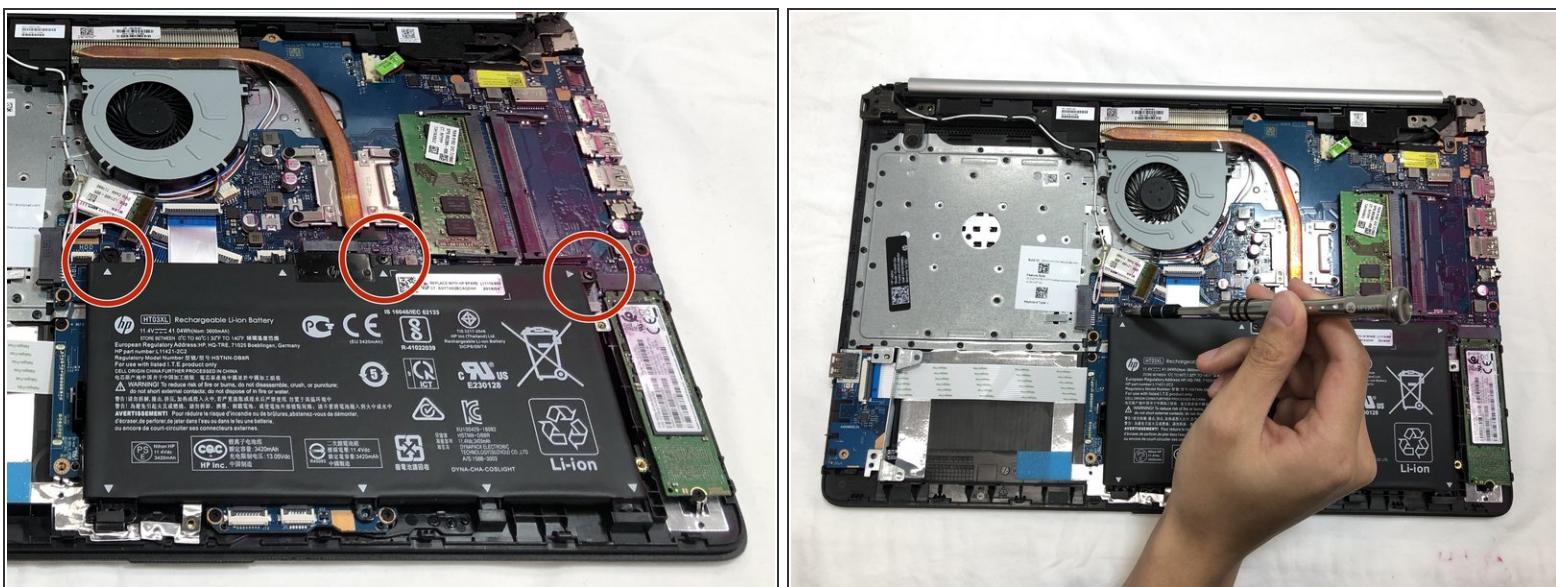

- Using the Phillips #1 screwdriver, remove the three 8.0 mm screws holding the battery in place.

This document was generated on 2020-01-21 03:49:30 PM (MST).

Step 7



- Remove the battery by tilting the top of the battery towards you and pulling the battery away from the mounting tabs.

To reassemble your device, follow these instructions in reverse order.