



HP 15-f009wm RAM Replacement

Upgrade the RAM in your HP 15-f009wm notebook computer.

Written By: Alex Birchler



INTRODUCTION

This guide explains how to remove the RAM chip from the HP 15-f009wm notebook computer. This could be done to either replace a malfunctioning chip or to upgrade to a larger chip.

TOOLS:


- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Turn laptop upside down.
- Flip the lock switch to the unlocked setting.

Step 2

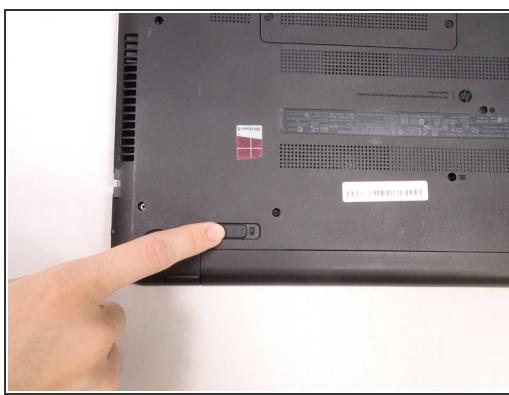

- Flip the release switch.
- Once the flip is switched, the battery should pop out.

Step 3



- Slide the battery out.

Step 4 — RAM



- Remove the two Phillips #1 screws from the RAM panel.

Step 5




- Use the plastic opening tool to pop the panel off.

Step 6



- Release the tabs on each side of the chip by simultaneously pushing each tab away from the RAM.
- These tabs lock the chip in place and releasing them will cause the chip to "pop" up.

Step 7

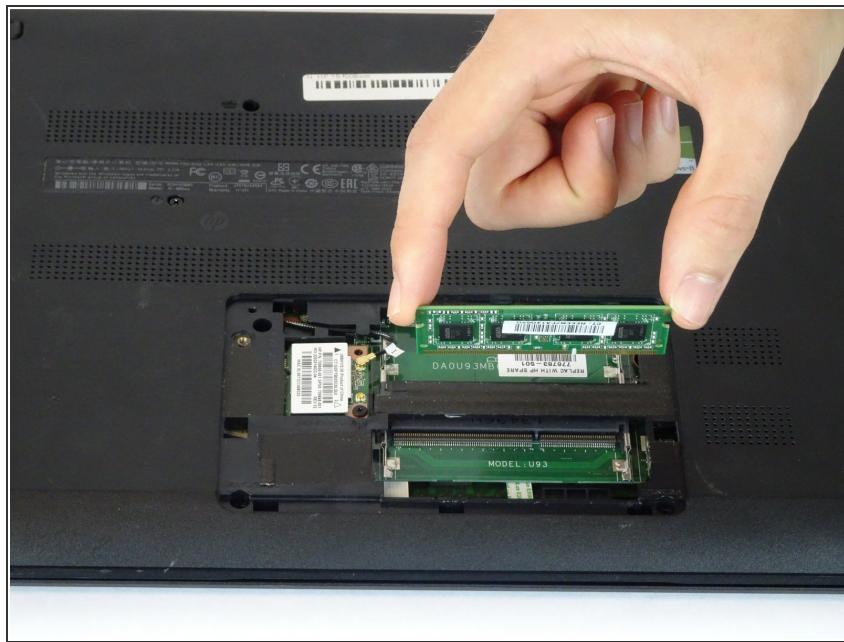

- Remove the RAM chip from the laptop.

To reassemble your device, follow these instructions in reverse order.