



HP 15-g020dx Speaker Replacement

Use this guide to replace the speaker in your HP 15-g020dx.

Written By: Yisong Zou



INTRODUCTION

This guide will walk you through step by step on how to replace the speakers. This can solve the problem that the speaker doesn't produce any sound. Is the speakers on your computer not working and you found out it costs a lot to have them fixed? Well you are in luck. The following guide consist of the steps to remove the speakers from the computer while also showing you the pre-requeste steps to be able to remove the speakers. This guide allows you to replace your speakers yourself for free rather than having to pay someone to do it.

TOOLS:

- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Flip the laptop over so that the bottom is facing you.
- Slide the latch towards the center of the laptop so the unlock emblem appears.

Step 2



- Place your finger on the left latch and slide it towards the center of the laptop to remove the battery.

Step 3

- Remove the battery from the laptop.



Step 4 — Keyboard

- Use the plastic opening tool to lift the panel with the keyboard.




Step 5



- Take the keyboard and the section of the panel surrounding the keyboard apart.

Step 6

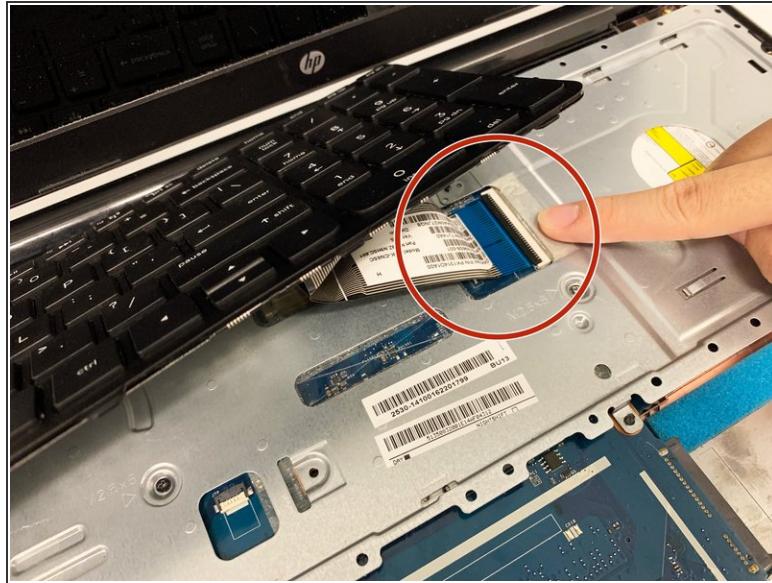

- Lift the flip covering the connection port and remove the connecting strip to detach the keyboard from the motherboard.

Step 7 — Speaker




- Detach the clip on the speaker from the port on the motherboard.

Step 8




- Pull out the wire connecting the two speakers under the motherboard.

Step 9

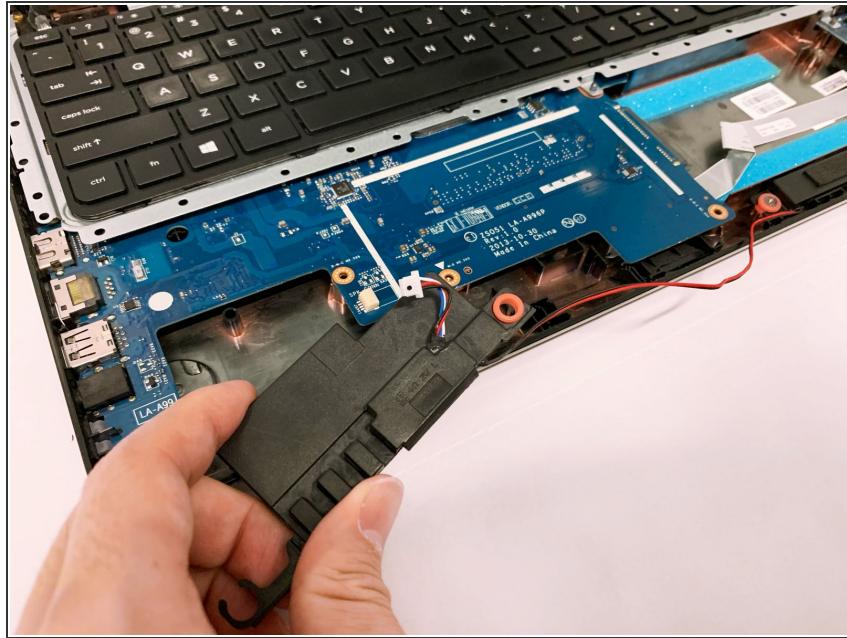

- Pull the left speaker out and hold the rubber ring.

Step 10

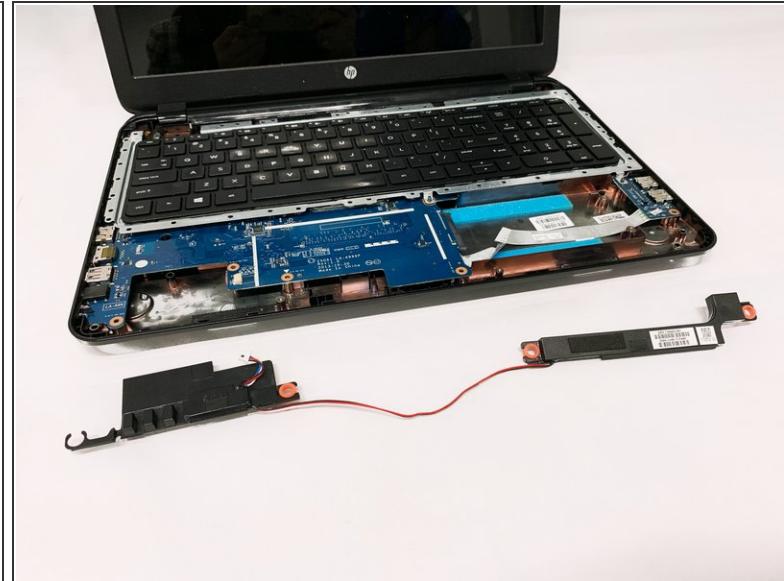

- Pull the right speaker out and hold the rubber ring.