



# HP 17-x173dx Battery Replacement

Use this guide to replace the battery in your HP 17-x173dx.


Written By: Hunter Kerr



## INTRODUCTION

If your laptop battery consistently has low power, is hot to the touch or cannot hold a charge you may have a faulty or old battery that would need to be replaced. This guide will show you how to replace the battery in a few simple steps.

## Step 1 — Battery

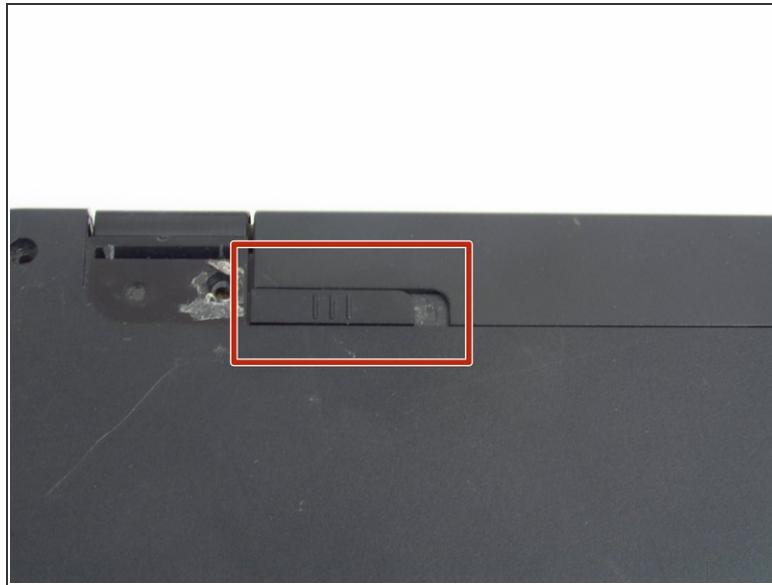

- Begin by sliding the left tab to the unlock position

## Step 2



- Push each of the two tabs in the direction specified by the picture.

## Step 3



- Slide and hold the right tab to the left, while gently pushing out the battery with your thumbs

To reassemble your device, follow these instructions in reverse order.