




# HP 2000-427CL Battery Replacement

This guide teaches you how to replace the battery in an HP 2000-427CL laptop.

Written By: Joseph Sctbunio

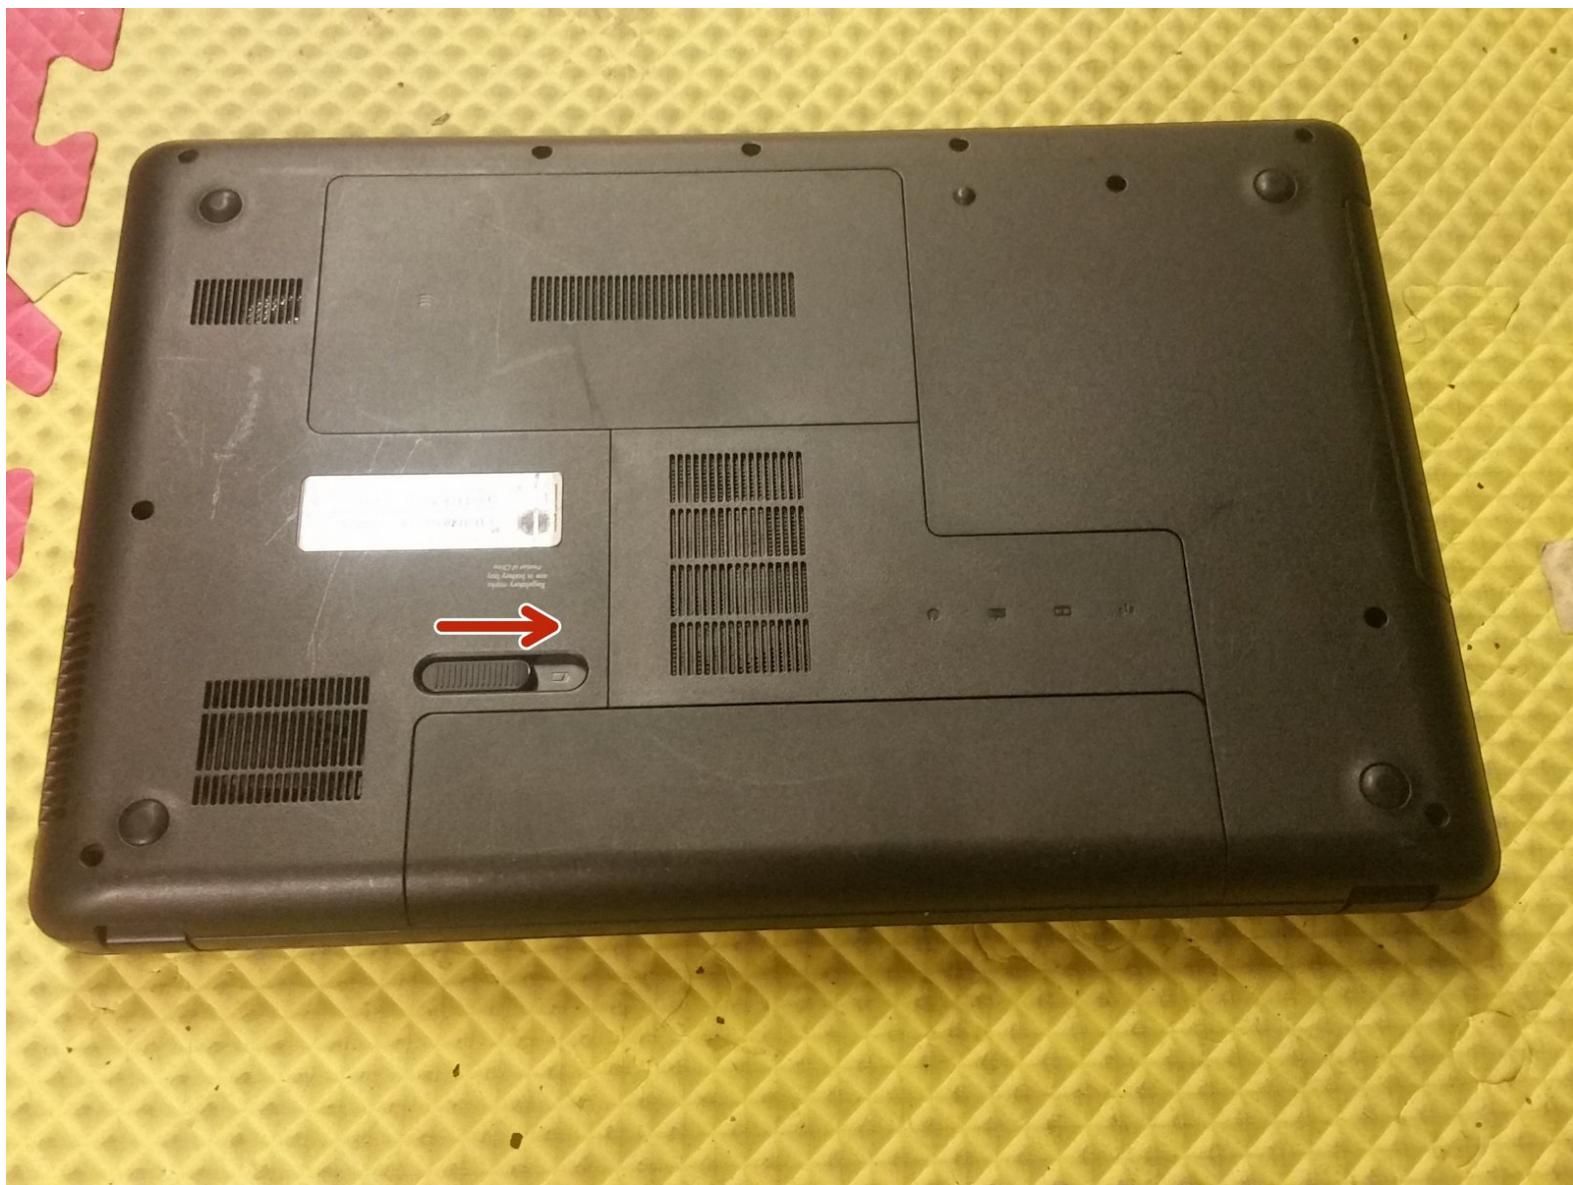

## Step 1 — Remove battery



- With the battery facing towards you, slide the latch to the right.
- Grab the battery as it lifts out of the laptop.

To reassemble your device, follow these instructions in reverse order.