



HP 7 PLUS 1301 Front and Back Camera Replacement

This guide will show you detailed step on removing and replacing the cameras on your HP 7 Plus 1301.

Written By: ahmed musleh



This document was generated on 2020-04-04 04:02:04 PM (MST).

INTRODUCTION

This guide will show you how to remove and replace the cameras on your HP 7 Plus 1301. This will include opening the back cover of your tablet, disconnecting both cameras and removing them. This guide will show you a detailed step by step process even if you have no experience in tablets and electronics. Please click on the links below to purchase the necessary tools needed for this project.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)


Step 1 — Front and Back Camera



 Make sure the device is off and not plugged in before starting.

- Using a Torx T5 screwdriver, remove the 3mm screws on all four corners of the device.



Step 2

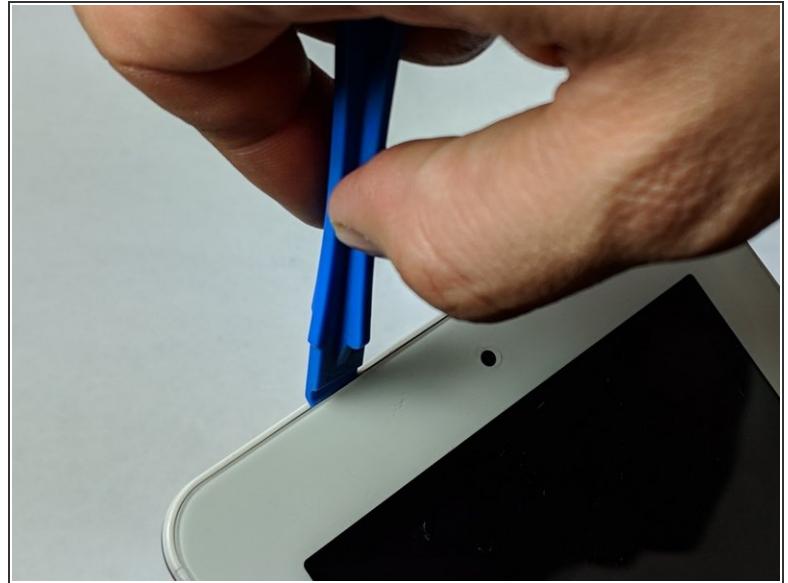

- Using the plastic opening tool, push in between the front, then slide it around.
- Slide the plastic opening tool all the way around the tablet to separate the back cover.


 Be careful when trying to remove the back as the screen can be damaged with excessive force.

Step 3

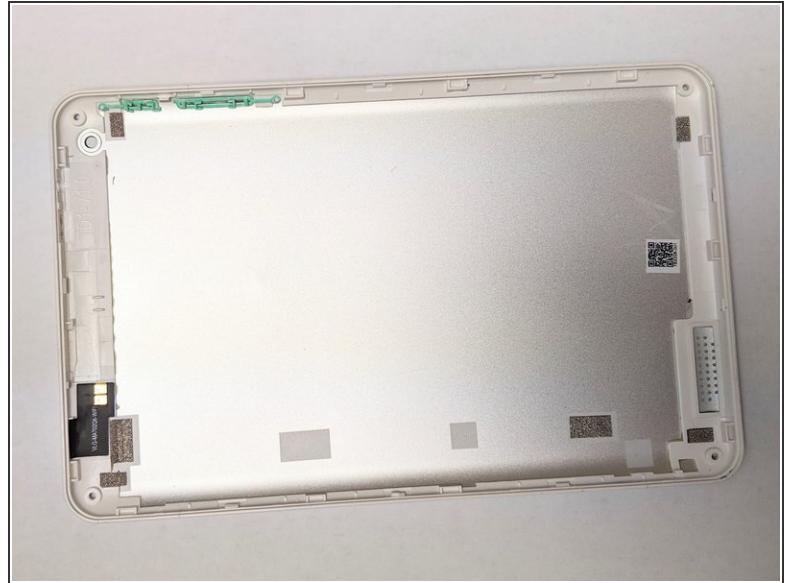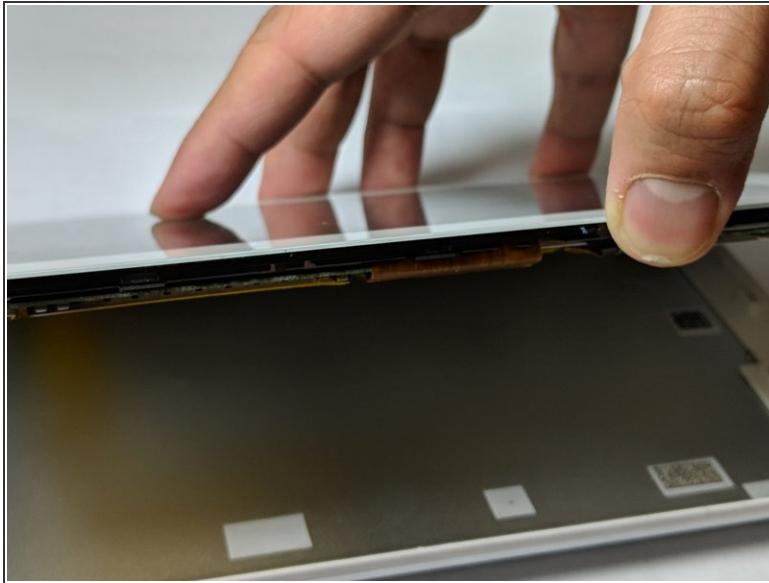


- Continue sliding the plastic opening tool around the tablet until the cover fully separates from the device.
- Remove the back cover.

Step 4

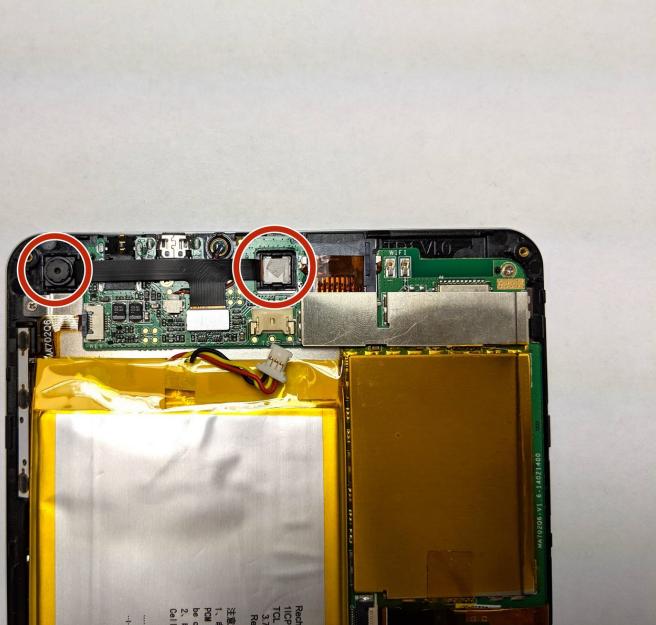

- Locate the front and rear cameras.


Step 5

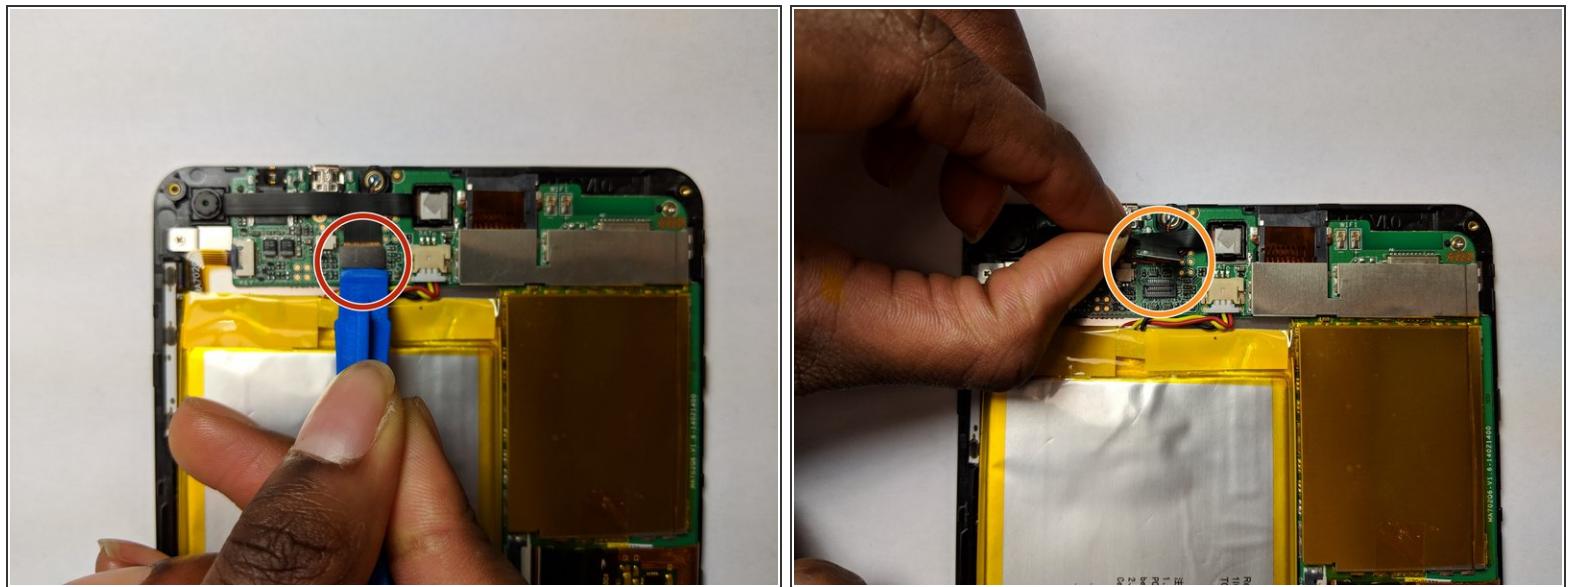

- Using the opening tool, locate the rectangular gray connector near the camera and gently release its connection.
- Lift the connector out and away from the board.


⚠ This will come out very easily so don't use much force.

Step 6

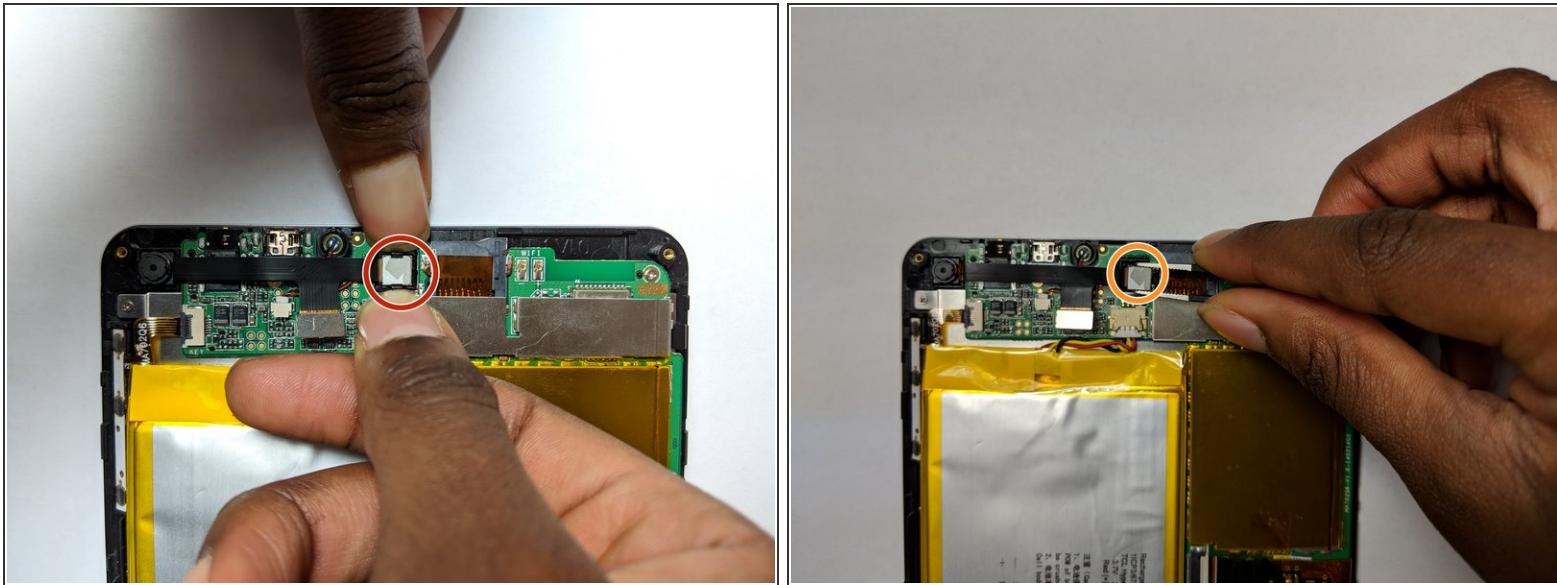

- Gently push the tabs on both sides until the front camera is loose.
- Using your blunt tweezers, lift the front camera gently away from the board.

Step 7

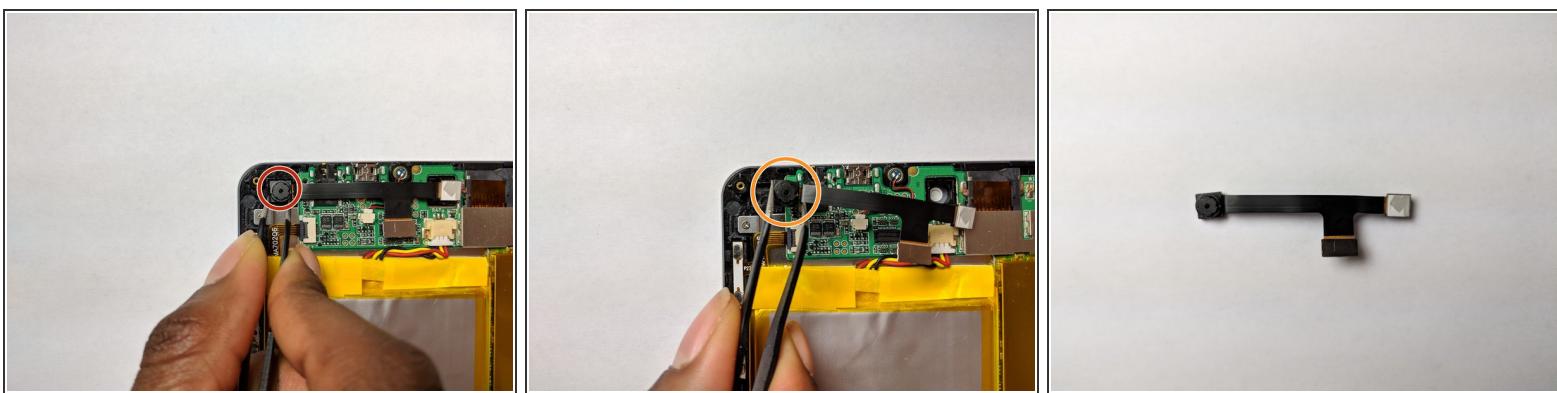

- Using your angled tweezers, gently pry out the back camera.
- The camera is held down with tape.
- Lift the back camera out of its socket and gently pull out both cameras.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-04-04 04:02:04 PM (MST).

