




HP 8 1401 Power/ Volume Button Board Replacement

In this guide, you will learn how to replace the power/ volume button board of your HP tablet.

Written By: Katie Presz

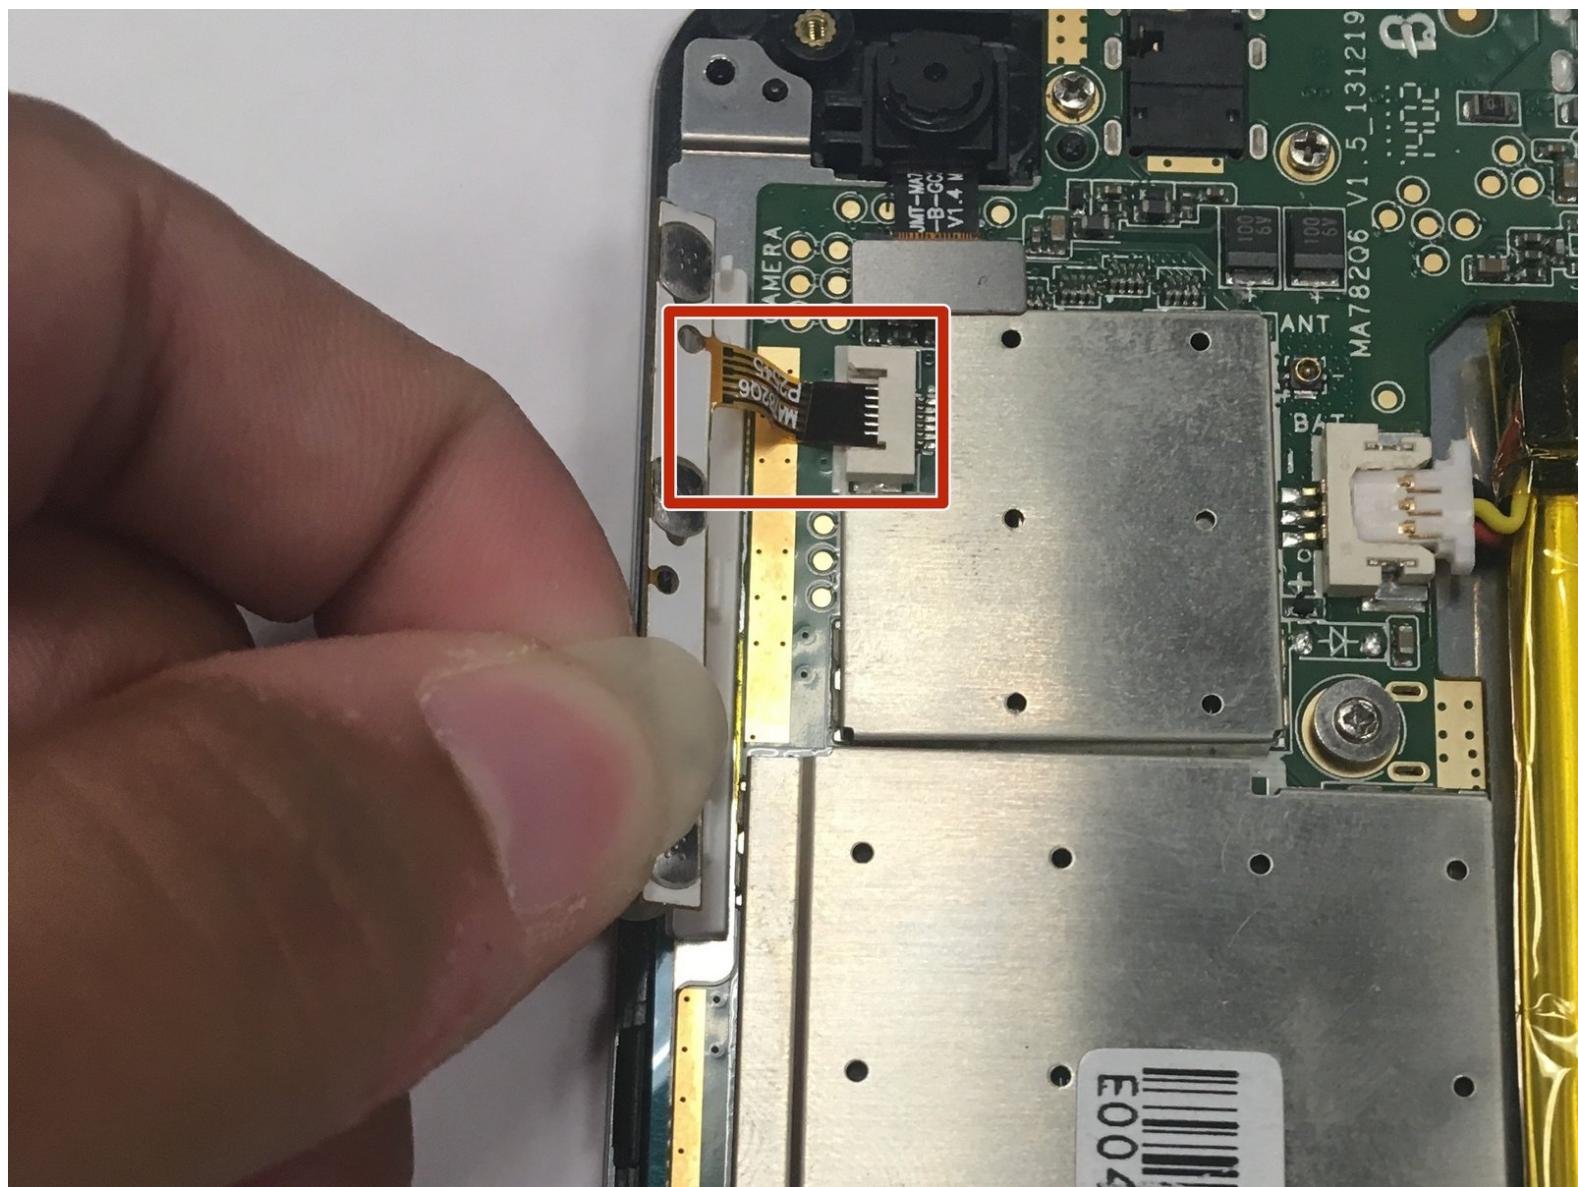


INTRODUCTION

This guide can help if your power or volume buttons are broken. The power/ volume board may not be completely attached to the control board so be careful when unhooking the clip.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [T4 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Back Panel

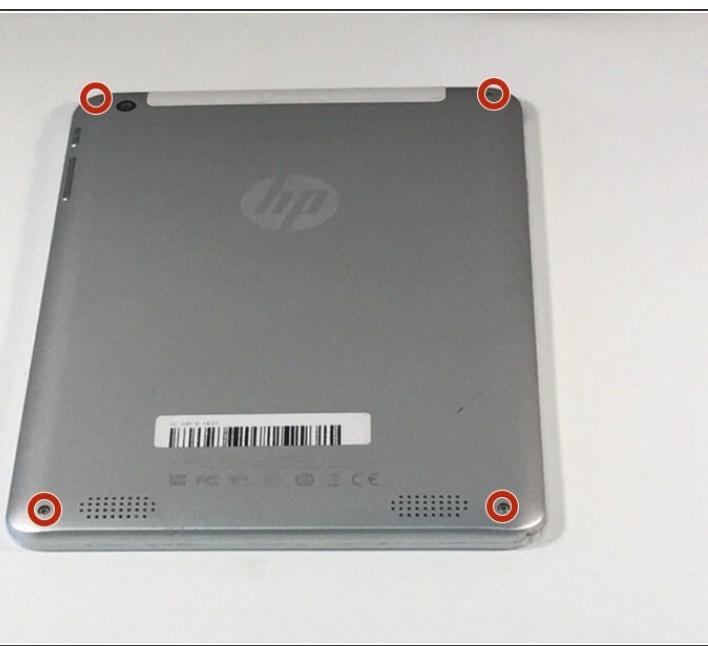

- Using a Torx T4 screwdriver, remove the four 5 mm screws on the back panel.

Step 2





- Insert the tip of a plastic opening tool in the seam between the front and back panels.

Step 3



- Slide the plastic opening tool around all edges of the device until the back panel detaches.
- Lift off the back panel.

Step 4 — Power/ Volume Button Board

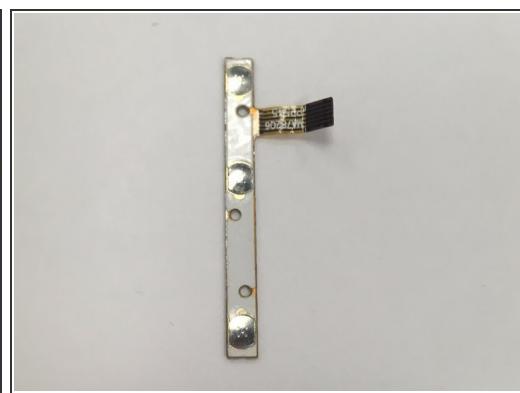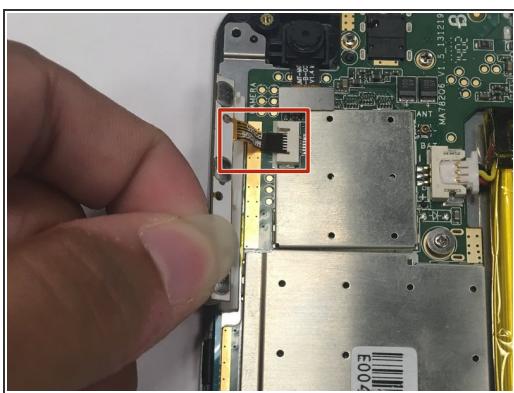

- Disconnect the power/ volume button board from the control board by pulling the ribbon cable out of the white connector. You can use tweezers or your fingers.

Step 5



- After removing the power/ volume button board, it should look like this.

To reassemble your device, follow these instructions in reverse order.