



# HP Chromebook 11 G3 Screen Bezel Replacement

Remove the Screen Bezel of the HP Chromebook 11 G3.

Written By: Rahul Goyal




## INTRODUCTION

This guide walks through removing the display assembly and opening the screen bezel. It requires removing the keyboard mount. It requires using a Phillips head screwdriver, a plastic opening tool, and a spudger to finish removal.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Keyboard Mount

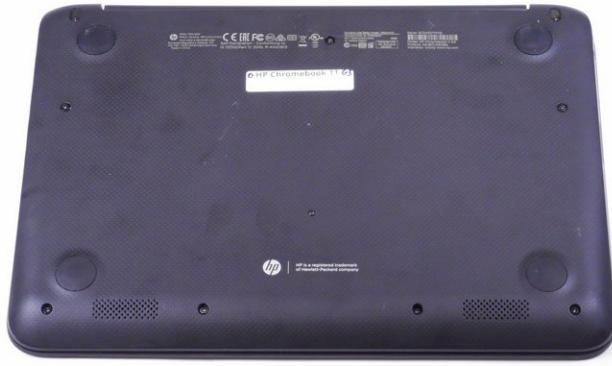

- Flip the laptop upside down so that the lid lies flat on the table.
- Remove the nine 6mm Phillips #00 screws that line the border.

## Step 2



- Remove the two rubber feet closest to the hinge using tweezers.
- Remove the two 6mm Phillips #00 screws revealed under these rubber feet.

*(i)* The rubber feet may tear while removal; preventing this can be difficult, but it won't harm the laptop. If desired, replace these rubber feet during reassembly.


## Step 3



- Flip the laptop so it is in the upright position.
- Open the lid.
- Unsnap the keyboard mount along the border of the laptop using a plastic opening tool.

*(i)* This may require more force than expected. Hearing loud clicks as the plastic opening tool slides along the seam is normal.

## Step 4

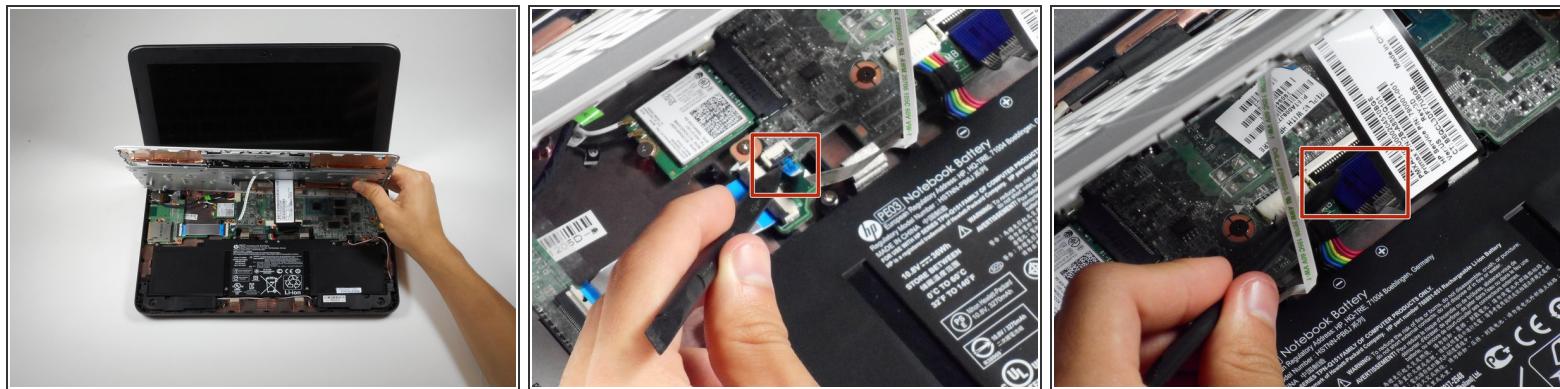

- Tilt the keyboard mount up.
- Use a spudger to flip up the two ZIF connector retaining flaps for the ribbon cables that connect the keyboard mount to the motherboard.
- Gently remove both ribbon cables.

## Step 5




- Lift the keyboard mount out of the laptop.

## Step 6 — Display Assembly



- Gently tug on the black and white wires connected to the Wi-Fi module to disconnect them.

## Step 7

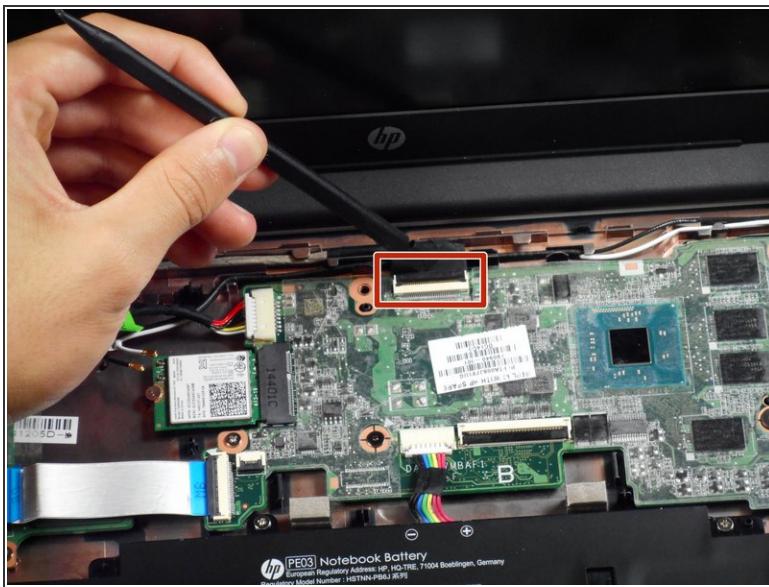

- Using a spudger, lift the ZIF retaining flap that secures the display's ribbon cable to the motherboard.
- Gently pull the ribbon cable out of its socket.

## Step 8



- Free the wire from the casing.

## Step 9



- Remove the two 6mm Phillips #00 screws located near the upper left and right corners of the hinge mounts.
- *Hold the lid so that it is folded slightly inwards while removing the screws so that the lid doesn't fall.*

## Step 10



- Rotate the lid to a 90-degree angle with the table.
- Shimmy the lid out of the laptop.

## Step 11 — Screen Bezel



- Use the plastic opening tool to pry the left and right side of the top of the lid, and proceed inwards from the sides.

*(i)* Do not attempt to remove the entire frame; this isn't necessary for removing the camera.

**⚠** Do not pry at the center of the lid; this may damage the camera inside.

To reassemble your device, follow these instructions in reverse order.