



# HP Chromebook 11-2210nr LCD Screen Replacement

To remove and or replace a faulty LCD Screen according to HP Chromebook 11-2210nr device.

Written By: Kimberly Rodriguez



## INTRODUCTION

This guide will show you how to safely remove a damaged or defective LCD screen for replacement according to a HP Chromebook 11-2210nr.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Metal Spudger](#) (1)
- [Tweezers](#) (1)


## Step 1 — LCD Screen



- Remove adhesive tabs using fine point tweezers or a metal spudger.

*(i)* These adhesives are typically located at the bottom left and right corners of the screen.

## Step 2

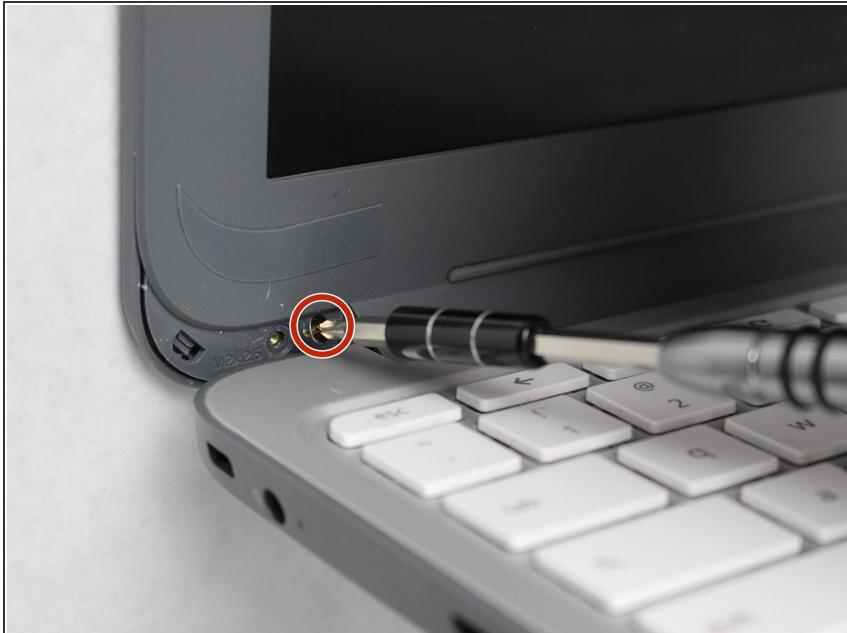

- Remove the one 3 mm screw located underneath both adhesive layers using a Phillips #0 screwdriver.


## Step 3



- Using a metal spudger, gently pry the front plastic frame (or bezel) off of the device by inserting the tool along the inside edge of the bezel.
- Completely open the screen as far as possible to remove the bottom edge of the bezel from the laptop.

***(i)*** Be sure to disconnect the bezel from all the way around the screen before completely removing.

## Step 4

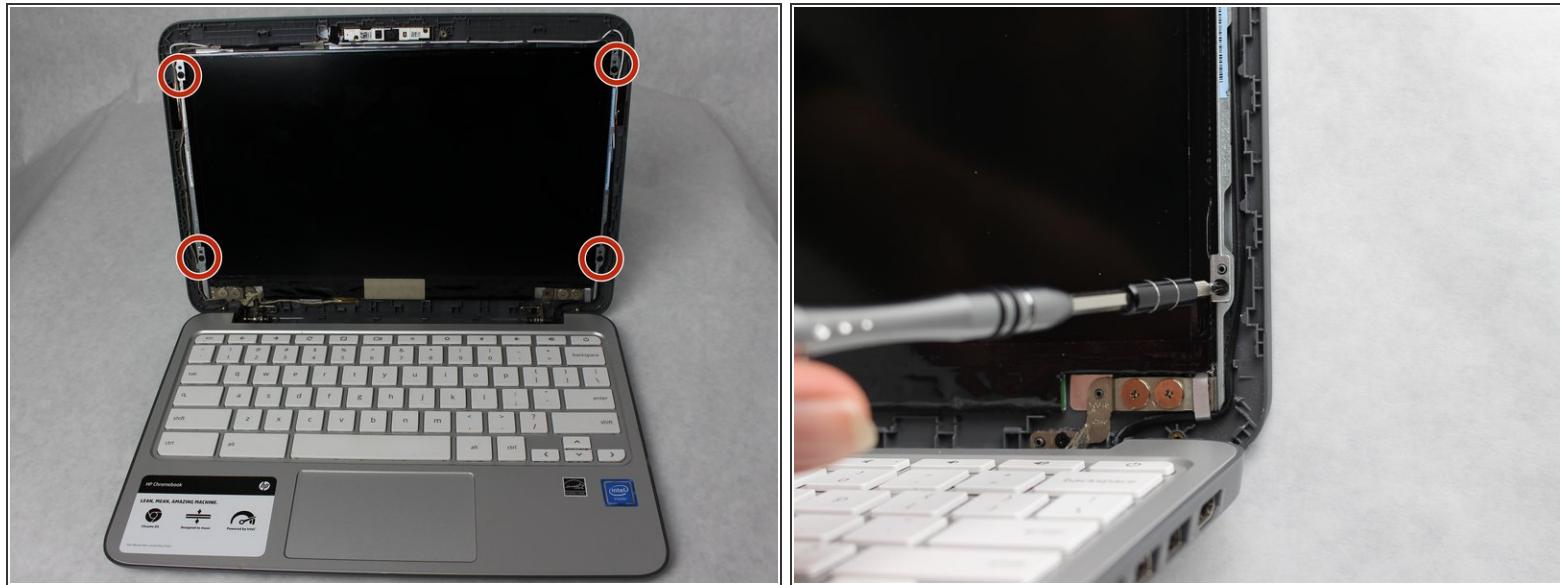

- Remove the four black 3 mm screws along the left and right sides of the LCD screen using a Phillips #0 screwdriver.

## Step 5



- After removing all screws, gently lower the LCD screen onto the keyboard.

 The LCD screen will not be completely disconnected from the laptop just yet.

## Step 6



- Gently use the spudger to pry off the tape on top of the gold chip. You may also use your hands to gently remove the tape.

## Step 7



- Remove the display cable by gently sliding out the cable away from the LCD screen.

*(i)* This action disconnects the LCD screen from the rest of the device, allowing it to be completely removed.

To reassemble your device, follow these instructions in reverse order.