



# HP Chromebook 14 G5 Touch Board Replacement

In this guide, we are going to show how to replace Touch Board in your HP Chromebook 14 G5 laptop.

Written By: LIU, PO-KANG



This document was generated on 2020-04-05 06:18:06 PM (MST).

## INTRODUCTION

There is currently no repair documentation for the HP Chromebook 14 G5 on iFixit—but since the HP Chromebook 14 G5 has such a large number of users, there is a considerable amount of repair information elsewhere on the internet, e.g. videos on Youtube. However, those repair videos can either be ambiguous or be hard to follow. We feel that we can provide a central repair hub for the HP Chromebook 14 G5 on iFixit and provide repair guides that will be written and easy for the average consumer to use.

In this guide, we are going to use words and photos to show the steps of replacing the motherboard.

If your HP Chromebook 14 G5's touch board cannot work properly, you most likely have a dead touch board, which requires replacement.

The touch board gives you the ability to turn almost any material or surface into a sensor and comes pre-programmed and ready to use.

Small parts can cause danger. If some small part is swollen, be sure to take appropriate precautions as soon as possible.

Make sure to power down your device before you begin.

### TOOLS:

- [Metal Spudger \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)

## Step 1 — Touch Board




- Remove nine 2.5mm screws embedded in the back cover using the Phillips #0 screwdriver.

## Step 2




- Open the back cover using a spudger.

## Step 3

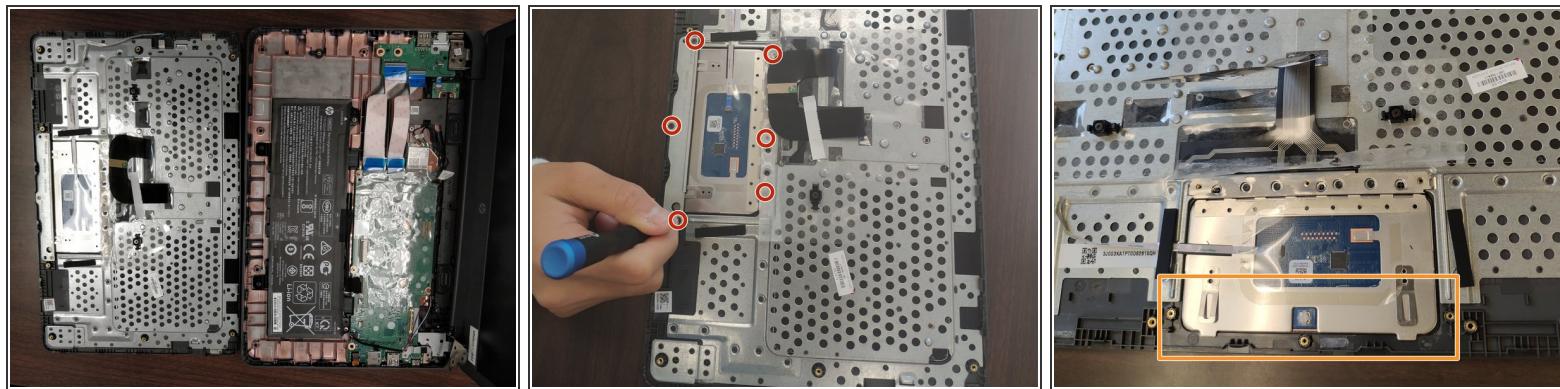

- Remove the six screws over the touch board using the Phillips #00 screwdriver.
- Remove the small protection piece of the touch board.

## Step 4

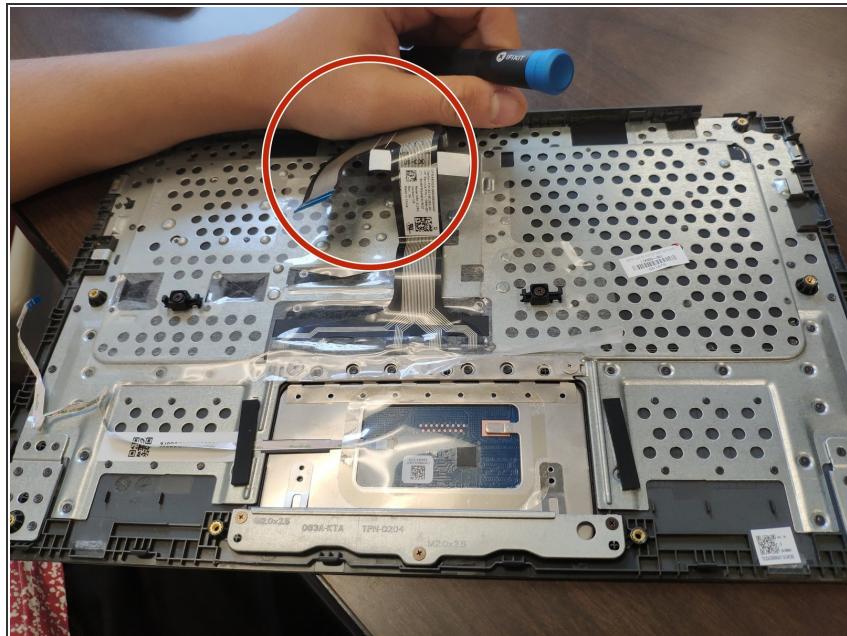

- Disconnect the FFC.

## Step 5



- Remove the trackpad from the device.

We omitted some photos of reassembling the device. For this part, follow these instructions in reverse order.