




# HP Chromebook 14 LCD Screen Replacement

Replacing the LCD Screen on a HP Chromebook 14-SMB.

Written By: Mario

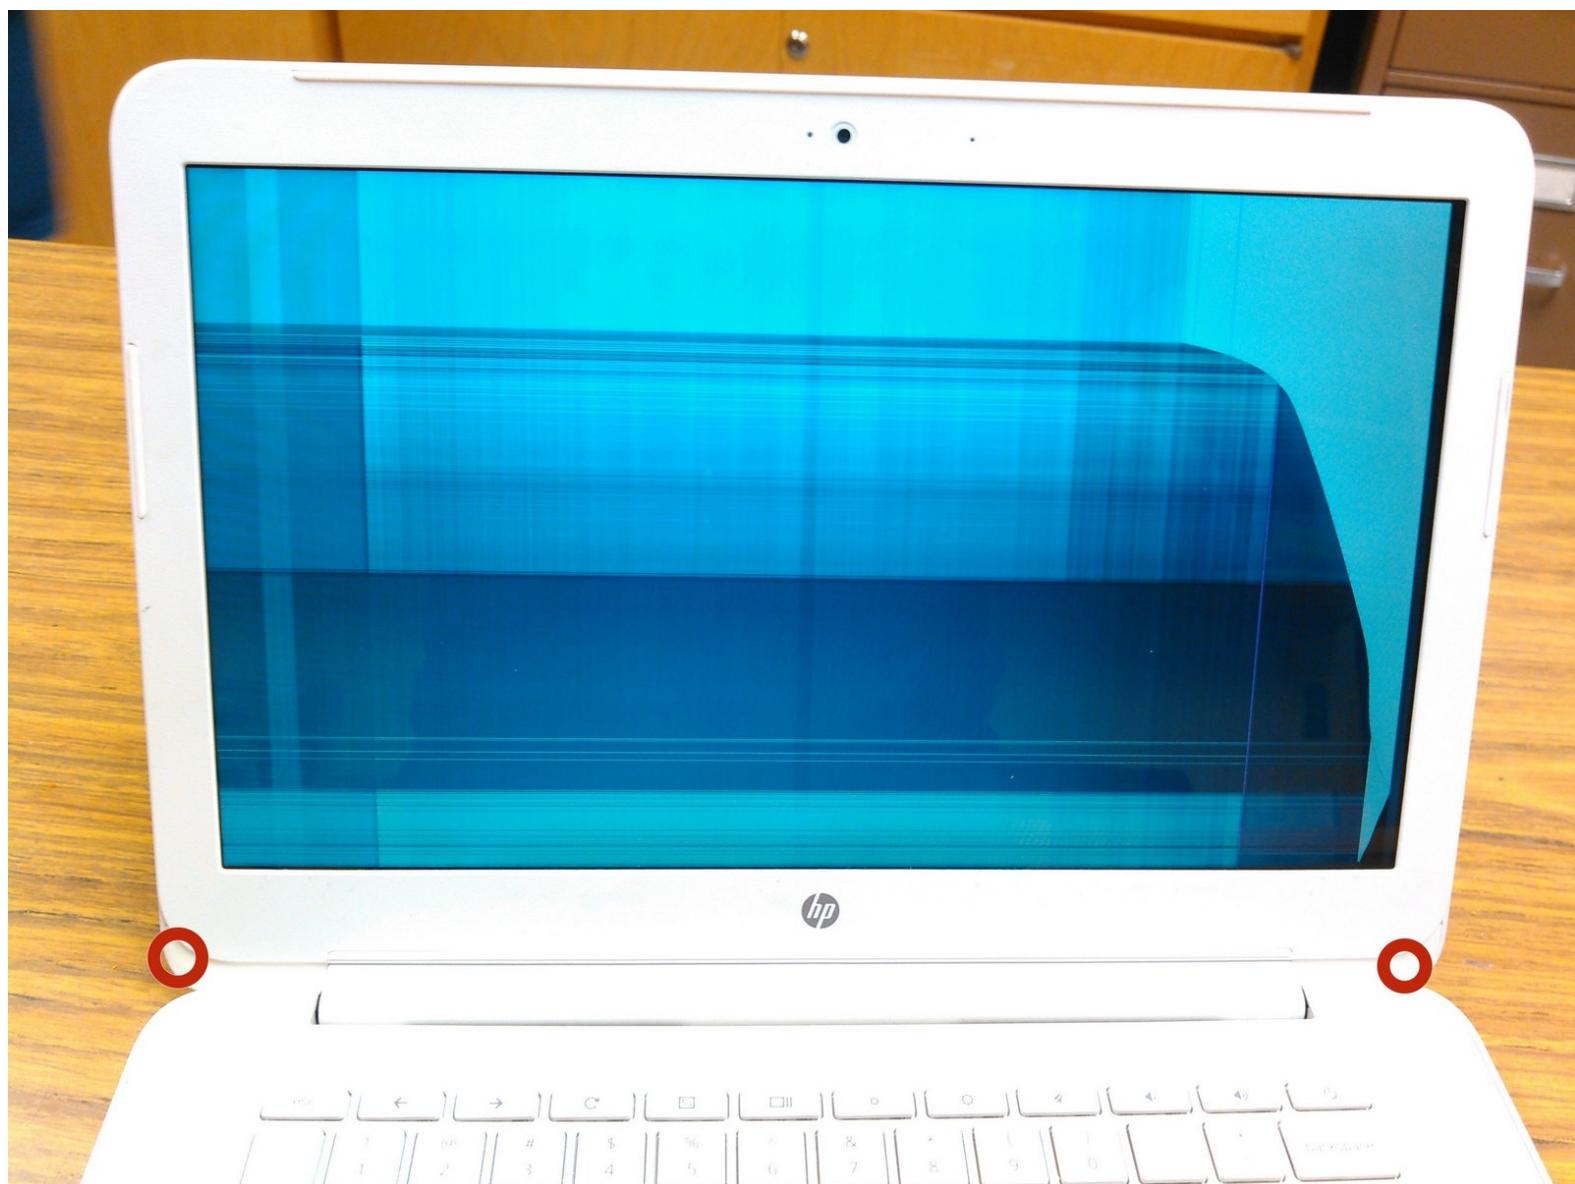

## INTRODUCTION

Replace a cracked or faulty display on your HP Chromebook 14.

### TOOLS:

- Phillips #1 Screwdriver (1)
- Spudger (1)

### PARTS:


- HP Chromebook 14" LCD Screen (1)

## Step 1 — Nylon Covers





- Pry up the nylon covers at the lower left and right of the display to reveal two Phillips head screws.

## Step 2 — Remove The Screws. That we Just Exposed.

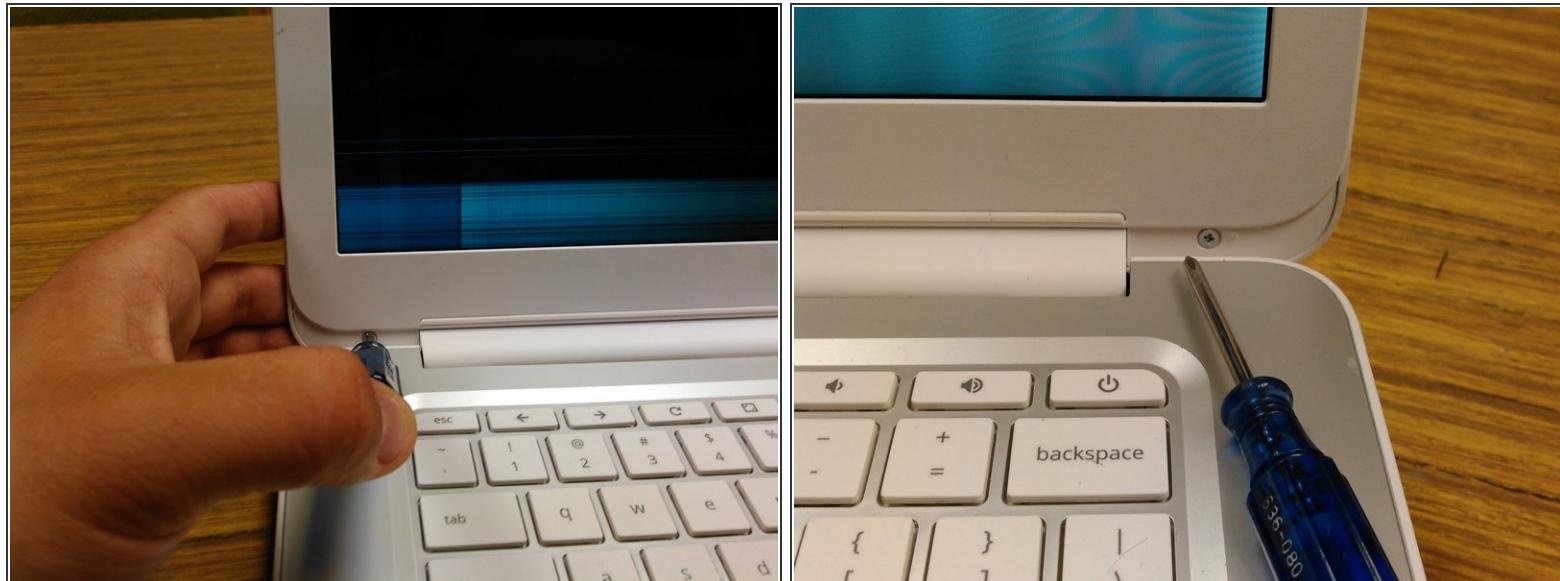

- Remove the two screws.

## Step 3 — Pry & Remove Screen

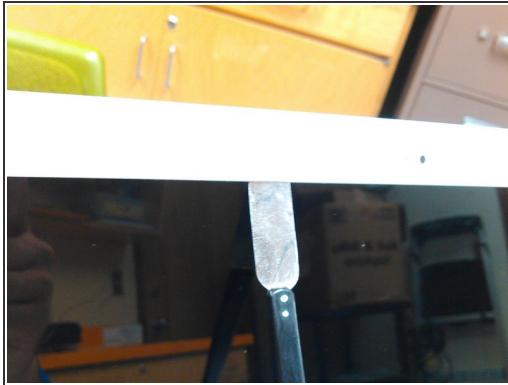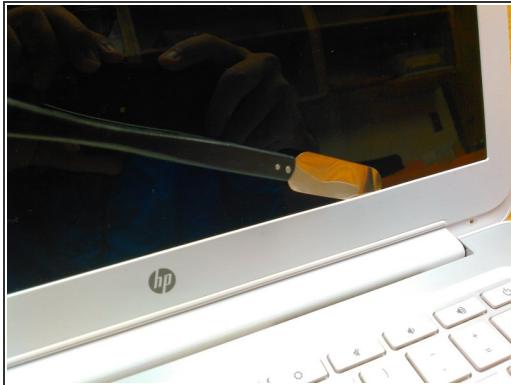

 Be careful when prying not to damage the bezel.

- Use a spudger or other pry tool to pry up the bezel from all sides.
- Once all the clips are free, pull the bezel from the bottom.

## Step 4 — Remove Four Phillips Screws Holding LCD Panel



- Remove the four screws securing the display panel.

## Step 5 — Disconnect Connector/Ribbon From LCD Panel



- Let the display panel rest on the keyboard.
- The highlighted area is taped to the back of the display panel. Pry up to free it.

 Be careful not to damage the connector—pull it back gently to disconnect.

To reassemble your device, follow these instructions in reverse order.