




HP Chromebook 14-ak041dx Battery Replacement

Use this guide to replace the battery in your HP Chromebook 14-ak041dx.

Written By: Sam Keesling

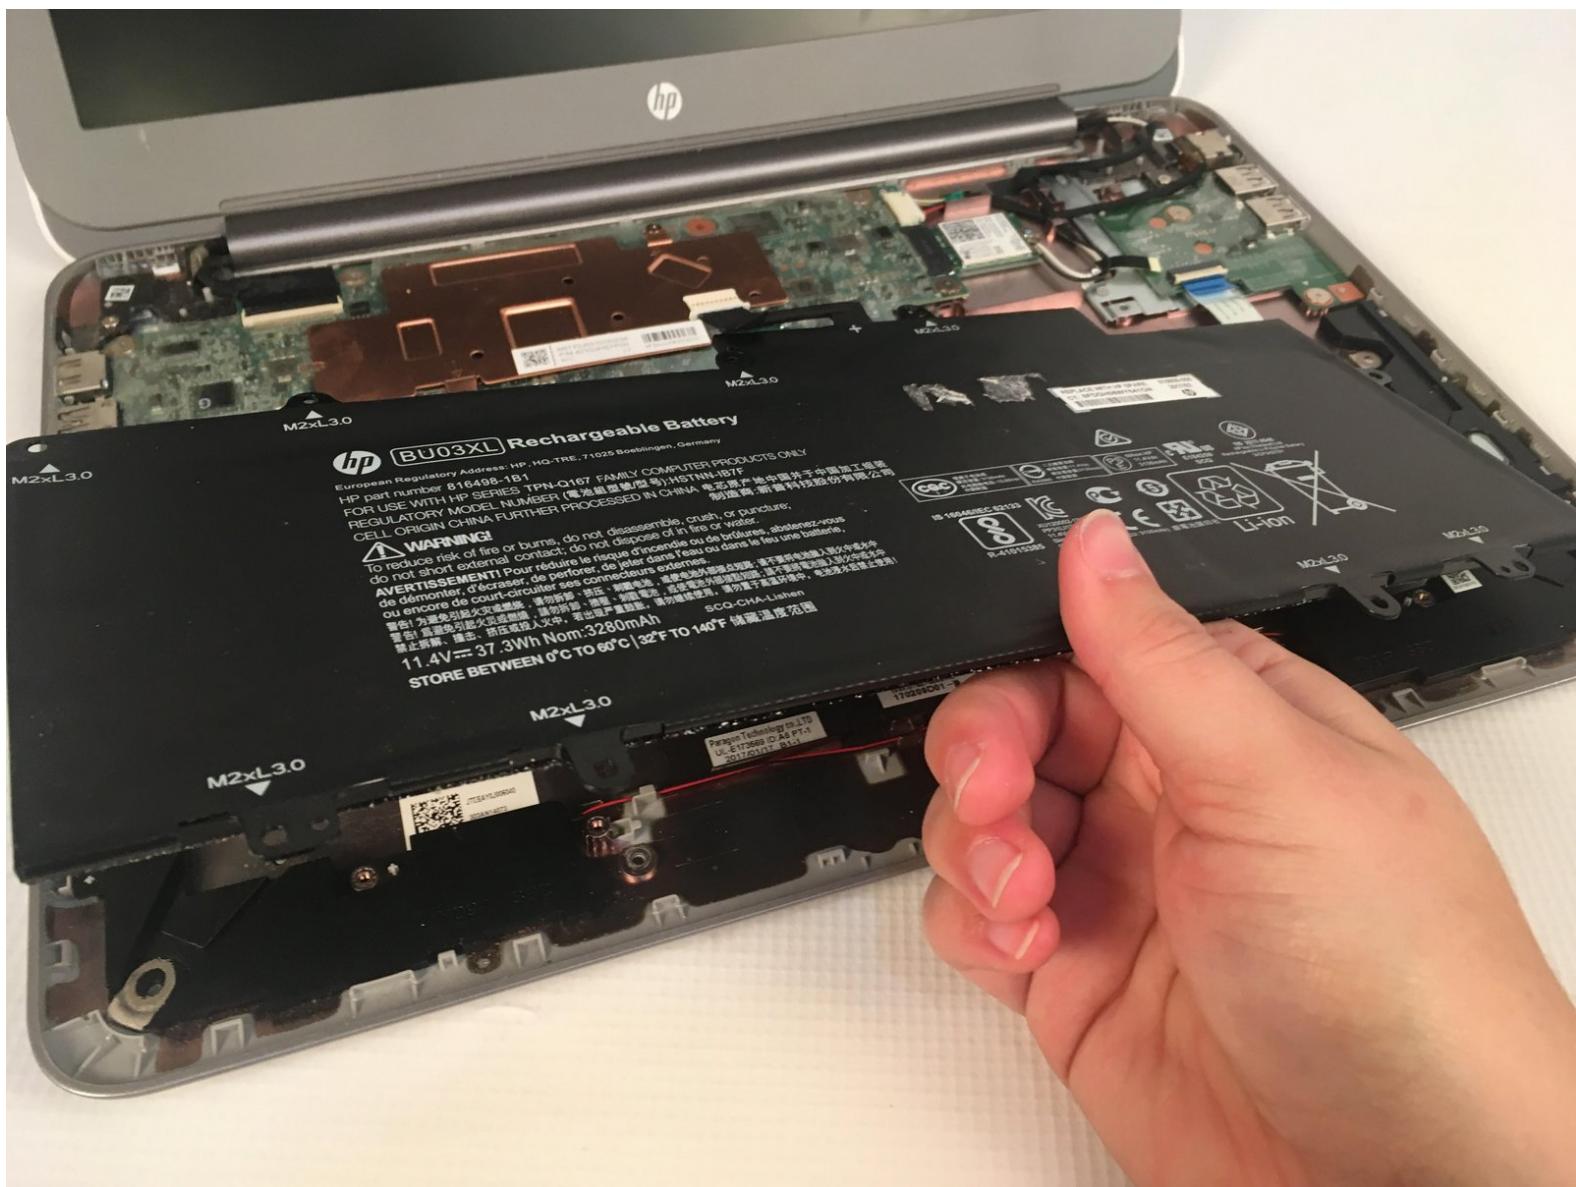

INTRODUCTION

This guide will walk you through the replacement of a dead or dying battery in your HP Chromebook 14-ak041dx. This replacement is a common need in the HP Chromebook 14-ak041dx, the computer will often not charge or hold a charge when plugged in and is in need of a replacement battery.

TOOLS:

- Spudger (1)
- Tweezers (1)
- Phillips #0 Screwdriver (1)
- Phillips #000 Screwdriver (1)

PARTS:

- BU03XL rechargeable battery (1)

Step 1 — Keyboard




- Remove eight 5mm Phillips #0 screws from the back cover of the laptop.

Step 2




- Using a pair of tweezers, remove the five grey silicone covers.
- Remove the five 5mm Phillips #0 screws beneath the grey silicone covers.

Step 3

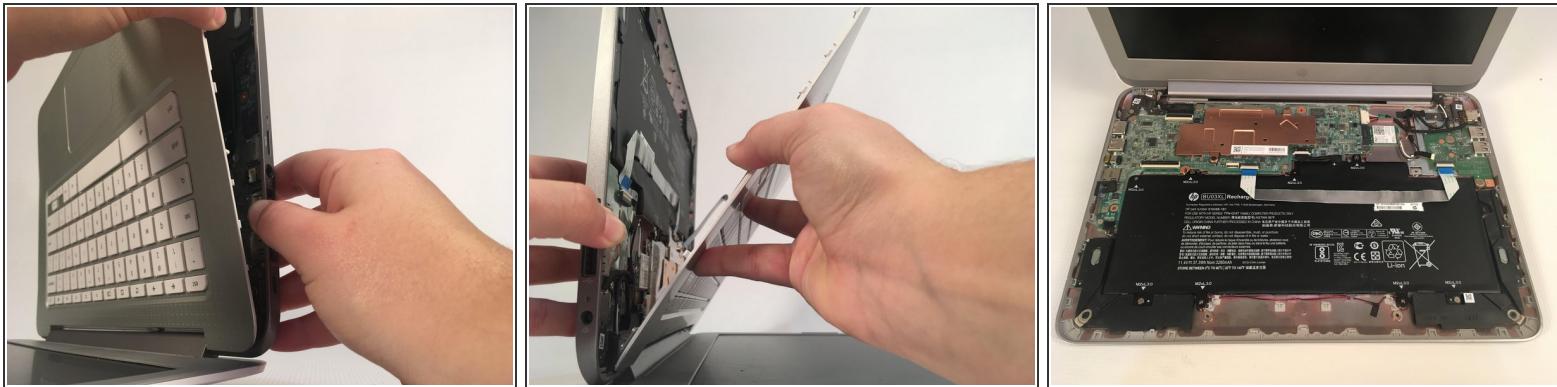

- Carefully open up your Chromebook and gently pull the keyboard away from the back panel.

Step 4 — Battery

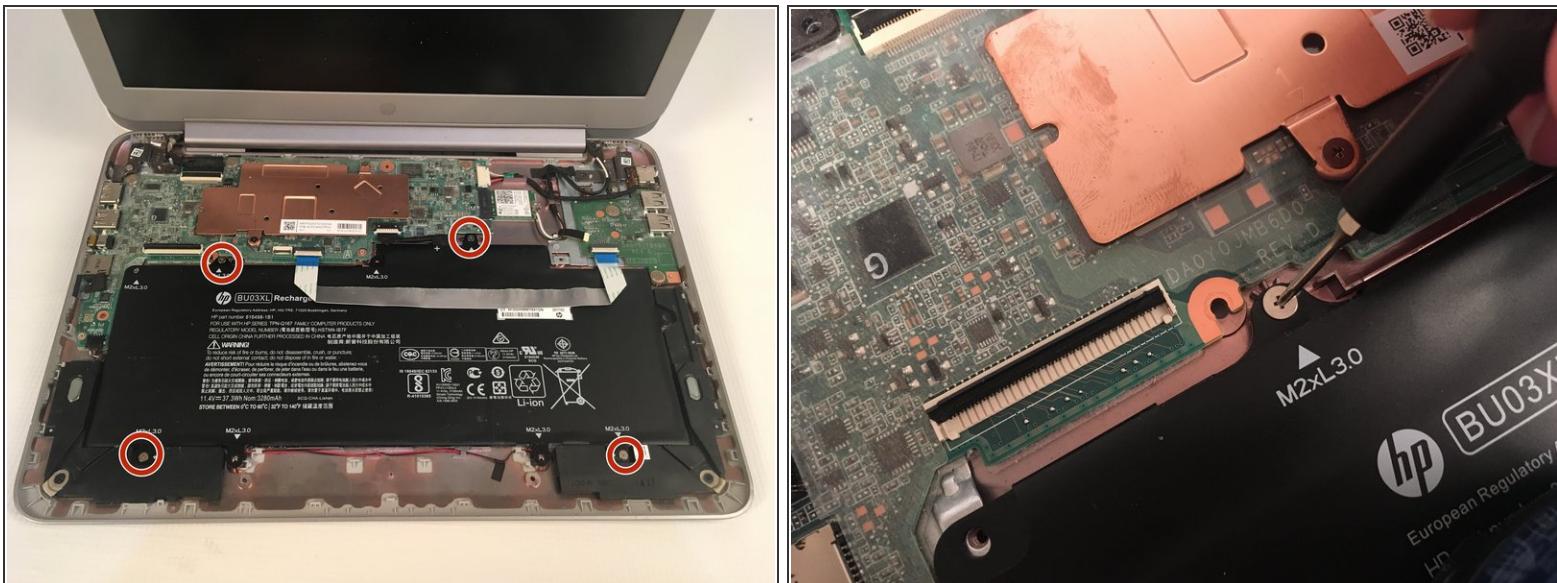

- Remove the four 3mm Phillips #000 screws holding the battery in place.

Step 5



- Slide a spudger underneath the white strip over the battery to gently pull the strip away from the adhesive sticking to the battery.
- Using a pair of tweezers, grip the black tape connected to the battery, and gently pull back to unplug the battery.

Step 6



- Carefully lift the battery out of the laptop.

To reassemble your device, follow these instructions in reverse order.