




HP Chromebook 14-ak041dx Heat Sink Replacement

How to replace an HP Chromebook 14-ak041dx heat sink.

Written By: Kristen Gismondi

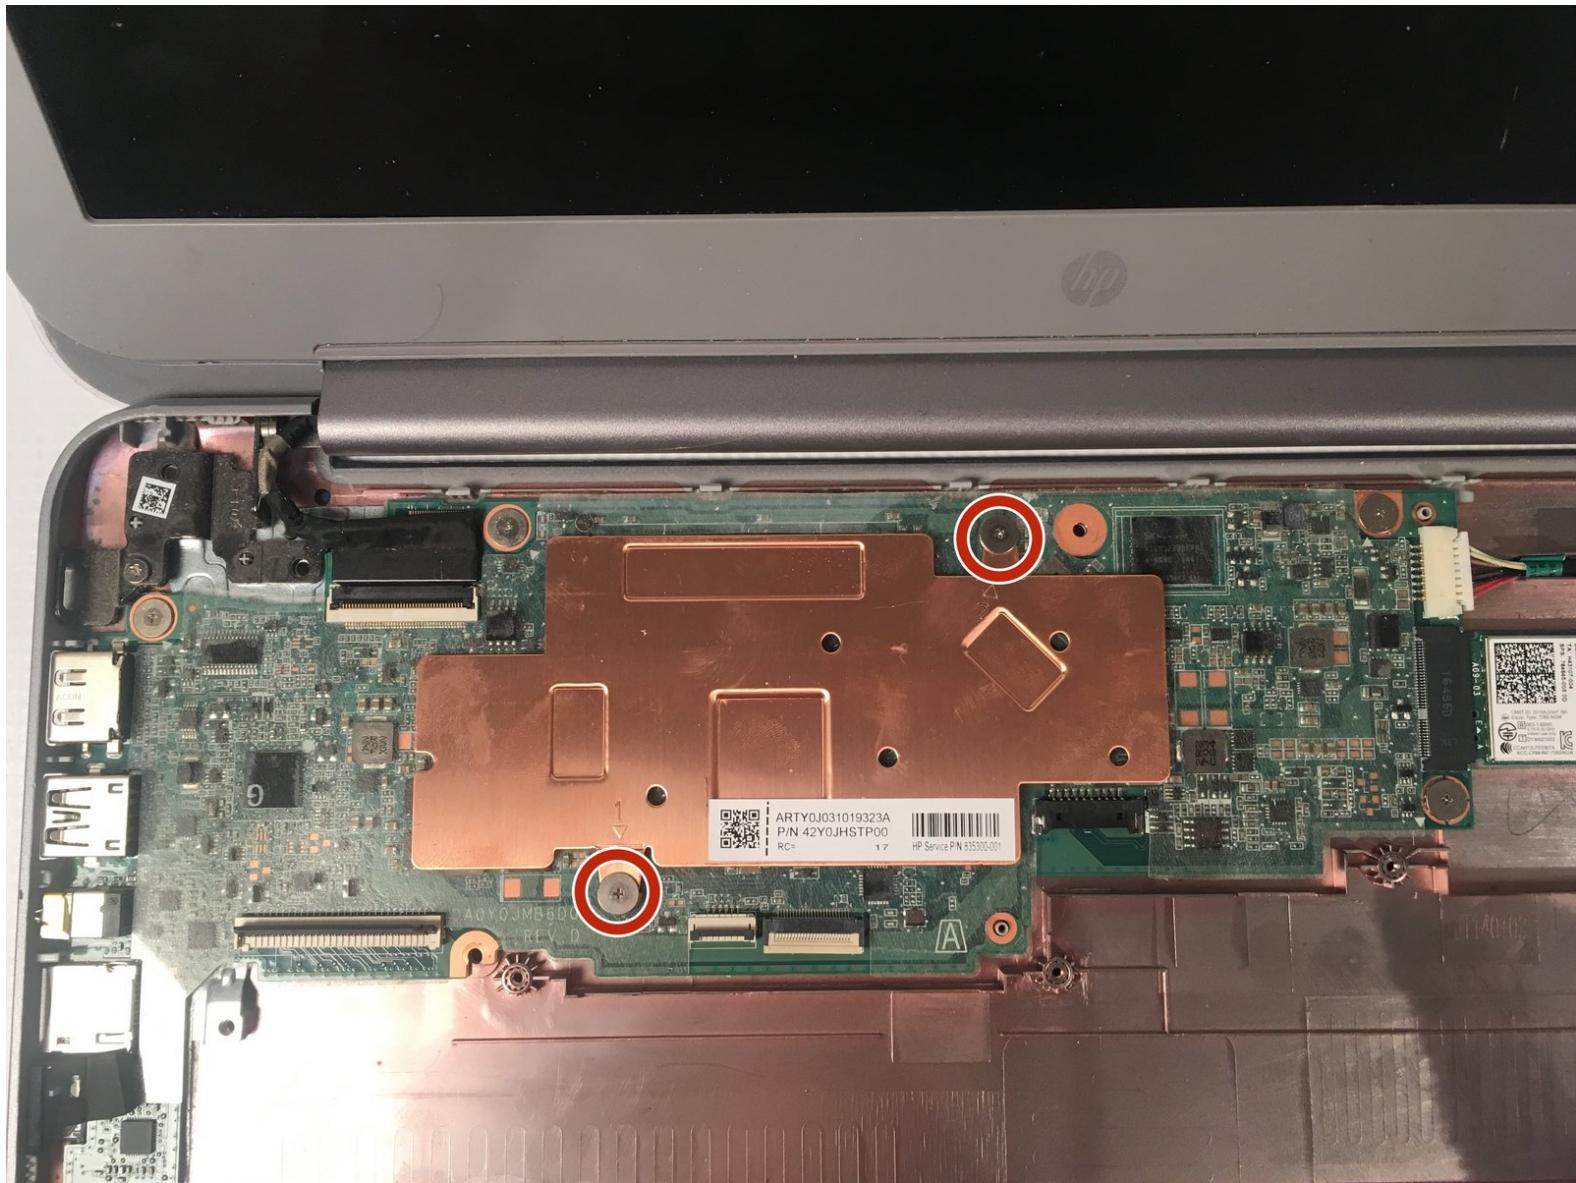

 **TOOLS:**

- **Phillips #0 Screwdriver** (1)
- **Tweezers** (1)
- **Spudger** (1)
- **Phillips #000 Screwdriver** (1)

Step 1 — Keyboard




- Remove eight 5mm Phillips #0 screws from the back cover of the laptop.

Step 2




- Using a pair of tweezers, remove the five grey silicone covers.
- Remove the five 5mm Phillips #0 screws beneath the grey silicone covers.

Step 3

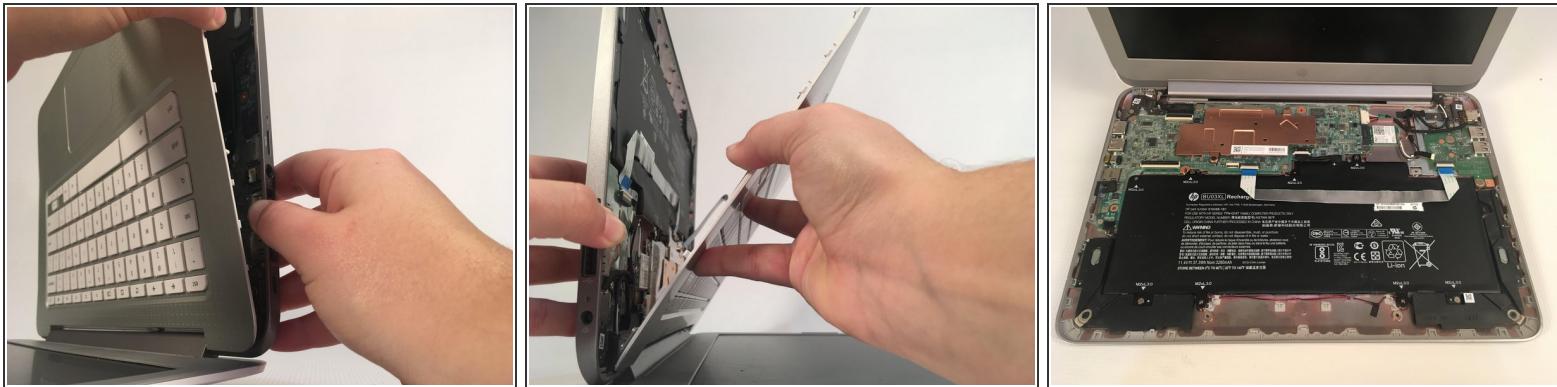

- Carefully open up your Chromebook and gently pull the keyboard away from the back panel.

Step 4 — Battery

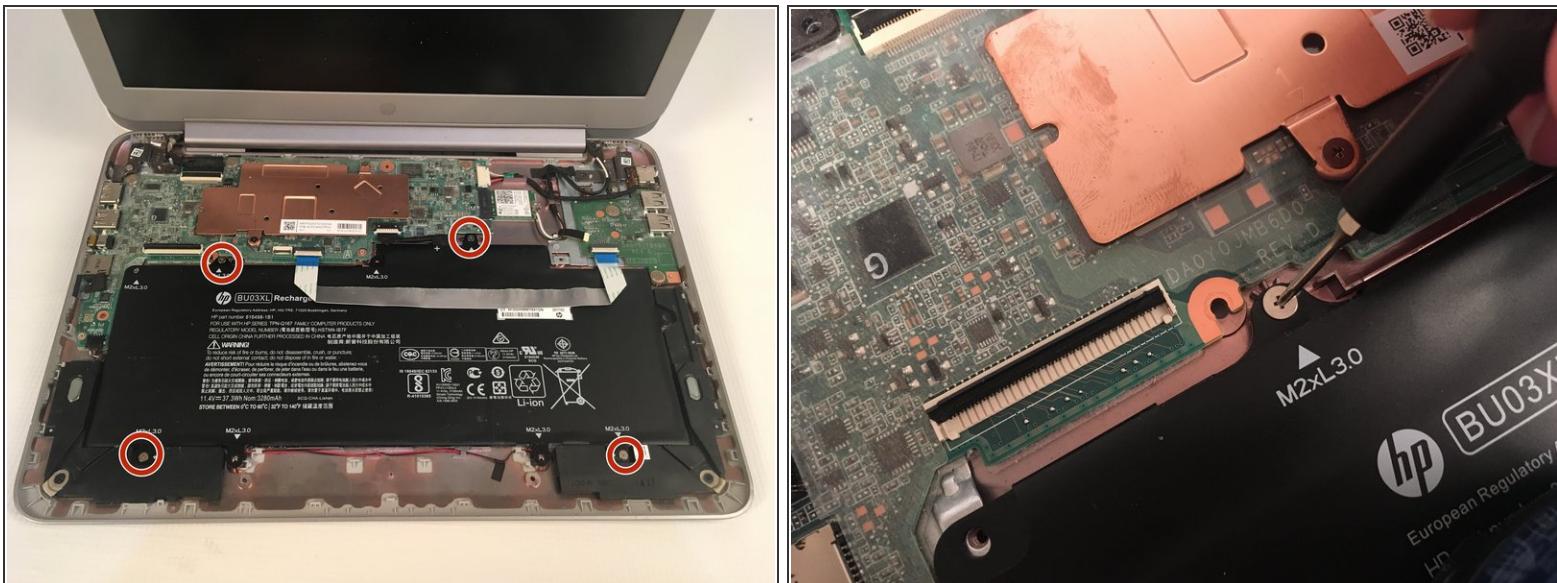

- Remove the four 3mm Phillips #000 screws holding the battery in place.

Step 5



- Slide a spudger underneath the white strip over the battery to gently pull the strip away from the adhesive sticking to the battery.
- Using a pair of tweezers, grip the black tape connected to the battery, and gently pull back to unplug the battery.

Step 6



- Carefully lift the battery out of the laptop.

Step 7 — Heat Sink



- Remove the two 1.5mm Phillips #000 from the copper heat sink on top of the motherboard.
- Remove the heat sink from the laptop.

To reassemble your device, follow these instructions in reverse order.