



# HP Chromebook 14-ak041dx Keyboard Replacement

How to replace an HP Chromebook 14-ak041dx keyboard.

Written By: Kristen Gismondi



 **TOOLS:**

- Phillips #0 Screwdriver (1)
- Tweezers (1)

## Step 1 — Keyboard




- Remove eight 5mm Phillips #0 screws from the back cover of the laptop.

## Step 2



- Using a pair of tweezers, remove the five grey silicone covers.
- Remove the five 5mm Phillips #0 screws beneath the grey silicone covers.

## Step 3

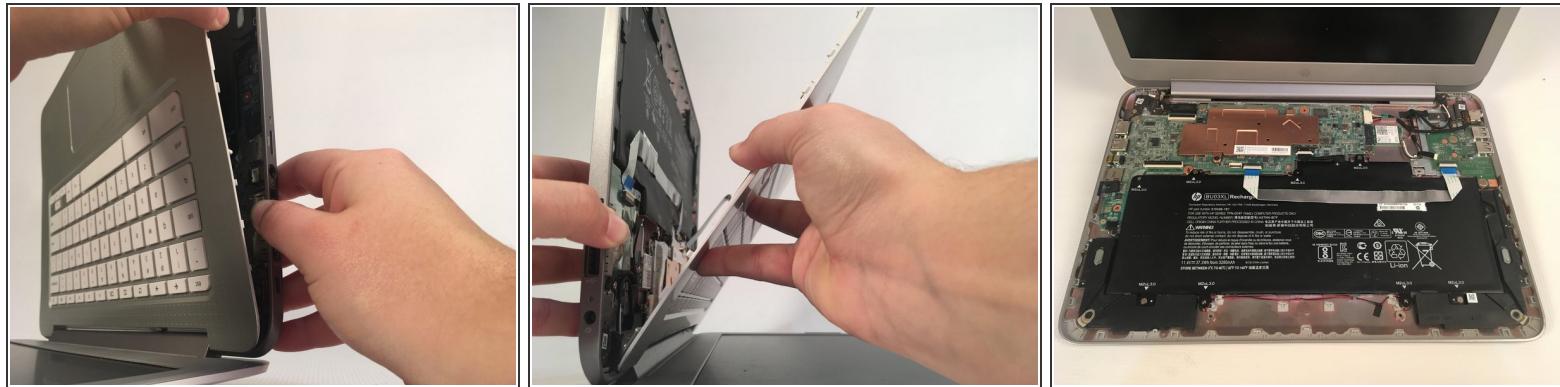

- Carefully open up your Chromebook and gently pull the keyboard away from the back panel.

To reassemble your device, follow these instructions in reverse order.