



# HP Chromebook 14-q029wm Screen Replacement

This guide will show how to replace the screen on an HP Chromebook 14-q029wm.

Written By: Andrew Pratt



## INTRODUCTION


If you are having trouble getting your screen on your HP Chromebook 14-q029wm to turn on, and you have already tried to restart your computer and have tried turning the brightness up, then it may be the screen itself. Once you have made the decision it is the screen itself you can follow this guide to remove or replace it. For more trouble shooting advice click [here](#). Make sure the power is completely off and no external power is plugged in.



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Screen

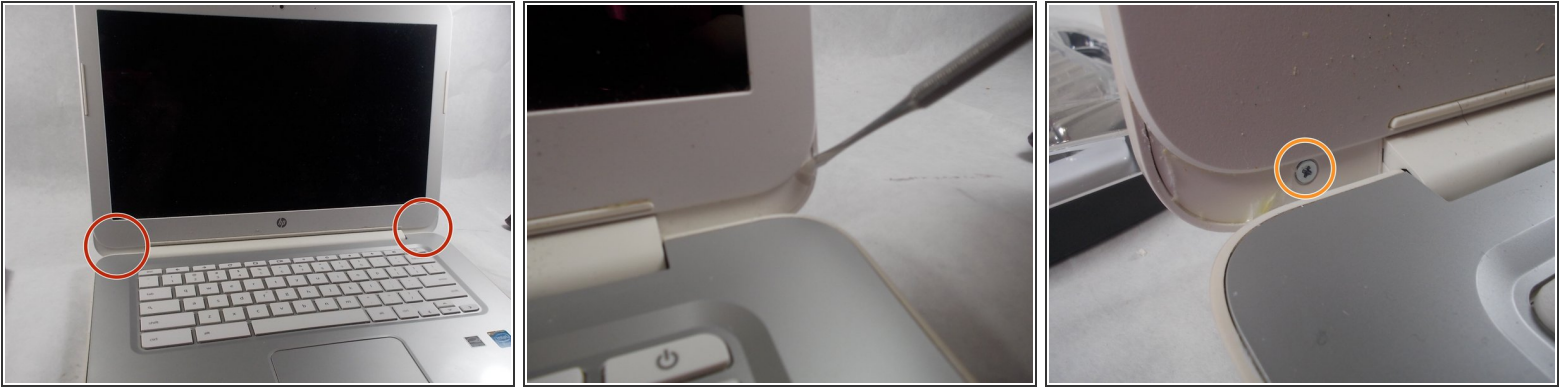

- Remove these two sticker covers which cover two screws.
- Remove the two 2mm Phillips #0 screws.

## Step 2

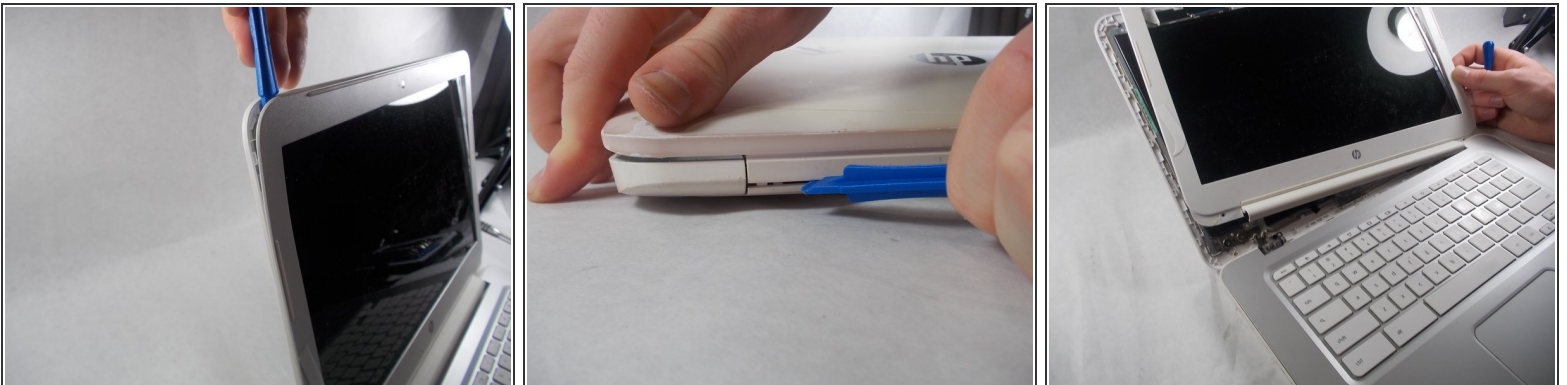

- Unsnap the plastic edge around the screen using an opening tool.
- You will have to close the screen partially to unsnap the plastic near the hinge.

⚠ Be careful not to break the plastic.


## Step 3



- Remove the four 3mm Phillips #0 screws.

⚠ Be careful not to drop the screen after you remove the last screw.

## Step 4

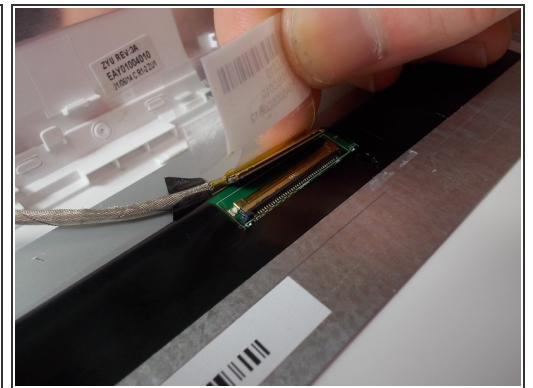

- Unplug the wire attached at the bottom of the screen.

**i** To unplug the wire, peel back the sticker and gently pull the sticker holding close to the wire to unplug.

To reassemble your device, follow these instructions in reverse order.