



HP Chromebook 14-x013dx

Keyboard/Touchpad Replacement

This guide will assist you with opening the chromebook and replacing the keyboard and the touch pad in your HP Chromebook 14-x013dx.

Written By: NHerbert



This document was generated on 2020-02-02 10:25:14 PM (MST).

INTRODUCTION

This guide will assist you with opening the Chromebook 14-x013dx and replacing the keyboard to restore typing functions. This will involve removing 13 6mm screws and opening the front plate of the laptop to expose the insides. **Note:** The keyboard and trackpad are all one piece, meaning that you will be replacing both components.

TOOLS:

- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Keyboard, Touchpad



- Using the plastic spudger, gently lift the 5 rubber pads away from their seating.

Step 2



- Remove the five 6mm screws located under the removed pads using Phillips #00 screwdriver.

Step 3




- With the Phillips #00 screwdriver, remove the remaining eight 6mm screws. You will now have thirteen 6mm screws removed from the case.

Step 4



- To continue removing the back cover, turn the laptop over as displayed.
- Use the plastic spudger to gently pry around the base of the laptop from the back cover. Continue prying around the entire base of the laptop.

Step 5

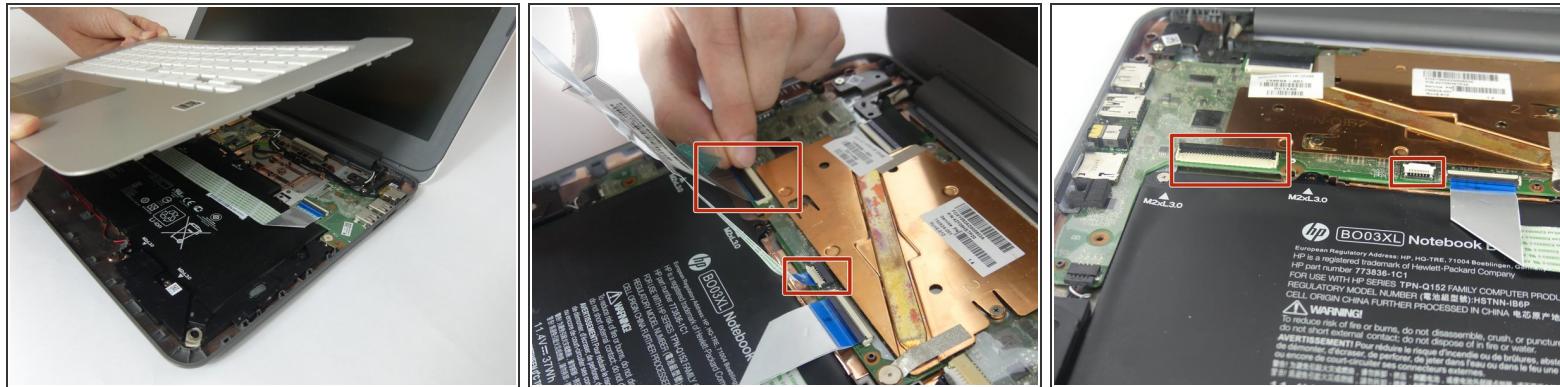

- Gently lift the silver base of the laptop from the bottom, but do not remove it.
- To remove the ribbon cables, lift the latch holding the ribbon cables in place and then pull them free.
- Remove the keyboard panel from the laptop.

To reassemble your device, follow these instructions in reverse order.