



HP Chromebook x360 11-ae010nr Battery Replacement

This guide will cover how to remove the HP Chromebook x360 11-ae010nr battery.

Written By: Devin Cannistraro



INTRODUCTION

This guide will explain the removal process of the HP Chromebook x360 11-ae010nr battery.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

Step 1 — Keyboard




- Flip the device upside down so that the screws are visible.
- Loosen two captive Phillips #1 screws from the center of the device.
- Remove three 9.3 mm Phillips #1 screws from the joint side of the device.
- Remove four 6.1 mm Phillips #1 screws from the opening side of the device.

Step 2

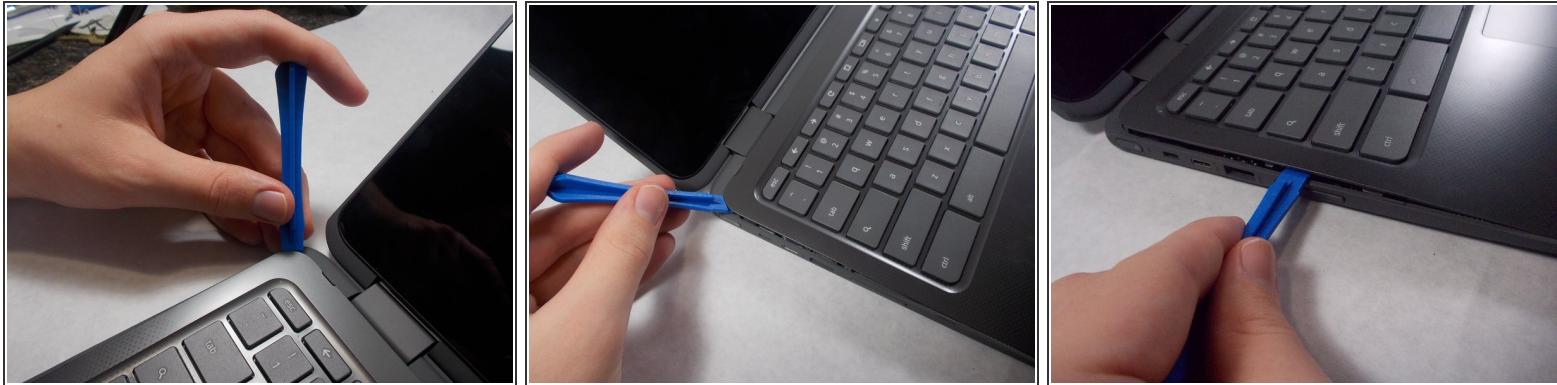


- Insert an iFixit opening tool between the edge of the keyboard assembly and the base of the device.
- Push down on the handle of the opening tool to create an opening between the keyboard assembly and the base of the device.
- Move the opening tool around the device, popping open the clips with force when necessary, until the keyboard assembly is fully lifted from the base of the device.

Step 3

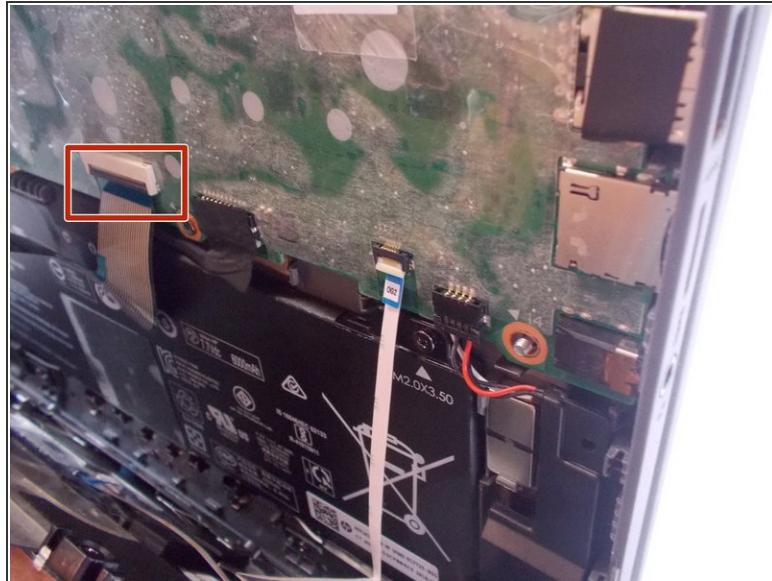


- Separate the keyboard assembly and the case.
- ⚠ Two cables connect the keyboard to the device, so take caution to not damage these cables.
- Flip the black plastic tab where the wider cable meets the main board using the tip of a spudger or a fingernail.
- Remove the cable with curved needle nose pliers or your fingers.

Step 4

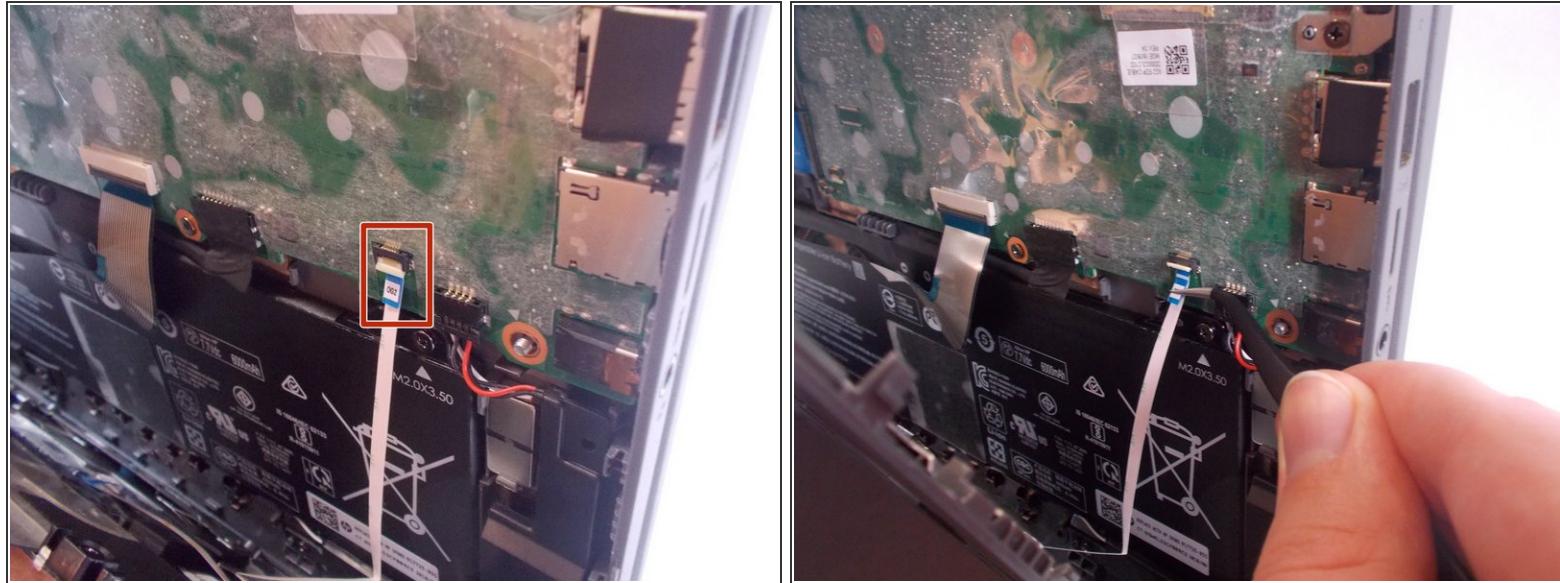


- Flip the white plastic tab where the thinner cable meets the main board using the tip of a spudger or a fingernail.
- Remove the cable with curved needle nose pliers or your fingers.
- Separate the keyboard from the laptop.

Step 5 — Speakers

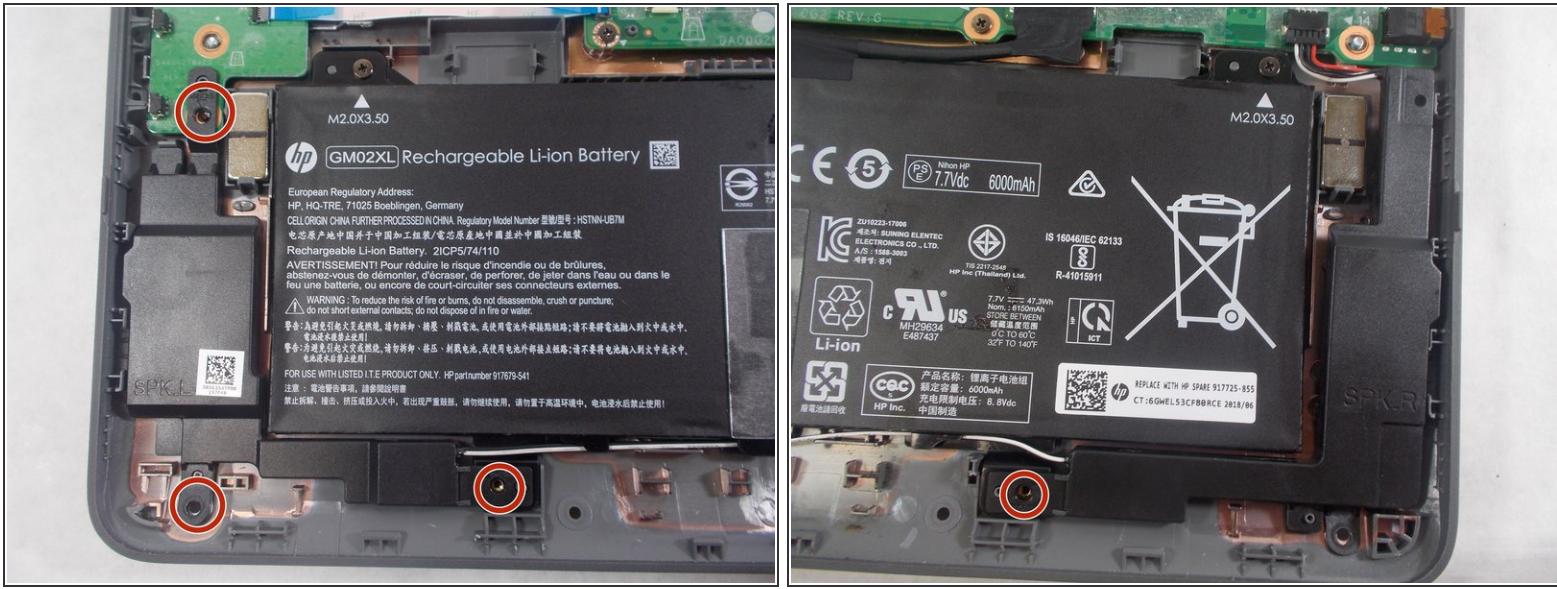

- Remove the four 5 mm Phillips #1 screws from the left and right speakers.

Step 6

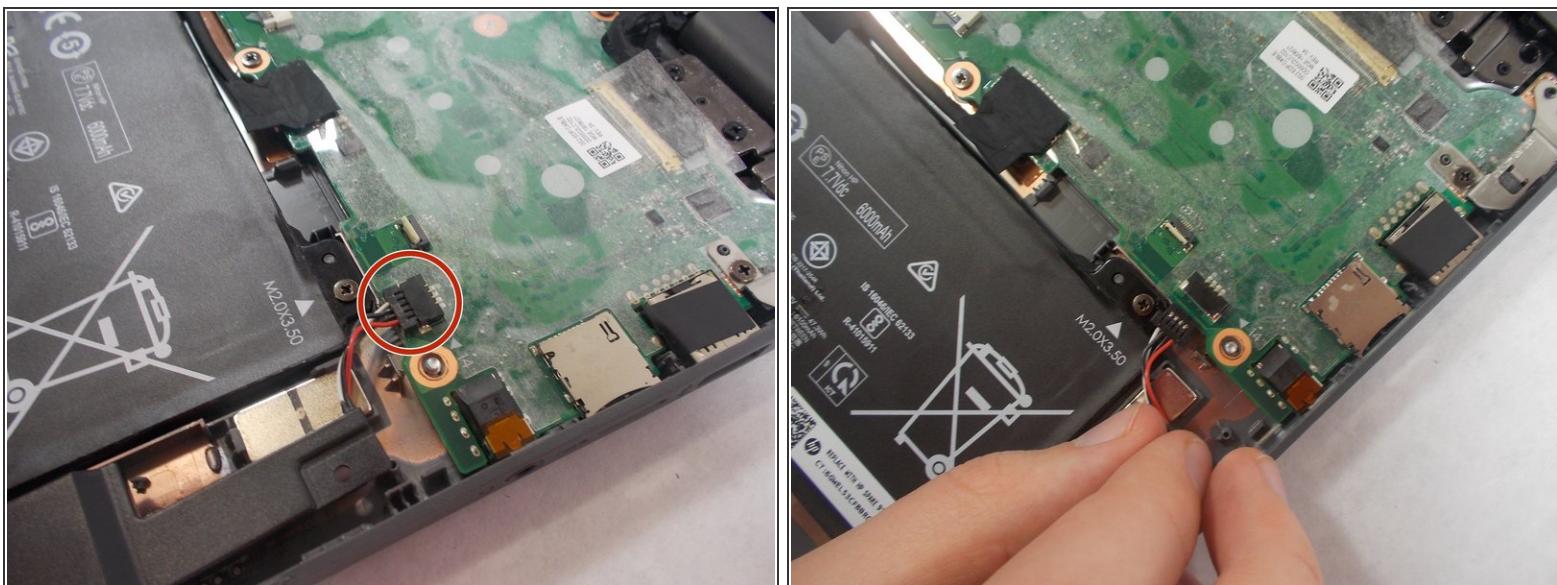

- Remove the cable from the right speaker by removing the tape then detaching the cable.

Step 7





- Pull the white cable down to detach from the battery.
- Remove the speakers from the laptop.

Step 8 — Battery



- Remove the two 5 mm Phillips #1 screws from each side of the battery.

Step 9

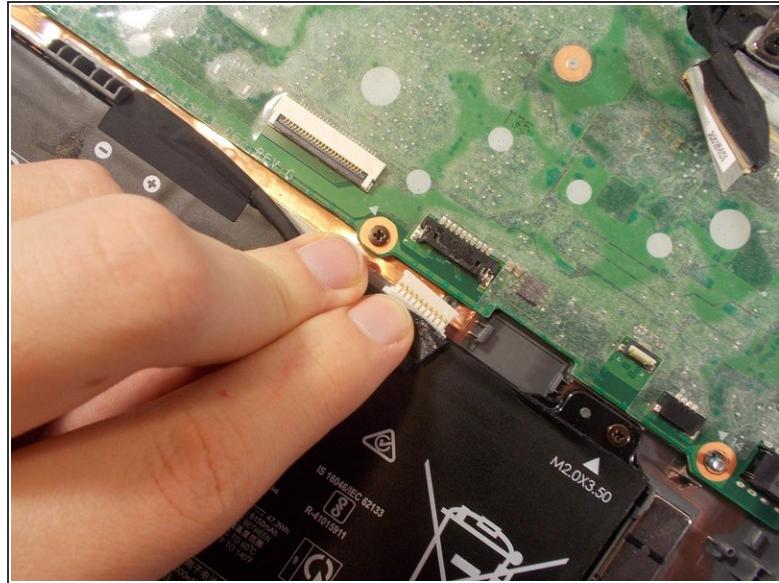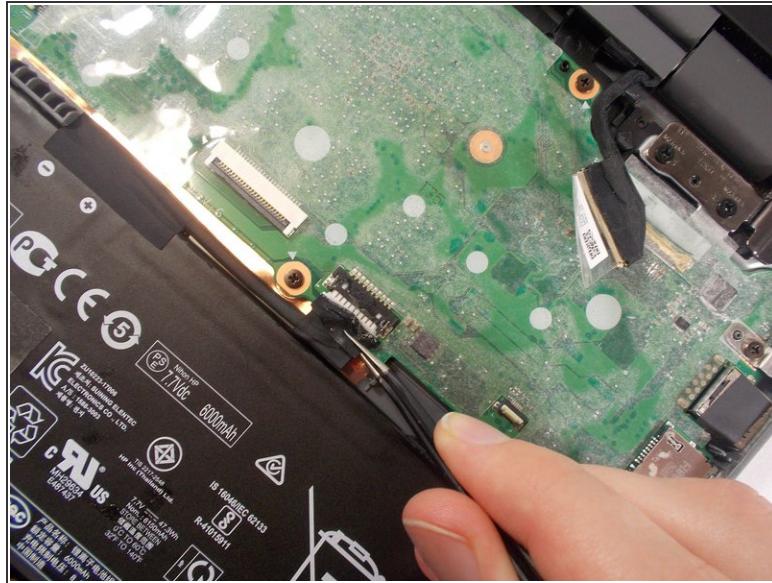

- Remove the tape from the cable using a pair of tweezers.
- Gently remove the cable from the plug.
- Remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.