




HP Color LaserJet Pro MFP M277dw Power Button Replacement

How do I replace the power button on an HP Color LaserJet Pro MFP M277dw

Written By: Christopher Fahey

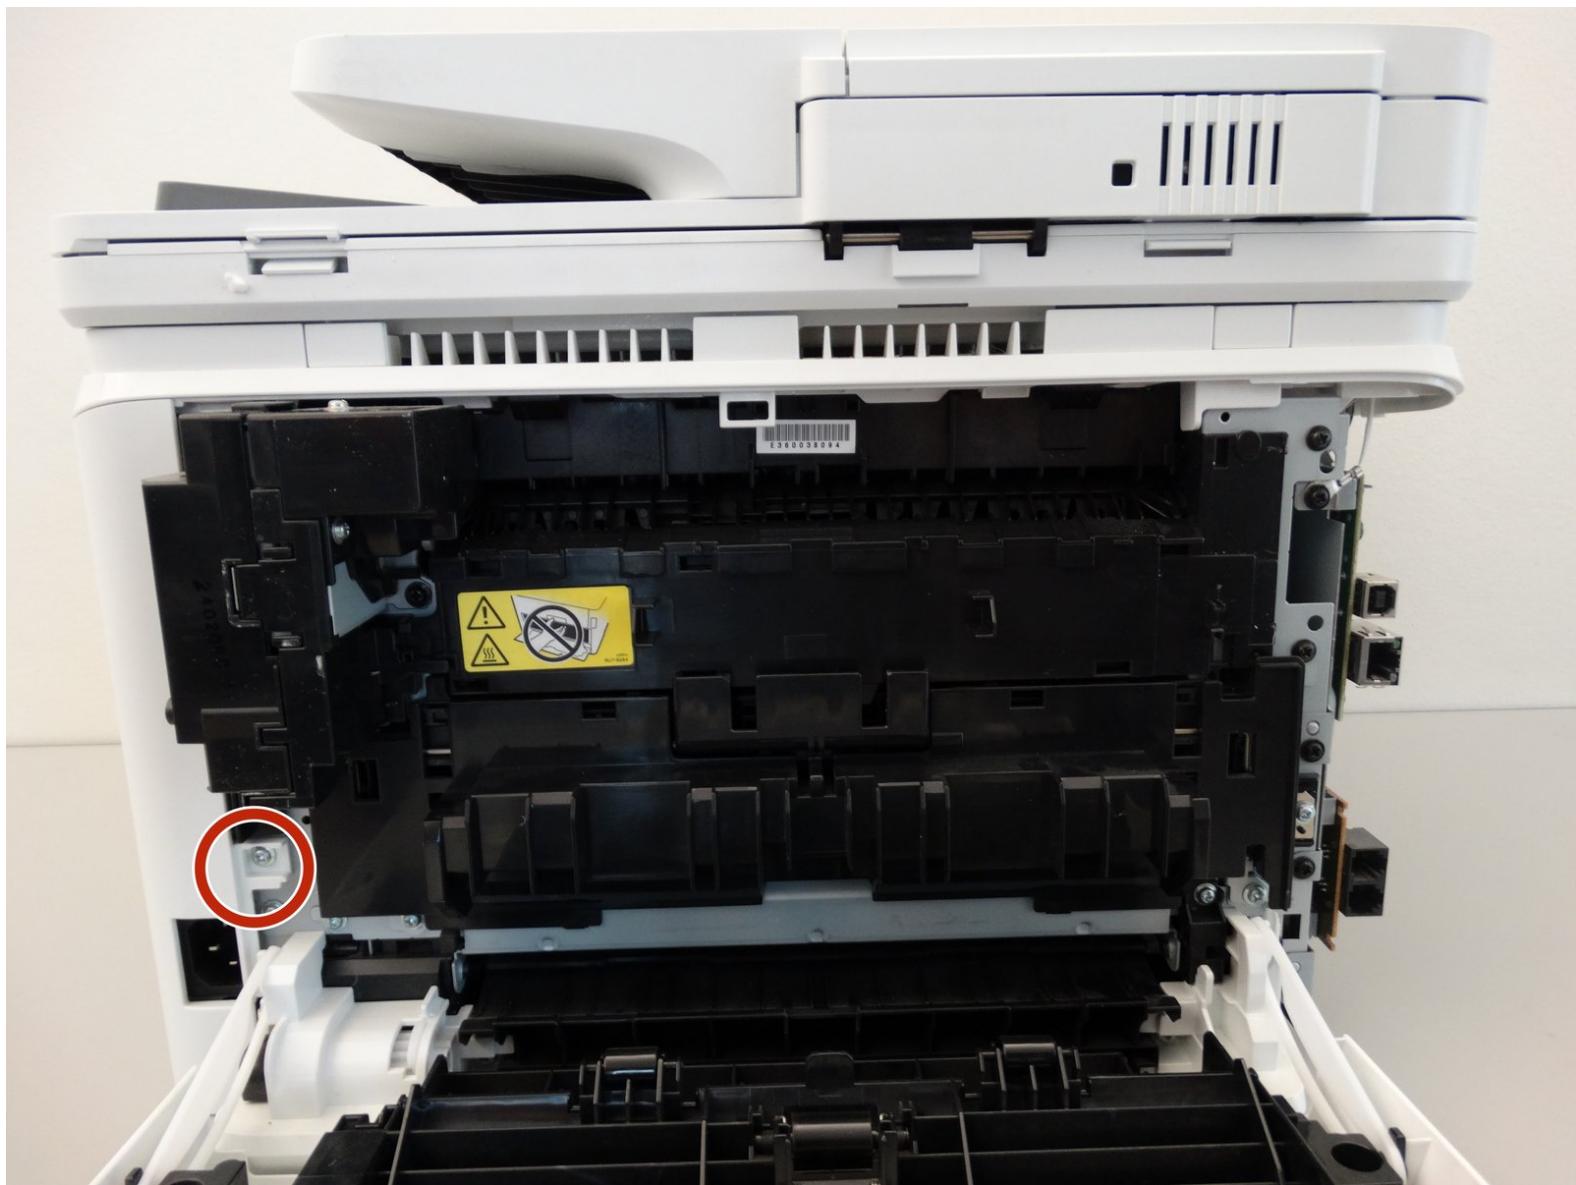

INTRODUCTION

This is a replacement guide for the power button on the HP Color LaserJet Pro MFP M277dw. You will need plastic opening tools as well as a Phillips #2 screwdriver.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #2 Screwdriver](#) (1)

Step 1 — Power Button



- Lower the back panel by pulling it down.
- Remove one Phillips #2 10mm screw.
- Use the plastic opening tool to remove right side panel by prying it off.

(i) Flipping the printer onto its side makes it easier to remove the side panel.

Step 2



- Lower the front panel by pulling it down from the upright position.
- (i)* The button cover should come off with the panel, if it does not be sure to remove it.

Step 3



- Remove two Phillips #2 8mm screws.
- Unplug the wire connecting the power button to the circuit board by gently pulling them apart.

To reassemble your device, follow these instructions in reverse order.