



HP Compaq 6710b Keyboard Replacement

Quick and easy steps to replace your keyboard!

Written By: Khulan Orgil




INTRODUCTION

Keyboard removal is necessary to replace heat sink paste and ram.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)


Step 1 — Keyboard

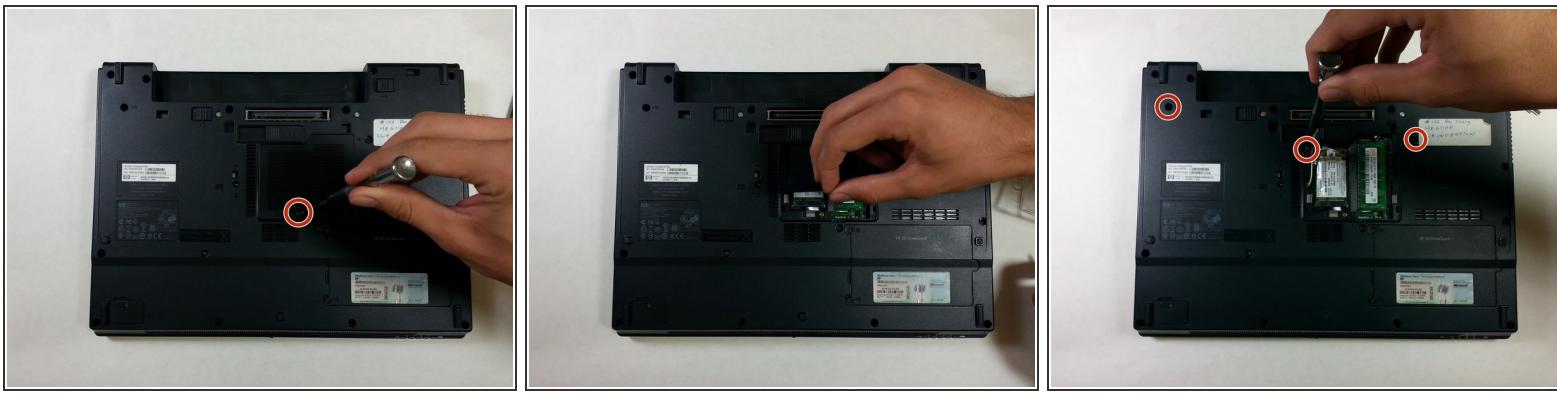

 Turn off computer before starting.

- Flip to the backside of the laptop.
- Using a Phillips #1 screwdriver, unscrew the 5mm screw and take off the shown cover.
- Using the same screwdriver, unscrew the 8mm screws.
 -  The screws may not completely fall out of the laptop, just ensure they are unscrewed as far as they will go.

Step 2

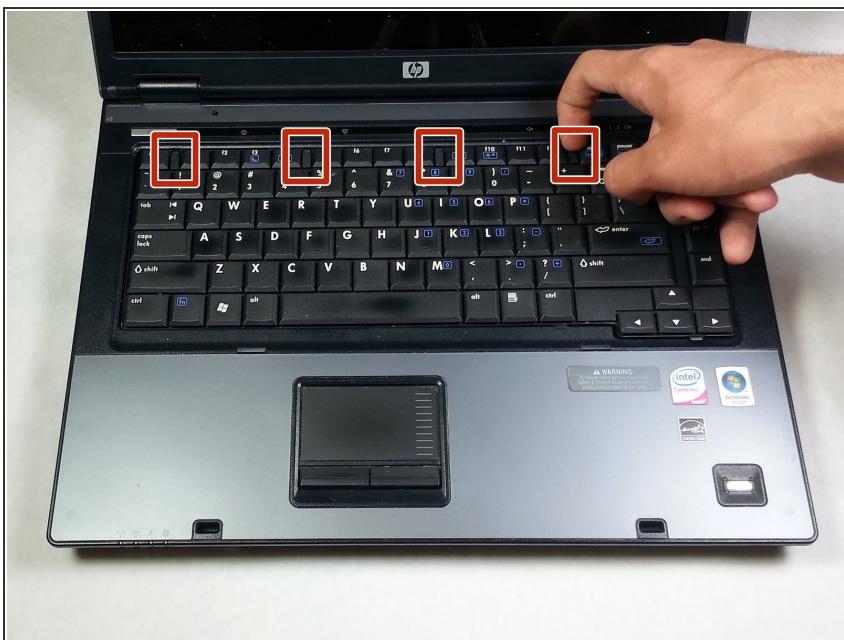

- Flip over the laptop to the top side, and open the laptop.
- Slide the locking tabs down using a blue plastic opening tool or your fingernail.

Step 3



- Using the plastic prying tool, lift the keyboard gently towards you.

⚠ Don't take the keyboard completely off because it is still attached with a ribbon cable to the computer.

Step 4



- Pull up on both sides of the black locking tab of the connector.
- The keyboard should now be free of the computer.

To reassemble your device, follow these instructions in reverse order.