



HP Compaq C700 Keyboard Replacement

This guide details how to remove the keyboard of the HP Compaq C700.

Written By: Taylor Johansen




INTRODUCTION

In this guide, you will learn how to remove the keyboard of the HP Compaq C700 laptop.

TOOLS:

- Metal Spudger (1)



Step 1 — Keyboard

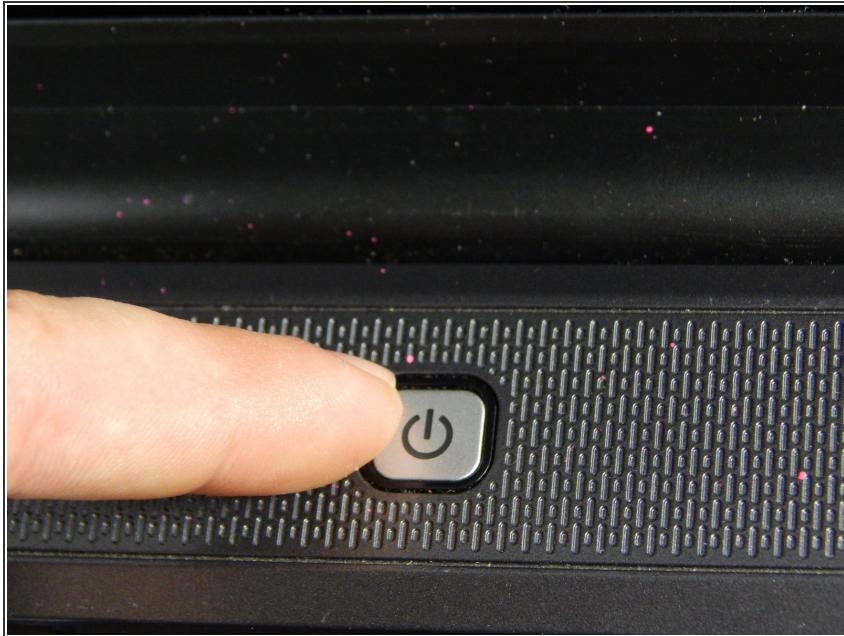

⚠ It is advised to work on the device only when it is powered off so as to avoid electrocution risks.

- Turn off computer by pressing and holding the power button.

Step 2

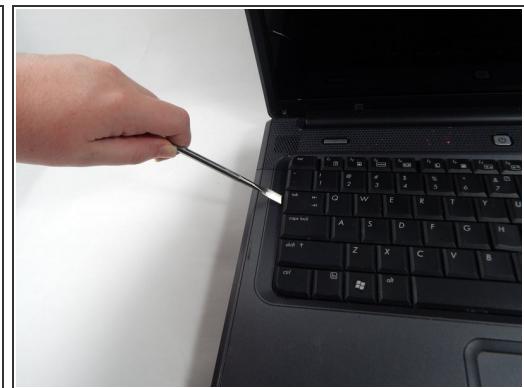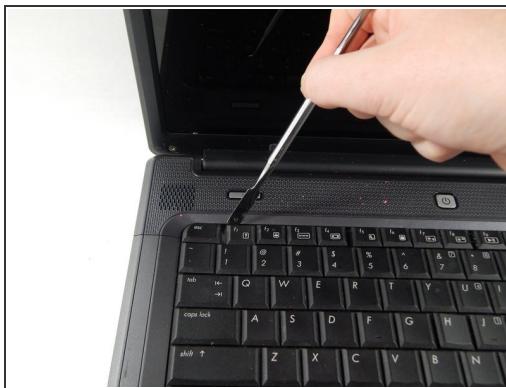

- Locate and unscrew the two screws on the back marked with a small keyboard. These screws hold the keyboard in place.
- Locate the metal hooks where the keyboard connects to the laptop and use a metal spudger to gently pry up the keyboard.

Step 3



- Gently lift up and remove the keyboard.

To reassemble your device, follow these instructions in reverse order.