



# HP Compaq NC6120 CD Drive Replacement

This guide will show the reader how to replace the CD drive, should it stop working. It is a fairly easy replacement once the top is removed from the laptop.

Written By: Keenan



## INTRODUCTION

Although the CD drive is partially exposed to outside of the laptop, the laptop still needs to be opened up for replacement. Replacing the CD drive is a good solution if normally-working CD's aren't working properly for any reason.



## PARTS:

- Phillips #1 Screwdriver (1)

## Step 1 — Disassembling HP Compaq NC6120 Laptop



- Flip laptop so the backside is facing upwards.
- Pull the two plastic switches at the top of the backside of the computer outwards, and remove the battery.

## Step 2



- Remove all 13 screws from the back panel of the computer, the 2 torx screws under the battery, the 2 under the ram memory panel as well as the four screws at the hinge of the computer (also attaching the back panel to the rest of the computer). All screws are 9.8mm 3.0 flatheads except for the two under the battery which are T9 torx.

## Step 3




- Open up the laptop so that the screen is facing towards you. Push the monitor back until it is flat, parallel to the keyboard.

## Step 4



- Using a plastic spudger, remove the plastic panel located between the keyboard and monitor. It should pop off easily with the spudger and can then be pulled away.

## Step 5

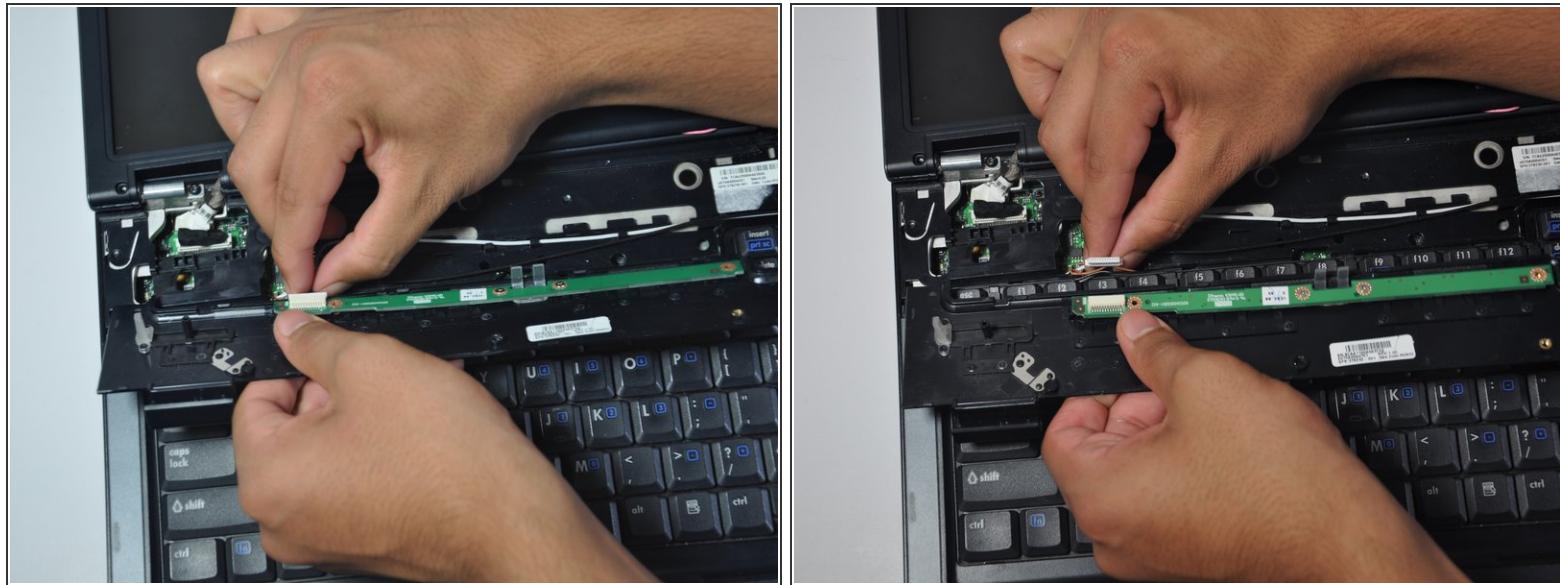

- Remove the white cable attached to the just-removed plastic panel from the motherboard.

## Step 6




- Flip the keyboard away from the monitor, rotating it so that the keys are face down on the mousepad. Remove the black cord at the bottom of the keyboard that connects it to the motherboard. The keyboard is now free and can be removed.

## Step 7



- Remove the two 9.8mm 3.0 flathead screws, there is one at each of the hinges.

## Step 8

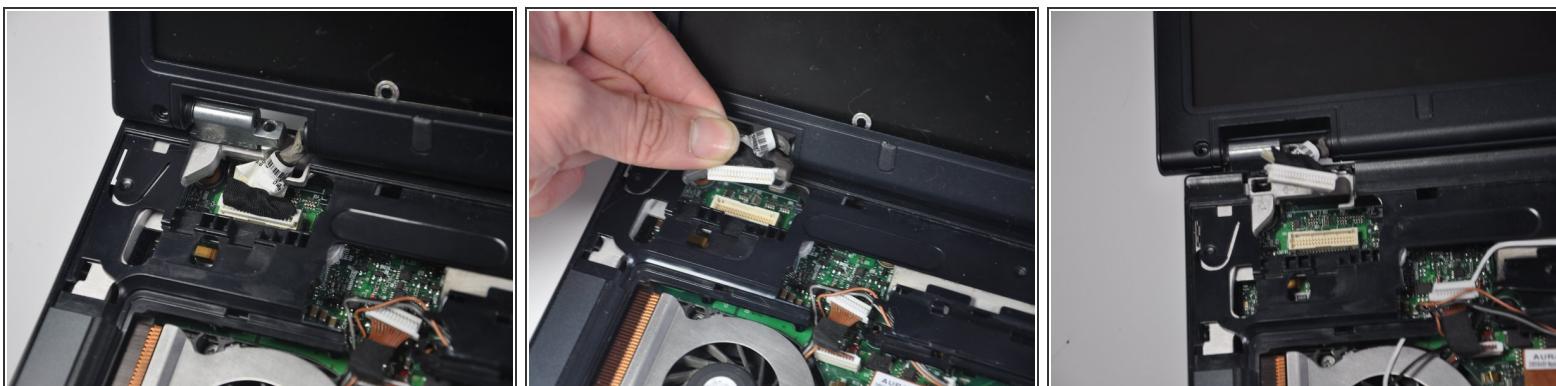

- Unplug the black cable with rectangular white plastic head from the motherboard. It is located at the top left of the motherboard, directly below the left hinge.

## Step 9




- Pull the monitor directly upwards from where it lay. The two metal hinges should easily slide out of their holes and the monitor will be disconnected from the motherboard.

## Step 10



- Using a spudger, pry the black plastic panel (with mousepad) off of the motherboard.

## Step 11

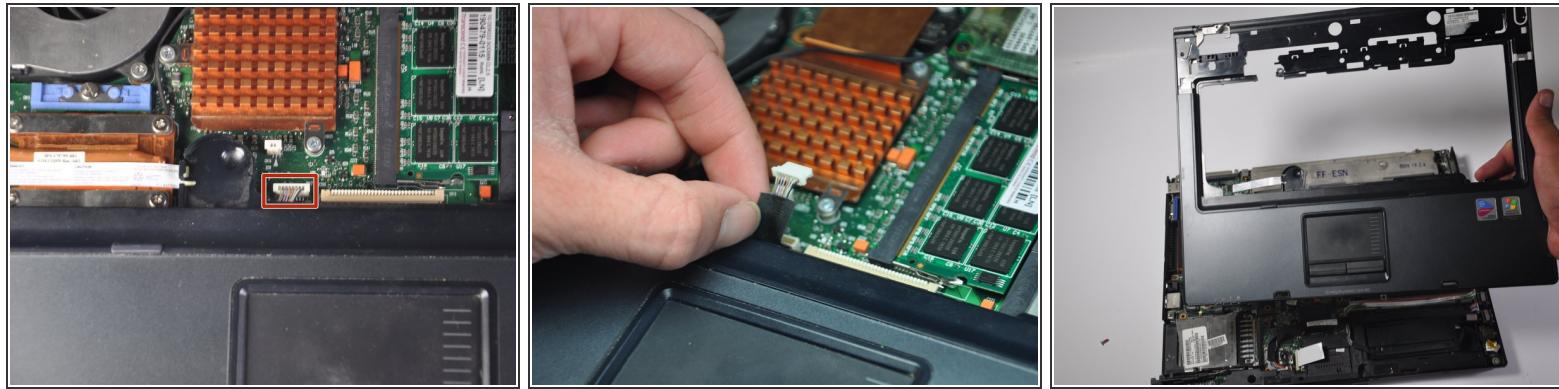

- Unplug the white cord connecting the mousepad to the motherboard from the motherboard, and pull off the entire plastic panel.

## Step 12 — CD Drive



- Refer to the case disassembly guide.

## Step 13



- **Recommended:** First, remove the second RAM chip, in the center of the motherboard. The chip is rectangular, with black squares and a "transcend" label on it.

## Step 14



- To remove the chip, locate the two metal clips on the top and bottom of the chip. Clamp them in towards the RAM chip and hold.

## Step 15



- Remove the chip by lifting up the side closest to the cd drive first.

## Step 16



- Slide the CD drive out to the right.

To reassemble your device, follow these instructions in reverse order.