



# HP Compaq Presario CQ56-110US CD Drive Replacement

This guide will detail the process of replacing a CD Drive from the HP Compaq Presario CQ56-110US laptop.

Written By: Iyonna L. Tynes



This document was generated on 2019-09-17 12:24:53 AM (MST).


## INTRODUCTION

This guide will detail the steps of replacing a faulty CD Drive.

### TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)


## Step 1 — CD Drive

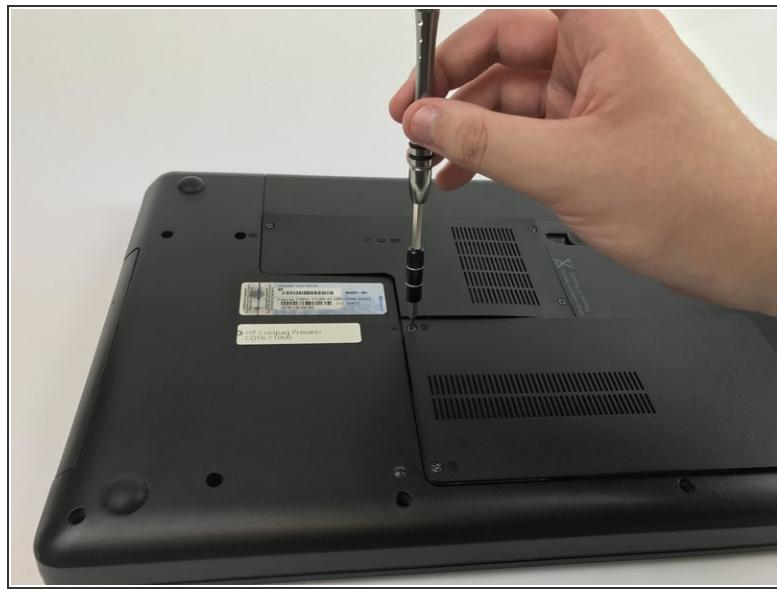

- Loosen the two indicated screws on the panel using a Phillips screwdriver with a PH1 head size.

*(i)* The screws do not come free from the panel. They only need to be loosened enough so that the panel can be lifted/pried using a plastic opening tool.

## Step 2

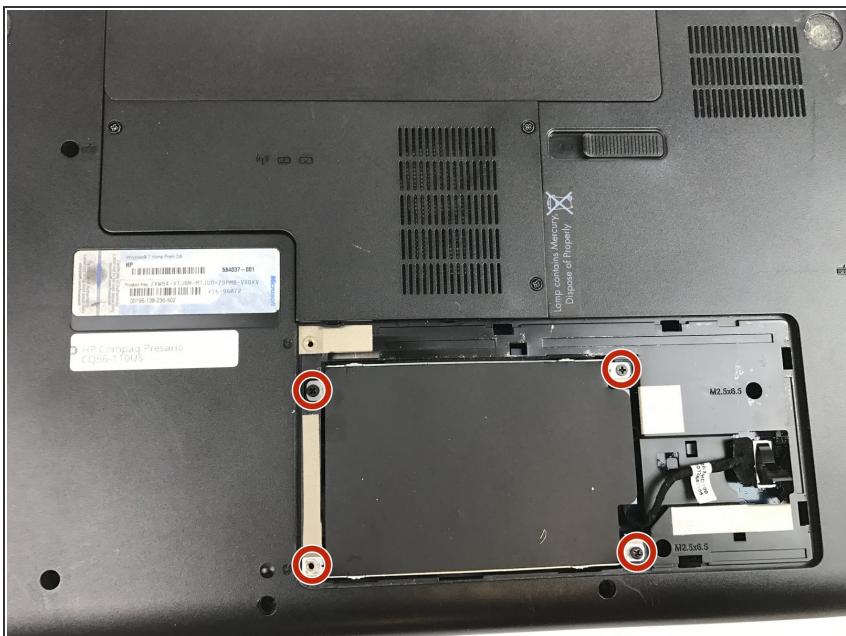

- Use the screwdriver to unscrew the four 5mm screws holding down the hard drive.

## Step 3



- Use plastic opening tools to lift up the hard drive. Set aside the hard drive without disconnecting the wire.

## Step 4



- Use a Phillips screwdriver with a PH0 head type to unscrew the indicated 5.5mm screw.

## Step 5



- Use plastic opening tools to pry open the CD Drive.

## Step 6



- Use your hands to pull the CD drive out and remove it from the laptop.

To reassemble your device, follow these instructions in reverse order.