



HP Compaq Presario CQ56-110US Keyboard Replacement

Use this guide to replace the entire keyboard on the HP Compaq Presario CQ56-110US if it is unresponsive or not functioning properly.

Written By: Iyonna L. Tynes



INTRODUCTION

Use this guide to replace the entire keyboard if it is unresponsive or not functioning properly.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Ensure that the laptop is completely powered off, then flip it over to identify the battery latch located towards the bottom of the back panel.
- Push the latch to the unlocked position.

Step 2



- Gently take out the battery.

Step 3 — Keyboard



- On the back panel of the laptop are two screws which have a keyboard symbol next to them.
- Using a Phillips screwdriver with a PH0 bit, remove both the 7mm and 5.5mm screws.

Step 4




- From left to right, unscrew the 5.5mm screw, the 7mm screw, and the 5.5mm screw located in the battery panel with the screwdriver.

Step 5




- Remove the RAM panel by unscrewing the three screws with the PH0 Screwdriver Bit.
- i** The screws do not come free from the panel. They only need to be loosened enough so that the panel can be lifted/pried using a plastic opening tool
- Remove the RAM panel using a plastic opening tool.

Step 6

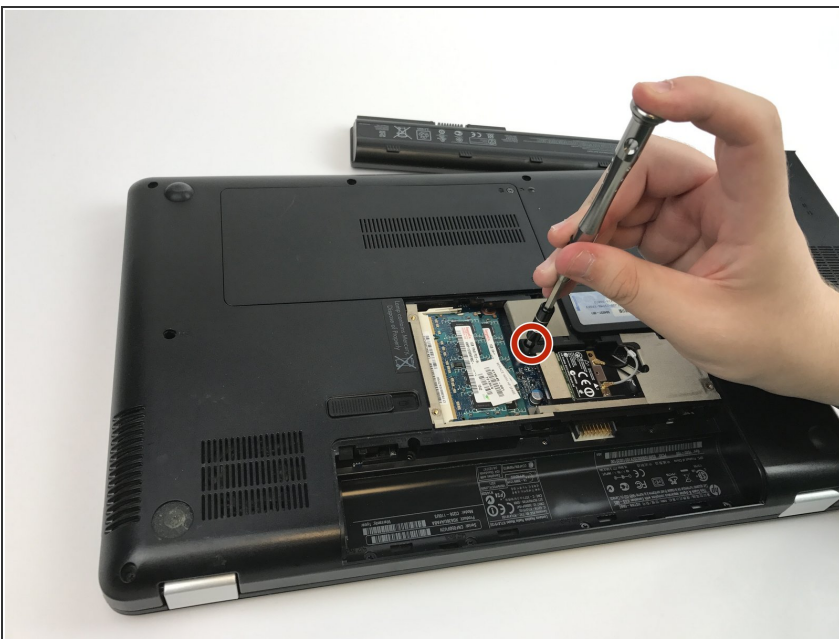


- Inside the RAM panel, use the screwdriver to remove the 5mm screw pictured.

Step 7

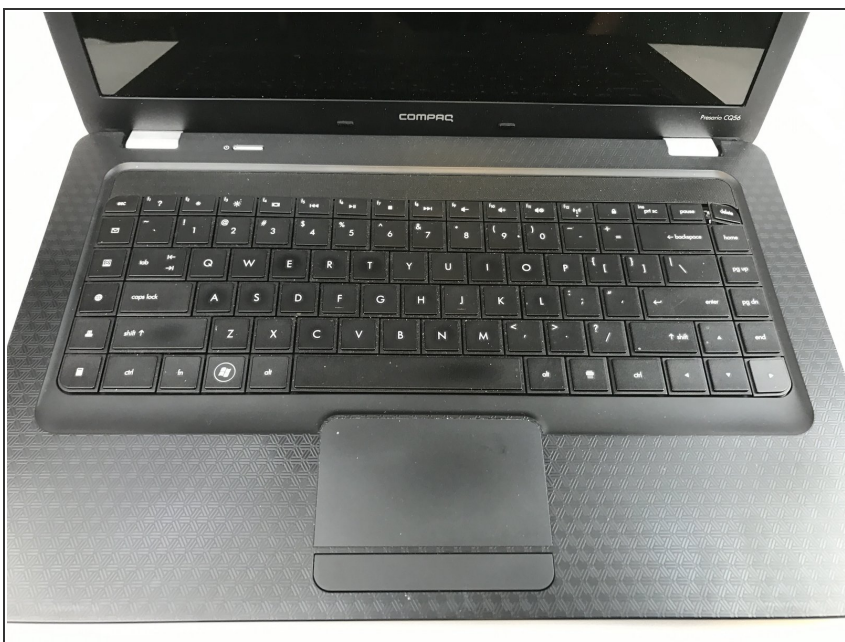

- Flip the laptop back over and lift the lid to expose the keyboard.

Step 8

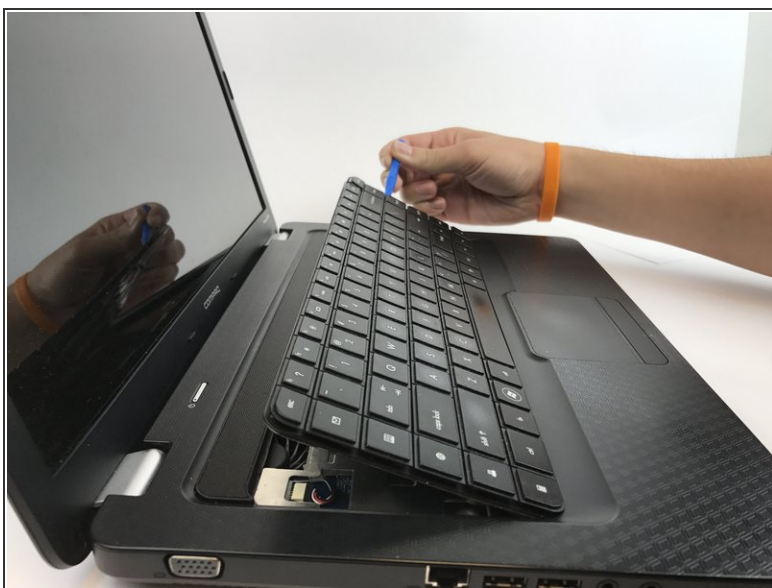

- Use a plastic opening tool to pry up the keyboard.

Step 9



- Once the keyboard is lifted, disconnect the band.

To reassemble your device, follow these instructions in reverse order.