



HP Compaq Presario V3000 RAM Replacement

This guide will show you how to access and remove the RAM chips from the laptop.

Written By: Bernard Lee




INTRODUCTION

This guide will show how to remove and replace RAM

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Magnetic Project Mat](#) (1)

Step 1 — RAM

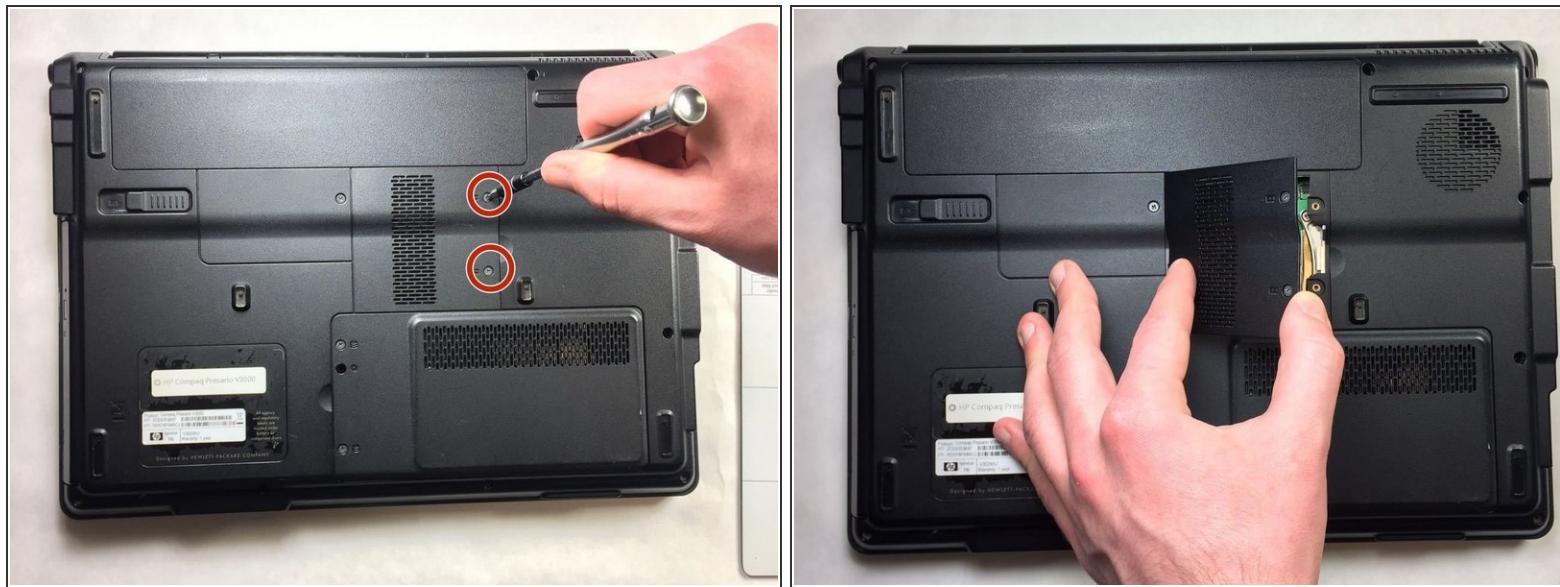

- Locate the two screws holding the RAM cover in place
- Use Phillips #0 screwdriver to remove the two 4.5mm Philips head screws
- *(i)* Place screws on magnetic mat to help avoid losing the screws
- Lift the RAM cover towards the battery eject latch

Step 2



- Lift foil covering RAM retention clips

⚠ Only pull the foil until the retention clips are visible. Do NOT continue pulling after.

(i) Retention clips should be on the sides of the RAM chip

Step 3



- Push retention clip on each side of RAM **OUTWARDS**
- RAM will pop up

Step 4




- Using tweezers, carefully pull the RAM chip away from the RAM slot

Step 5



- Push retention clip on each side of the second RAM chip OUTWARDS
- RAM chip will pop up

Step 6

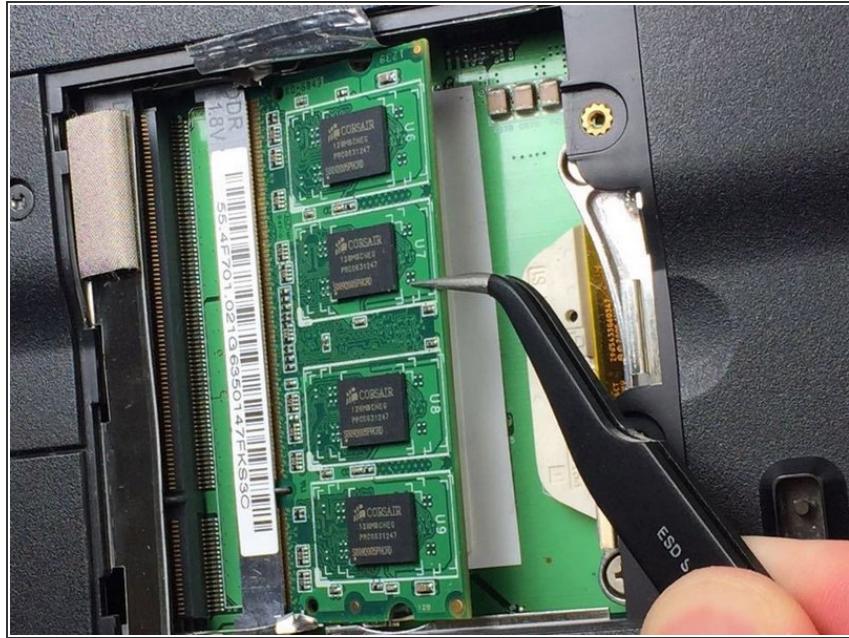

- Repeat Step 5 and use tweezers to carefully pull RAM away from RAM slot

To reassemble your device, follow these instructions in reverse order.