



HP Compaq Presario cq62-214nr Wireless Card Replacement

A guide to remove the Wireless Card of HP Compaq Presario.

Written By: Roth Marcelin



This document was generated on 2019-10-08 06:02:25 PM (MST).


INTRODUCTION

This guide we are going to remove the wireless card by removing the RAM cover and then pulling out the wireless card.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)


Step 1 — Battery

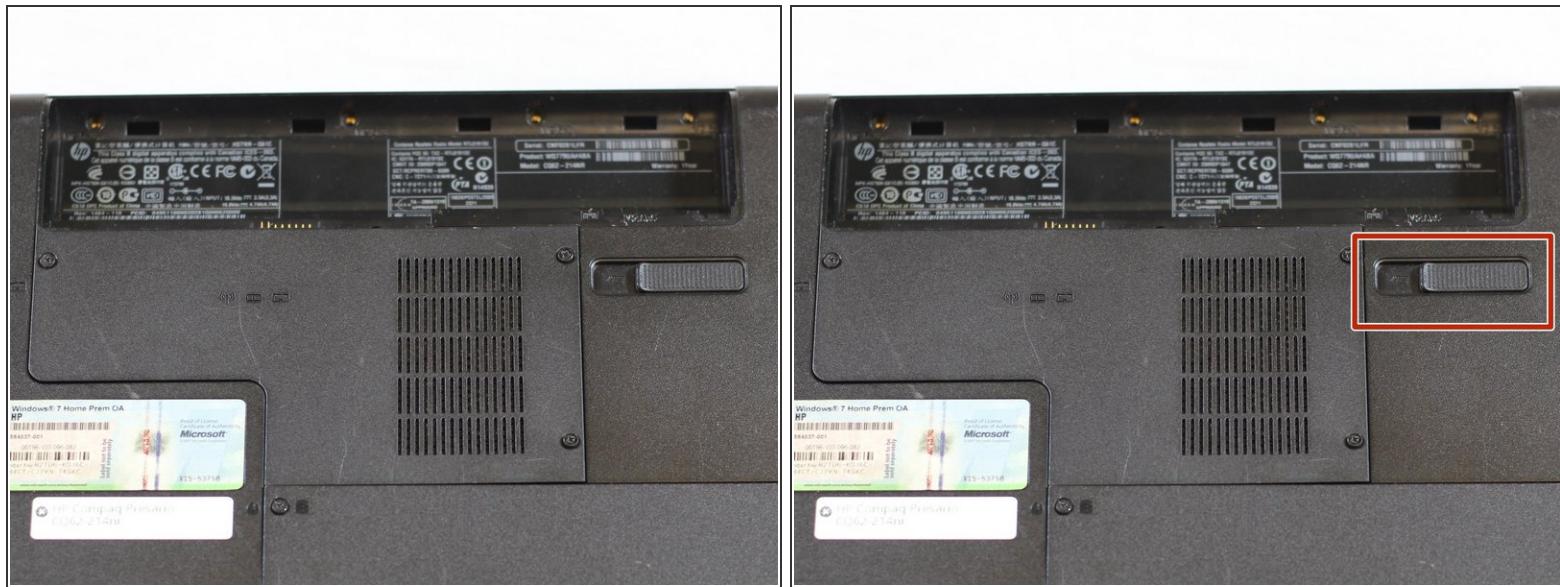

⚠ It is advised to work on this device only when it is OFF, to avoid electrocution risks. Please make sure your laptop is powered off.

- On the underside of the battery, there is a lock that keeps the battery in place. Using your finger, slide the battery lock to unlock the battery. When you have unlocked it, just lift the battery to remove it.
- **(i)** We do not have a battery on our device to show how to take it off.

Step 2 — Wireless Card

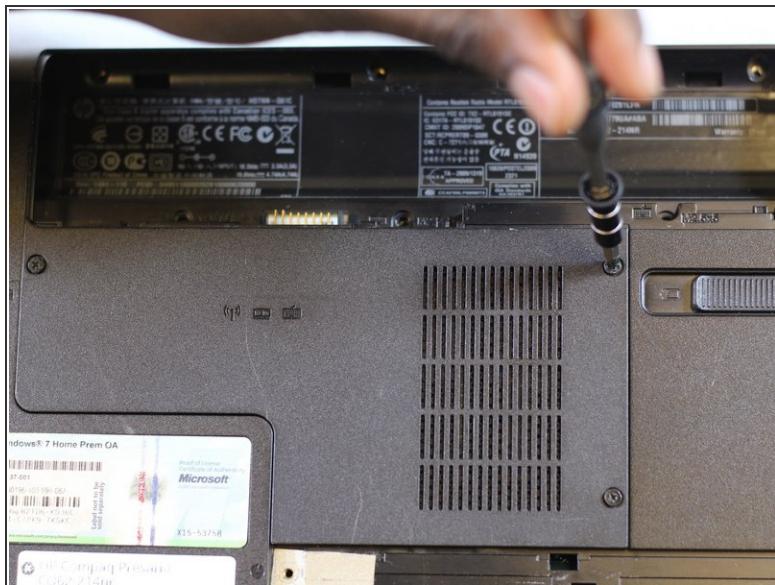


- Remove the three M2.5x5 mm Phillips screws securing the memory case.

Step 3



- Using a plastic opening tool, insert it alongside any openings on the case. Lift and slide the tool to remove the case.

Step 4

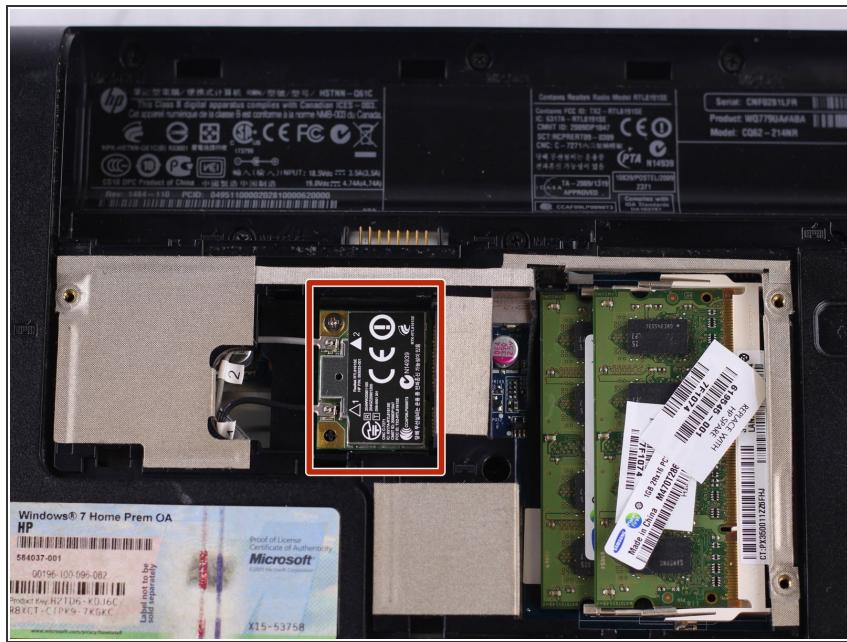

- Locate the the Wireless Card located next to the RAM chips.

Step 5



- Remove the single M2.5x3 mm Phillips screw.

Step 6



- Using your hands, gently remove the cables connected to the wireless card.

To reassemble your device, follow these instructions in reverse order.