



HP Compaq nc6400 Optical Drive Replacement

A step-by-step replacement guide for the optical drive of an HP Compaq nc6400 Laptop.

Written By: Chad Williams



INTRODUCTION


This guide will take you through the process of replacing the optical drive in a HP Compaq nc6400 Laptop. You will need the correct replacement optical drive for your laptop to complete the installation.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Battery

⚠ Turn off and unplug laptop.

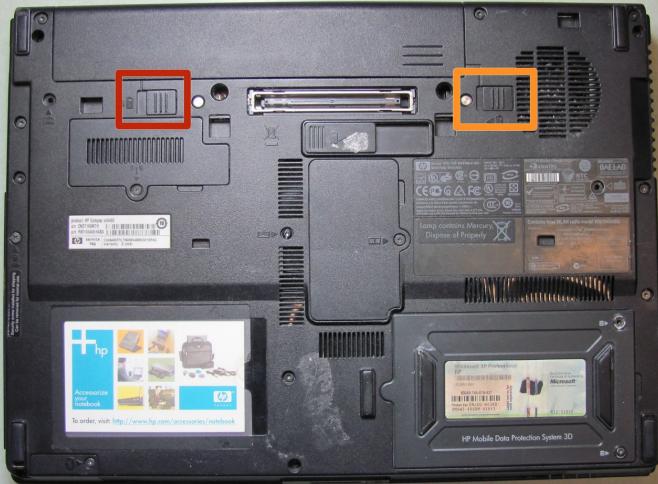

Step 2

- Locate the battery lock below the battery labeled one.
- Slide the lock all the way to the left to release the left lock of the battery.



Step 3



- Locate the lock labeled two at the bottom right corner below the battery.
- Slide and hold the lock to the left.

Step 4



- Once both the battery locks are unlocked, slide the battery out to remove.

Step 5 — Optical Drive




- Remove the 4 mm P0 Phillips-head screw indicated by the icon of a lock and disk.

Step 6



- Press and release the eject icon to partially eject the optical drive.
- Use of a spudger may be necessary to pry open the optical drive.

Step 7

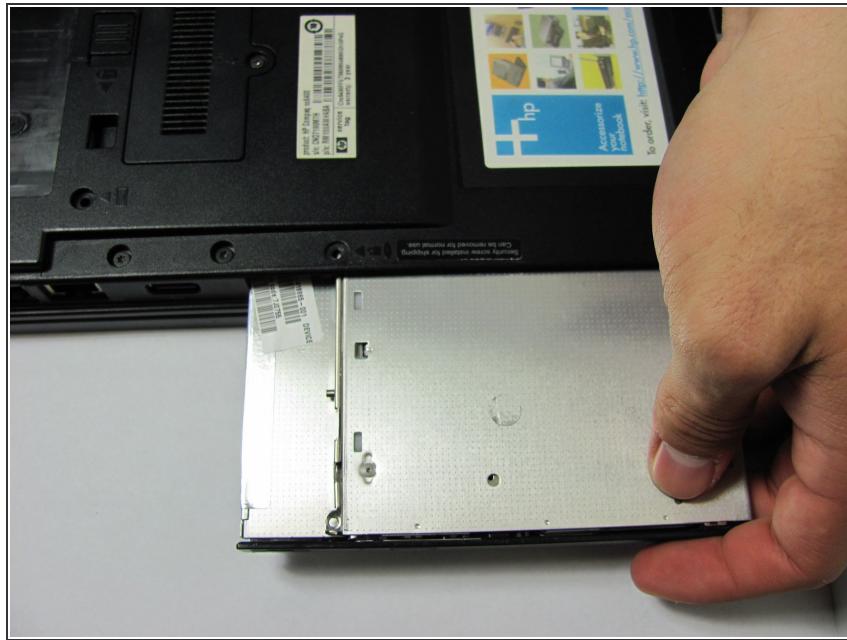

- Grasp the sides and pull the optical drive out.

To reassemble your device, follow these instructions in reverse order.