




HP Deskjet D1660 Rollers Replacement

Replace the rollers so that the paper will smoothly run through the printer.

Written By: Justin Taiki Fukada

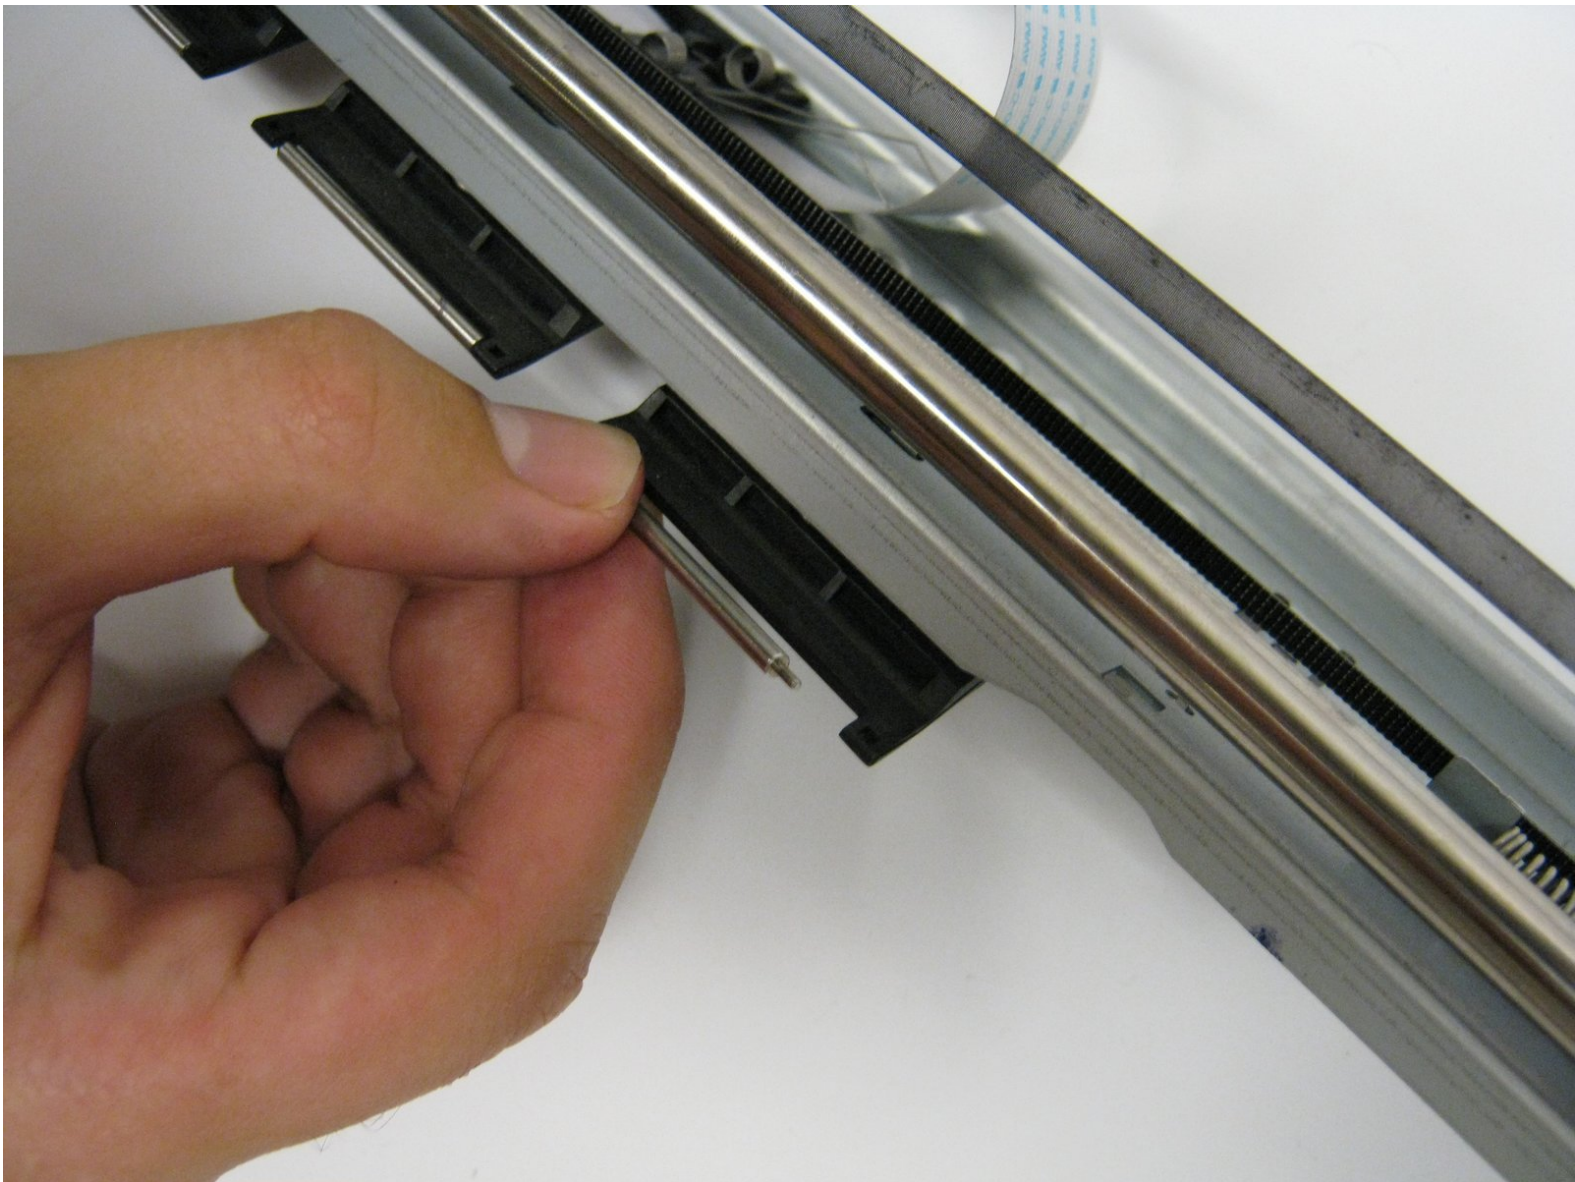

INTRODUCTION

This guide will replace the small rollers located under the ink carriage. Rollers enable the papers to run smoothly through the printer and cleanly print out material.

TOOLS:

- [T10 Torx Screwdriver](#) (1)
-

Step 1 — Top Cover




- Remove the back two 14.0 mm Torx #10 screws.

Step 2






- Lay the printer on its back.
- Grab the paper tray by its right side and pull it to the left and up.

Step 3

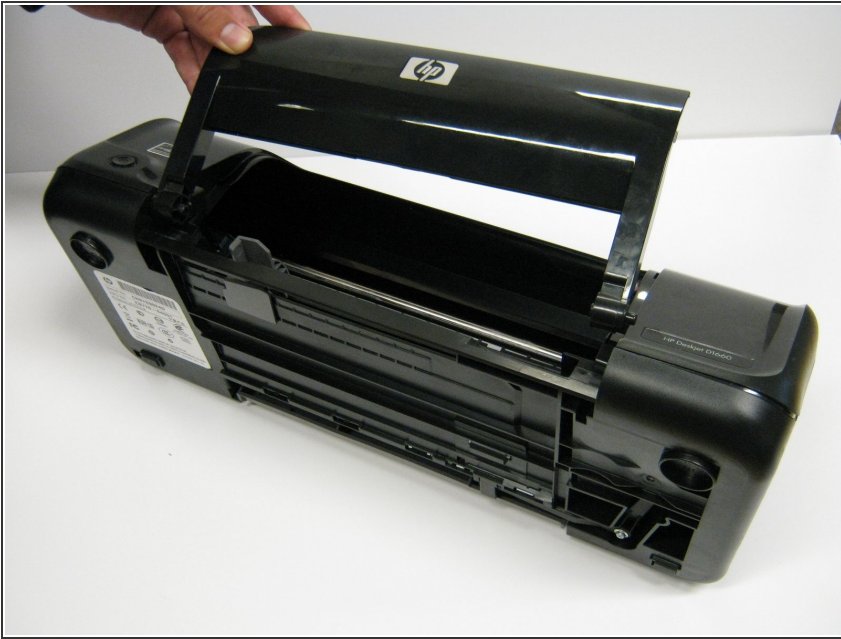



- Open the frontal access panel by lifting it from the top.
- Similar to the paper tray, grab it from the right side and pull it to the left and up.

Step 4

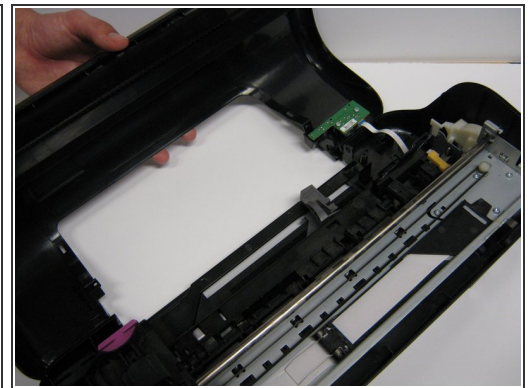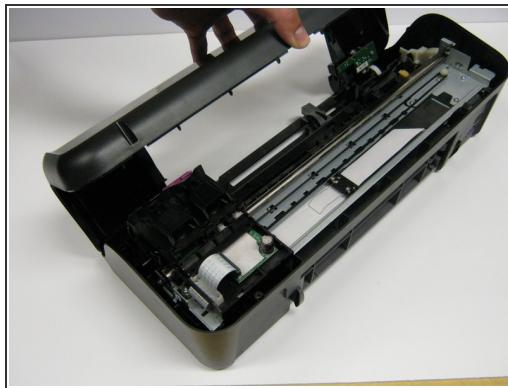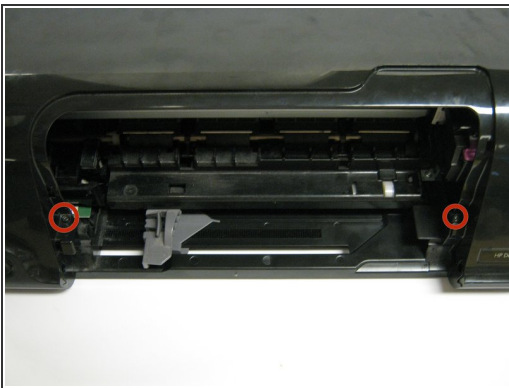



- Take out the two frontal 14.0 mm Torx #10 screws.
 - Carefully lift the frontal cover.
- ⚠ Don't lift it up aggressively. A strip will be attached to it.

Step 5 — Rollers

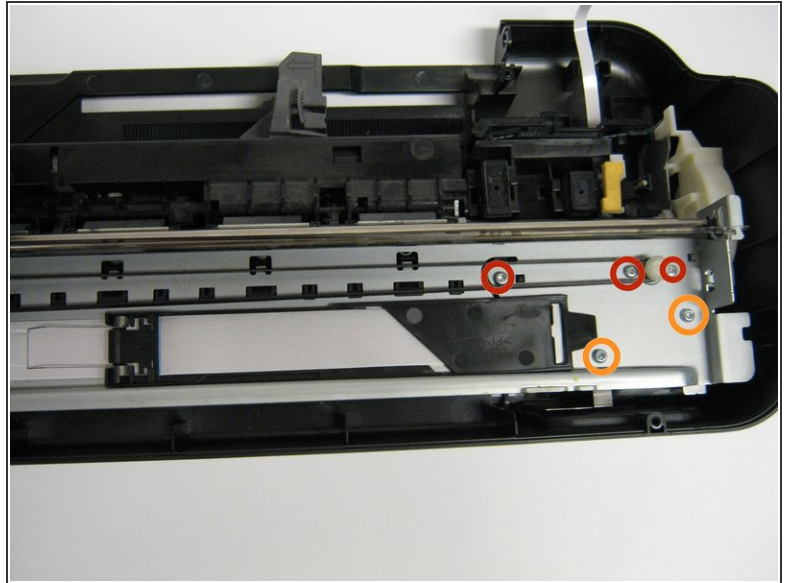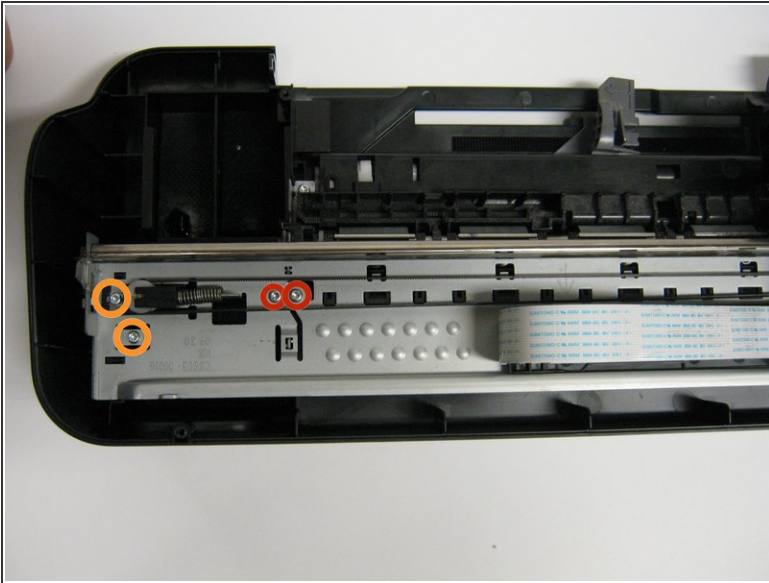



- Remove the five 13.0 mm Torx #10 screws found on top of the frame.
- Remove the four 9.0 mm Torx #10 smaller screws.

Step 6

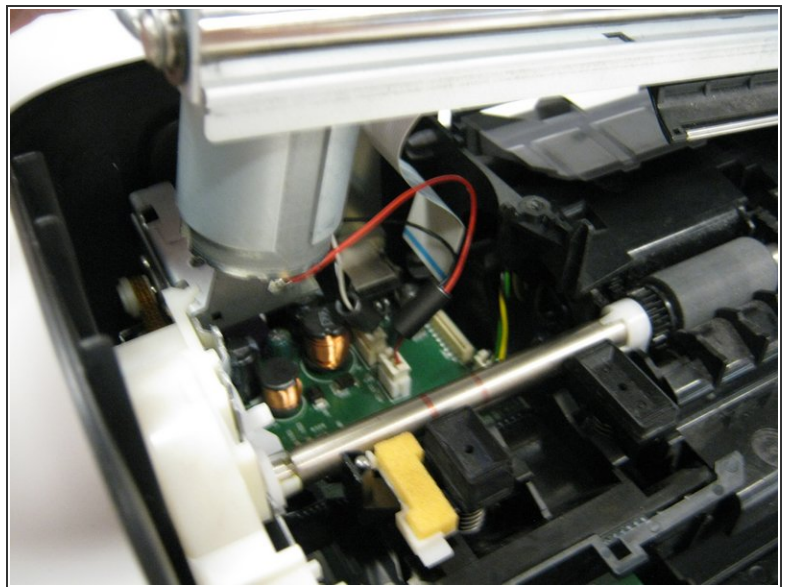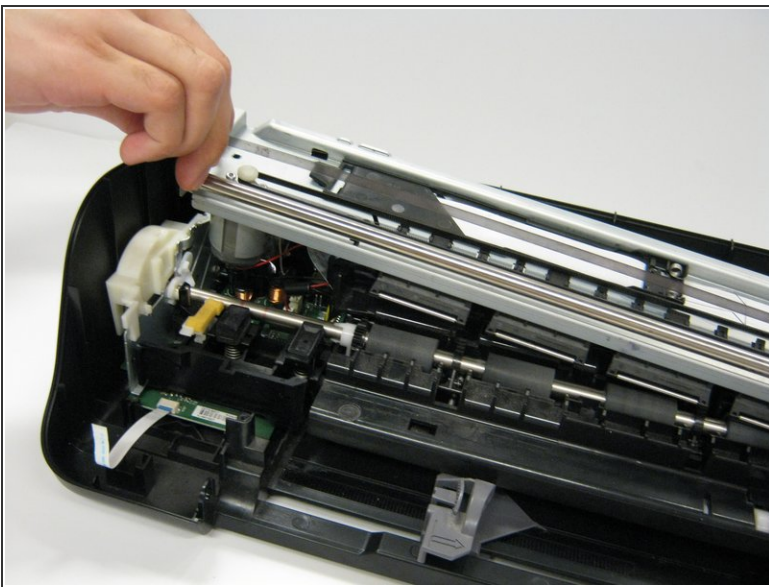

- Lift the cover up using both of your hands.
- ⚠ Lift it carefully as a strip and motor will be connected to the bottom part of the printer.

Step 7

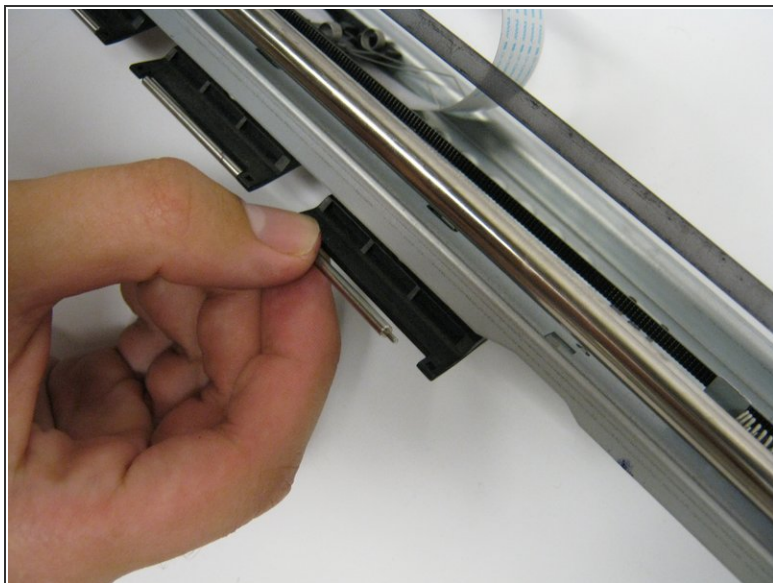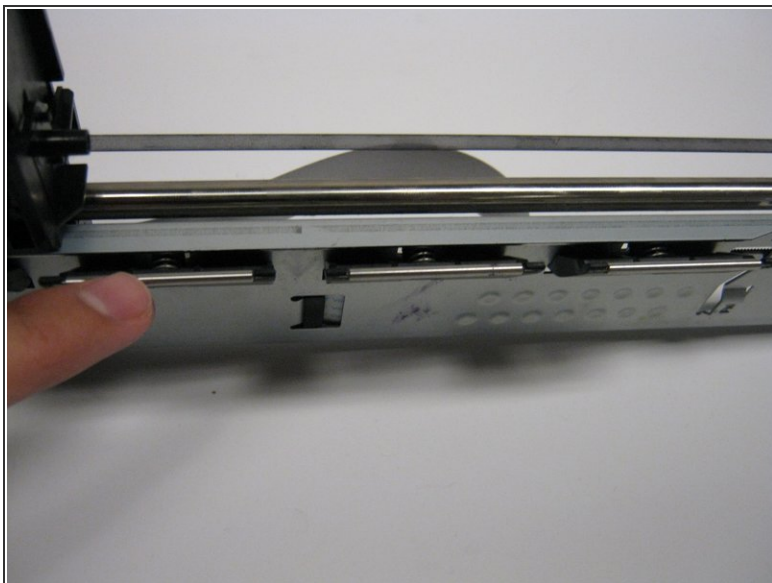

- Locate the rollers, which will be on the bottom of the metal frame that holds the carriage.
- Grab the rollers and remove them by pulling them to one side and lifting them up.
- Do the same for the other three.

To reassemble your device, follow these instructions in reverse order.