



HP EliteBook x360 1030 G3 Wireless Card Replacement

This guide shows how to replace the wireless card in your HP EliteBook x360 1030 G3.

Written By: Shea Charkowsky



This document was generated on 2019-09-25 09:59:32 PM (MST).

INTRODUCTION

This guide shows how to remove the wireless card from your laptop.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [T5 Torx Screwdriver](#) (1)

Step 1 — Bottom Cover



- Close the laptop and flip it so that the screen is on the surface of the table and the back plate is facing you.
- Remove the 3.3 mm screw near the top of the hinge using a T5 Torx screwdriver.
- Remove the remaining four 7.3 mm screws using the same screwdriver.


Step 2



- Separate the bottom cover from the laptop, starting from the upper corner and working your way around the edge.

i *The plastic fastening may make cracking sounds when separating, but this is normal.*

Step 3 — Wireless Card

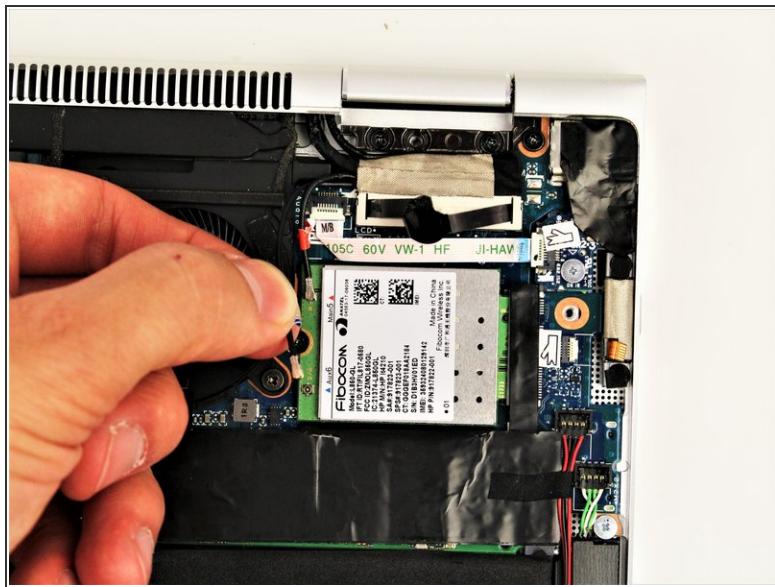


- Detach the small wires connected to the card by lifting the ends straight upward. The wires are held in place by friction and should pop right off.

(i) These wires should be handled carefully since they're the Wi-Fi and Bluetooth antennas.


(i) Take note of which wire goes where, as mixing these cables will cause both Wi-Fi and Bluetooth to stop working.

Step 4

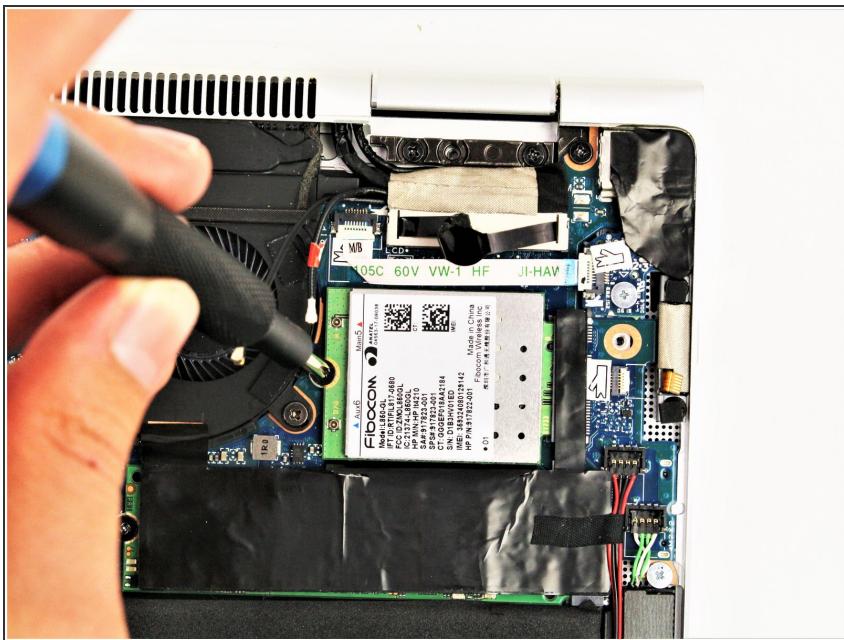

- Remove the 2.4 mm screw holding the card down using a Phillips #00 screwdriver.

Step 5

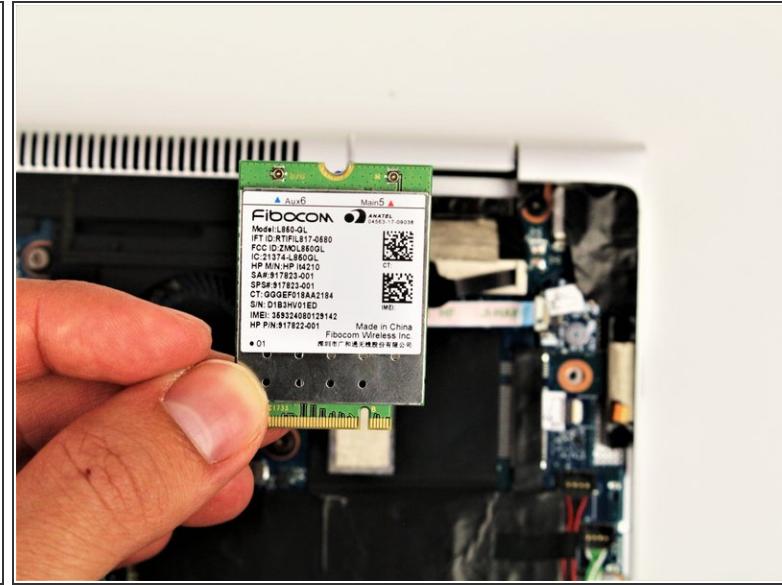

- Carefully pull out the card by sliding it to the left.

To reassemble your device, follow these instructions in reverse order.