




# HP ElitePad 1000 G2 Audio Jack Replacement

This guide will show the steps in replacing the audio jack.

Written By: Christopher Graveline

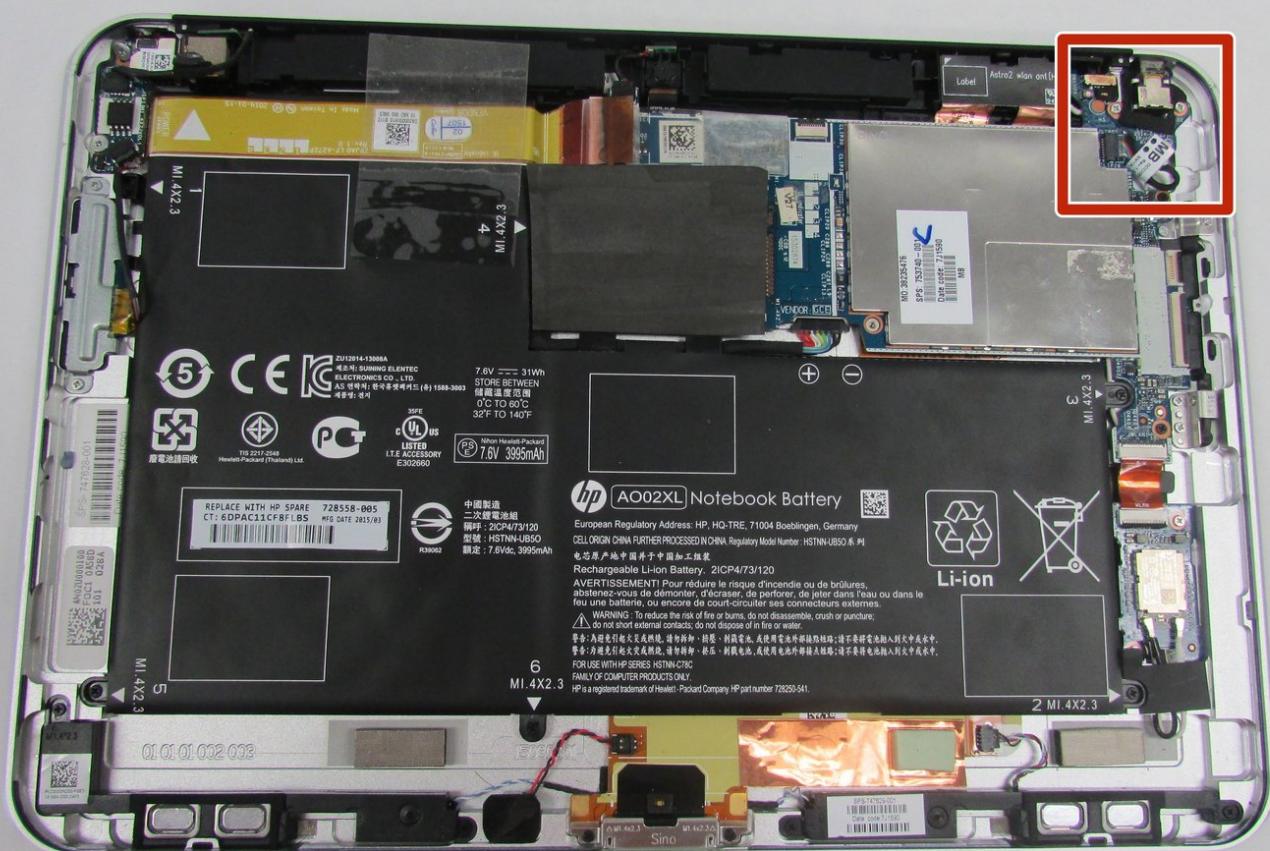

## INTRODUCTION

To make sure that replacement of the audio jack is necessary follow these [troubleshooting steps](#) before using this guide.

### TOOLS:

- [Suction Handle \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [iFixit Opening Picks set of 6 \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [Spudger \(1\)](#)

## Step 1 — Display



- **Before disassembling the tablet:** make sure the tablet is off, disconnect the power cord from the tablet, and disconnect all external devices from the tablet.
- Using a Phillips #00 screwdriver, remove the two Phillips PM 1.4×3.2mm screws located next to the charging port.


## Step 2



- Place the suction cup on the lower right corner of the tablet display glass, making sure to place the suction cup inside the edges of the border of the display glass.
- Insert a plastic pick in between the display and the tablet case. Then use a plastic removal tool to separate the display further.
- Pull on the suction cup while using the prying tool to separate the display from the tablet.


**⚠** Gently lift the display from the tablet in order to avoid damaging the cables.

## Step 3

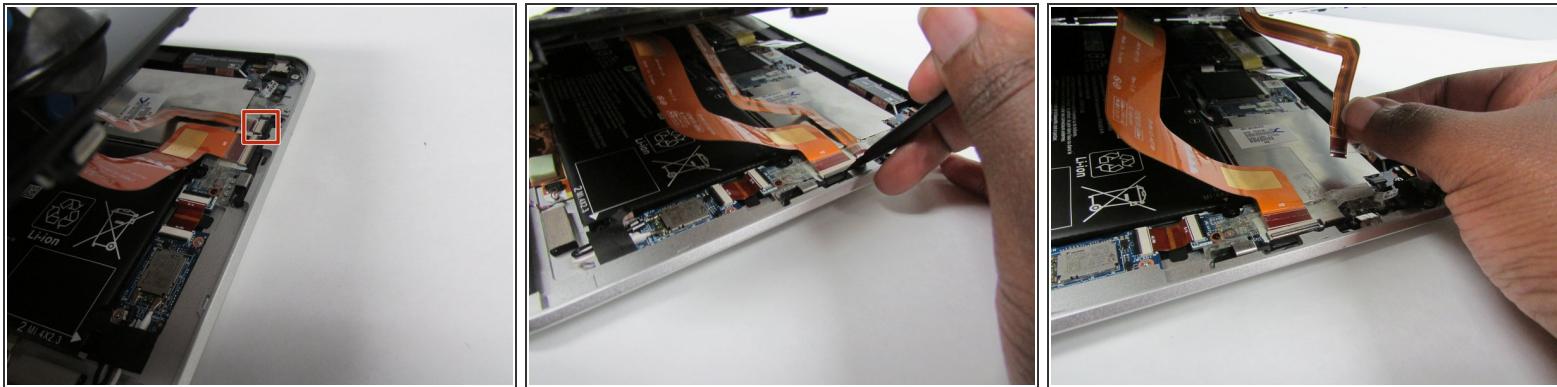



- ➊ To disconnect the cables, use the spudger tool to gently pull back on the black tab located on the side of the connector while gently pulling the cable.
- ➋ Release the zero insertion force (ZIF) connector to which the TouchScreen cable is attached, and then disconnect the TouchScreen cable from the system board.

## Step 4

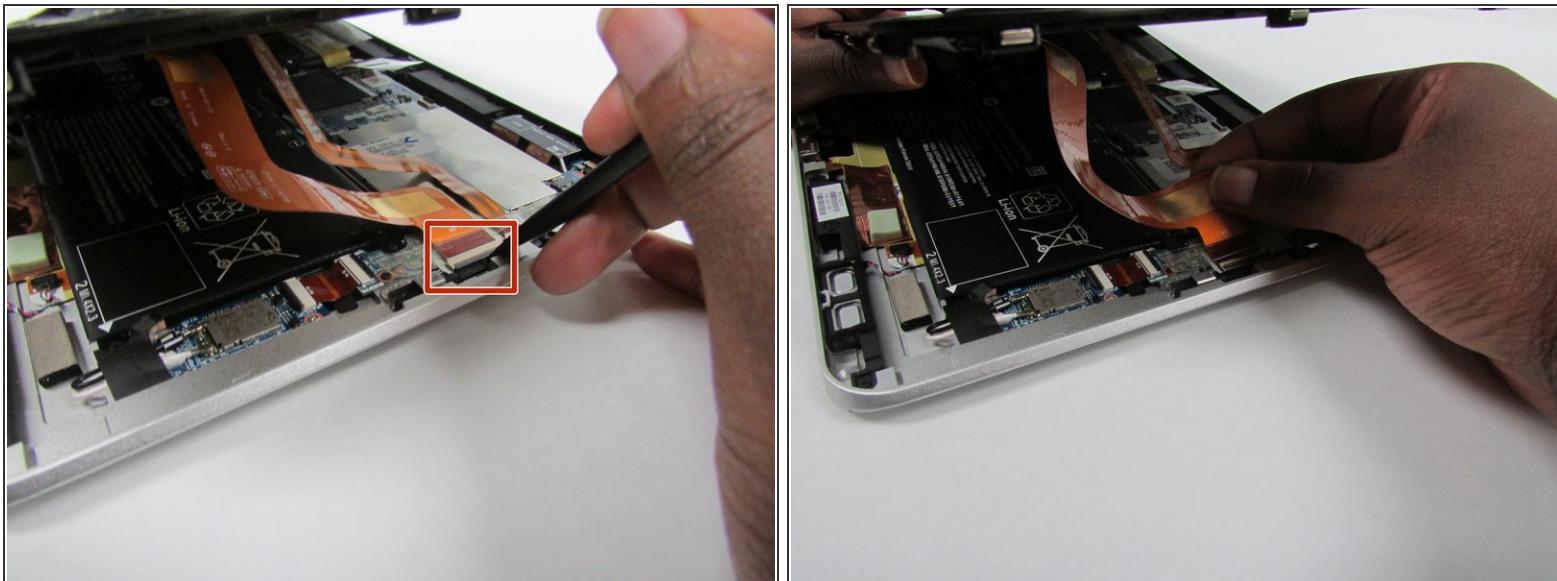

- ➌ Release the ZIF connector to which the display cable is attached, and then disconnect the display cable from the system board.

## Step 5

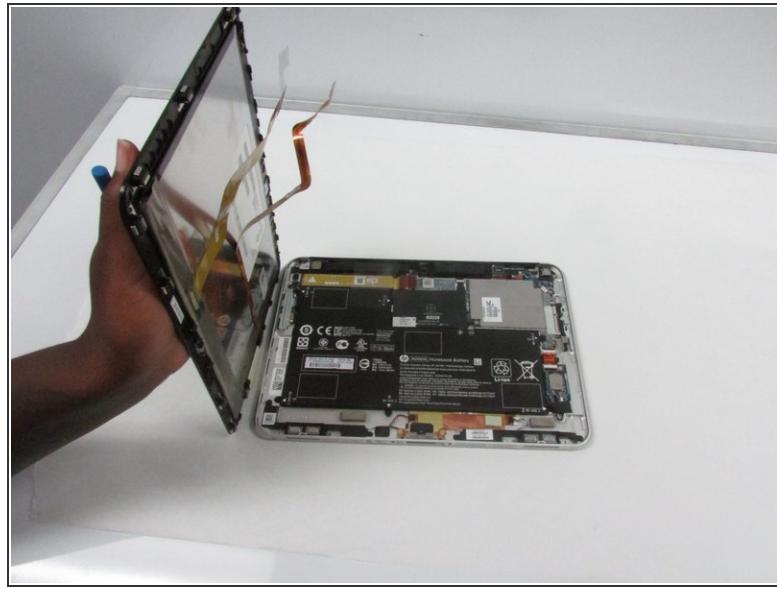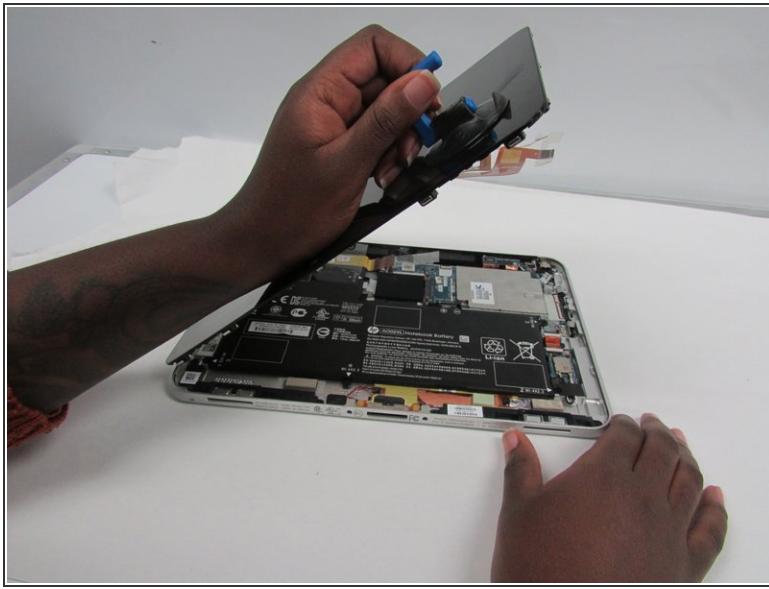


- Remove the display from the tablet.

## Step 6 — Audio Jack



- Locate the audio jack board.

## Step 7

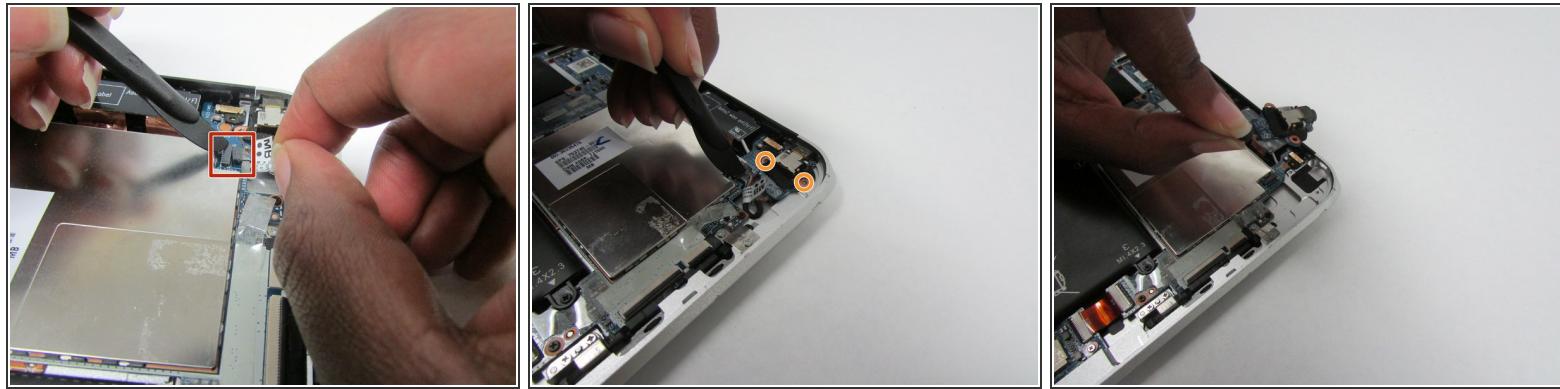

- Disconnect audio jack board cable from the motherboard.
- Remove the two Phillips PM 1.3x2.0mm screws that secure the audio jack board from the housing.
- Remove the audio jack board.

To reassemble your device, follow these instructions in reverse order.