



HP Elitebook 820 G2 Back Panel Replacement

This guide will accomplish taking off the back panel of the HP Elitebook 820 G2 and replacing the back panel.

Written By: KaitLyn Teubert



INTRODUCTION

In order to replace any other component of the device, the back panel must first be removed.

Step 1 — Back Panel



- Slide the lever firmly to the left on the back panel.
- ⓘ Once the back panel is unlocked, there should be red showing to the right of the lever.

Step 2



- Slide the back panel towards you.
- Lift the back panel to remove it.

To reassemble your device, follow these instructions in reverse order.